



Spare parts for:

Warewashing equipment



Suitable for:

HOBART



This catalogue is automatically generated.
Therefore, the sequence of the items might
not be always shown at best.

Updates will be issued in case of additions
and/or amendments.

Suitable universal spare parts may not be included





AIR CHAMBERS HOBART



Photo	LF Code	Dimensions (mm)	Notes	Suitable for
1	3060606	∅ 33 x 125	with o-ring, gasket and fitting	139321-550
2	3060125	80 x 17 x 65	with two o-rings, screw and fitting	324858
3	3060601	85 x 20 x 80	with two o-rings, screw and fitting	139321-47
4	5067986	85 x 22 x 77	with mounting kit	01-240372-1
5	5034976	154 x 97 x 40	---	E144027
6	5037214	230 x 150	with mounting kit	01-297695-1

DISHWASHER HEATING ELEMENTS ADJUSTABLE HOBART



Photo	LF Code	Watt	Volt	Immersed length (mm)	Flange/ fittings	Notes	Connections	Suitable for
1	3755138	130	230	130 x 85	---	self-sticking	wired	371450-37
2	3355619	600	230	155	50 x 27 mm	---	faston	139321-719
3	3355645	610	254	370	50 x 27 mm	---	faston	231982-9
4	3355647	1830	254	410	50 x 27 mm	---	faston	324646-1
5	5026499	1830	254	430	80 x 27 mm	---	screw	229189-22
6	3355604	2000	220	275	∅ 10 mm	---	screw	139321-203

DISHWASHER HEATING ELEMENTS ADJUSTABLE HOBART



Photo	LF Code	Watt	Volt	Immersed length (mm)	Flange/ fittings	Notes	Connections	Suitable for
1	3355601	2400	220	200	∅ 63 mm	with thermostat probe receptacle	screw	139321-246
2	3355644	2440	254	410	50 x 27 mm	---	faston	324646-2
3	3755128	2440	254	425	80 x 27 mm	---	faston	324644-2
4	3355646	2700	240	375	50 x 27 mm	---	faston	324187-2
5	3355607	2750/3250	220/240	370	∅ 10 mm	---	screw	E230086
6	3355620	2935	230	340	70 x 25 mm	---	faston	E230088
2	3355652	3000	230	410	50 x 27 mm	---	faston	324646-4



Photo	LF Code	Watt	Volt	Immersed length (mm)	Flange/fittings	Notes	Connections	Suitable for
2	3355643	3050	254	410	50 x 27 mm	---	faston	324646-3
3	3355651	3240	240	405	80 x 27 mm	---	faston	324644-1

DISHWASHER HEATING ELEMENTS ADJUSTABLE HOBART



Photo	LF Code	Watt	Volt	Immersed length (mm)	Flange/fittings	Notes	Connections	Suitable for
1	3755168	2200	220	415	62 x 62 mm	with thermostat probe receptacle	screw	324206-3
2	3455311	3000	240	320	80 x 27 mm	---	faston	775464-2
3	5047328	3000	230	335	∅ 63 mm	with thermostat probe receptacle	screw	E230116
1	3755169	4500	240	415	62 x 62 mm	with thermostat probe receptacle	screw	324206-4
4	3755129	4880	254	420	80 x 27 mm	---	faston	324637-2
5	3355602	5355	240/415	340	∅ 63 mm	with thermostat probe receptacle	screw	371450-12
6	3455312	6000	240	335	80 x 27 mm	---	faston	775464-1
4	5031719	6100	254	420	80 x 27 mm	---	faston	324637-3
4	3355649	6540	240	415	80 x 27 mm	---	faston	324637-1

DISHWASHER HEATING ELEMENTS ADJUSTABLE HOBART



Photo	LF Code	Watt	Volt	Immersed length (mm)	Flange/fittings	Notes	Connections	Suitable for
1	3755140	6000	220	225	∅ 60 mm	---	faston	170495-2
2	3855039	6000	240	325	∅ 63 mm	with thermostat probe receptacle	faston	01-240761-1
2	5045907	7260	250	380	∅ 63 mm	with thermostat probe receptacle	faston	01-240135-2
1	3755167	7500	220	230	∅ 60 mm	---	faston	173649-1
3	3355626	7600	230	385	80 x 27 mm	---	faston	139321-463
4	3355621	8000	230/400	365	∅ 63 mm	with thermostat probe receptacle	screw	E230020C
1	3755130	9000	230	225	∅ 60 mm	---	faston	226807-2
5	3455240	9000	230/400	515	∅ 72 mm	---	screw	229148-1
5	3455406	9000	240/415	525	∅ 72 mm	---	screw	229148-2



GASKETS FOR DISHWASHERS HOBART

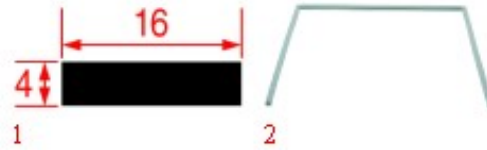


Photo	LF Code	Dimensions	Suitable for	Profile
1	5030387	560 mm	886253-1	
2	5058542	490x560 mm	01-240077-001	14x16 mm

HINGES DISHWASHER HOBART



Photo	LF Code	Description	Notes	Suitable for
1	3053479	right-hand hinge	---	775279-1
2	3053480	left-hand hinge	---	772579-2
---	3528049	large pan head screw	---	603645
---	3528050	recessed countersunk head screw	---	603182
3	3250223	door spring	---	897928
4	3053481	bush	---	775248-1
---	3053482	spring washer	---	00-602295
---	3053483	flat washer	---	228694-1
5	3053216	hinge gasket	---	228693-1

HINGES DISHWASHER HOBART



Photo	LF Code	Description	Notes	Suitable for
1	3053218	right-hand hinge	---	00-324002-001
2	3053217	left-hand hinge	---	00-324002-002
---	3528050	countersunk flat head screw	---	603182
3	3053214	door spring	---	227855
---	3053483	flat washer	---	228694-1
4	3053216	hinge gasket	---	228693-1



OVERFLOW PIPES DISHWASHER HOBART



1

Photo	LF Code	Description	Dimensions (mm)	Material	Suitable for
1	3448224	overflow pipe	ø 32x250	plastic	323999-1

SWITCHES AND PUSH-BUTTONS HOBART



1



2



3



4

Photo	LF Code	Type	Code suitable for	For machine model
1	6226111	case for push button ø 21 mm	E226111	ECOMAX400-ECOMAX500
1	3319757	case for push button ø 23 mm	900055	ECOMAX400-ECOMAX500
2	5030639	black/green signal	E409003	ECOMAX400-ECOMAX500
3	7108608	push button "white" ø 21 mm	---	ECOMAX400-ECOMAX500
3	5030640	push button "grey" ø 21 mm	E227061	ECOMAX400-ECOMAX500
3	6227060	push button "grey" ø 21 mm	E227060	ECOMAX400-ECOMAX500
3	3319244	push button "grey" ø 21 mm	---	ECOMAX400-ECOMAX500
4	3319618	switch 16A 250V	139321-449	ECOMAX400-ECOMAX500
4	5020280	switch	E80804	ECOMAX400-ECOMAX500
4	3319617	push button 16A 250V	139321-455	ECOMAX400-ECOMAX500

SWITCHES AND PUSH-BUTTONS HOBART



1



2



3



4



5

Photo	LF Code	Type	Code suitable for	For machine model
1	3319265	push button "INFINITY" 6A 250V	00-897900-000	FE-FX10-FX15-FX20-FX25-FX30-FX40-FX60-GF60
2	3319269	push button "TIMER" 6A 250V	00-897901-000	FE-FX10-FX15-FX20-FX25-FX30-FX40-FX60-GF60
3	3319058	push button "WATER" 6A 250V	00-897904-000	FE-FX10-FX15-FX20-FX25-FX30-FX40-FX60-GF60
4	3319428	push button "TIMER" 6A 250V	00-897902-000	FE-FX10-FX15-FX20-FX25-FX30-FX40-FX60-GF60
5	3319259	silk screen "ON-OFF"	00-324265-010	FE-FX10-FX15-FX20-FX25-FX30-FX40-FX60-GF60
5	3319264	silk screen "WATER"	00-324265-012	FE-FX10-FX15-FX20-FX25-FX30-FX40-FX60-GF60
5	3319260	silk screen "INFINITY"	00-324265-011	FE-FX10-FX15-FX20-FX25-FX30-FX40-FX60-GF60
5	3319263	silk screen "TIMER"	00-324265-001	FE-FX10-FX15-FX20-FX25-FX30-FX40-FX60-GF60



Suitable for:

HOBART



Suitable for:

Air traps

- 5039691 AIR GAP KIT**
 overall dimensions 625x142 mm
 for Dishwasher (HOBART) UX30 - UX30B - UX30E
 UX30EB - UX30EH - UX30H



HOBART 00-886641-000

HOBART 886641

Boilers

- 5069958 BOILER INOX ø 130x422 mm**
 for Dishwasher hood type (HOBART) ECOMAX602-10
 ECOMAX602-11 - ECOMAX612-11
 for Glasswasher/Cupwasher (HOBART) ECOMAX502



HOBART 01-240791-001

HOBART 01-240791-1

Bushings

- 3743765 BUSHING FOR TOP ARM ASSEMBLY**
 for Dishwasher hood type (HOBART) AM-12EC
 AM-12EF



HOBART 00-228643-000

HOBART 228643

- 5029130 BUSHING 24 mm FOR WASH OUTLET**
 for Dishwasher pull-through (HOBART) - Series CR
 Series UCA



HOBART 00-493413-001

HOBART 493413-1

Caps

- 5069961 CAP ø 61 mm**
 for Dishwasher pull-through (HOBART) - Series CN
 Series CP - Series CS



HOBART 01-245084-002

HOBART 01-245084-2

- 5029128 CAP FOR WASH ARM**
 for Dishwasher pull-through (HOBART) - Series CR
 Series UCA



HOBART 00-325112-004

HOBART 325112-4



Castors, rollers and accessories

3346135 HOOD BUMPER
for Dishwasher (HOBART) ECOMAX 683
OREANE LB PRO 1 - OREANE LC PRO 500



HOBART E80105

5029976 ROLL TAPE SLIDE \varnothing 25/20x24.5 mm
for Dishwasher conveyor type (HOBART) - Series FTX



HOBART 00-229319-000

HOBART 229319

Contactors

6775599 CONTACTOR LS GMC-9M/4
9A 4Kw in 400V - coil 230V 50/60Hz
4 contacts NO
for NIAGARA 251/261



HOBART 695521-62

HOBART 775599-001

HOBART 775599-1

Curtains

3456009 DISHWASHER CURTAIN 655x400 mm



HOBART 1244722

HOBART 1244723

Door catches

3398601 DOOR CATCH
for Glasswasher/Cupwasher (HOBART) GW601



HOBART 00-139321-024

HOBART 139321-24

3398605 DOOR CATCH



HOBART 139321-817

3398606 STAINLESS STEEL DOOR RETAINER



HOBART 139321-821



Suitable for:

6325066 STUD FOR GLASSWASHER DOOR LOCK



HOBART

Suitable for:



3242677 DOOR LOCK
for Dishwasher (HOBART) FE600 - FX - GX



HOBART 00-324221-000
HOBART 324221-1

HOBART 00-324221-00001

HOBART 324221

3242618 LOCK NUT
for Dishwasher (HOBART) - Series FX - Series GX



HOBART 00-602481-000

HOBART 602481

Drain assembly

5024010 OUTLET WELL



HOBART 00-323802-001

HOBART 323802-1

3316603 PLASTIC DRAIN ASSEMBLY 3/4"
inner hole \varnothing 22 mm
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E429036

3316604 DRAIN ELBOW
outlet external \varnothing 25 mm



3316605 DRAIN ELBOW
outlet external \varnothing 25 mm



3186616 GASKET FLAT ASBESTOS FREE \varnothing 35x27x1.5mm
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E437025



Suitable for:

1186655 O-RING 04131 EPDM
for Dishwasher (HOBART) ECOMAX 683
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E456016

HOBART 139321-192

HOBART



Suitable for:

Drain plugs

5036631 OVERFLOW PIPE 370 mm
connection \varnothing 50 mm with or of viton



HOBART 230346-1

HOBART 230346-1V

5044571 OVERFLOW PIPE 413 mm
connection \varnothing 50 mm with or of viton
for Dishwasher hood type (HOBART) AM-12E - AM-12EC
AM-12EF



HOBART 229426-3

HOBART 229426-3V


Drain pumps

3122327 DRAIN ELECTRIC PUMP 40W 240V 50Hz
inlet external \varnothing 24 mm - output external \varnothing 23 mm
for Dishwasher (HOBART) ECOMAX501A



HOBART E130105

3122411 HOUSING FOR PUMP
inlet external \varnothing 23 mm - outlet external \varnothing 23 mm

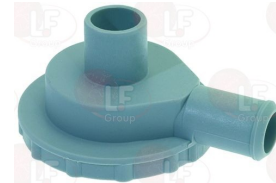


3122906 DRAIN ELECTRO-PUMP ASKOLL40W 240V 50Hz
CAP, BRACKET AND SCREWS KIT
inlet external \varnothing 30 mm - outlet external \varnothing 23 mm
for Dishwasher (HOBART) ECOMAX 683



HOBART E80117

3122402 DRAIN ELECTRO-PUMP HANNING KD-22B3-001
80W 230V 50Hz
inlet external \varnothing 24 mm - outlet external \varnothing 24 mm
for Dishwasher (HOBART) AM-600 - AM-600C - AMX900
AM900 - FE11 - FE26 - FE600 - FM30 - FM30-U
GCS32 - GC11 - HE33
for Dishwasher hood type (HOBART) AMXX1300
AUXX1300
for Glasswasher/Cupwasher (HOBART) GC32 GC31
for Pan/utensilwashing machines (HOBART) UW105

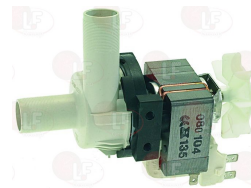

HOBART 01-297682-1

HOBART 165653-1

HOBART 883993-1




Suitable for:

HOBART



Suitable for:


3122828 DRAIN PUMP GRE 100W 220V 50Hz
without pump housing

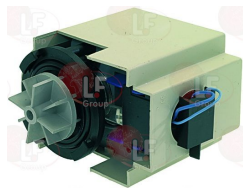

HOBART 327450-1

Electronic printed-circuit boards

3390034 CIRCUIT BOARD
without EPROM
dimensione 135x100 mm
for Dishwasher (HOBART) ECOMAX 683 - ECOMAX661
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F

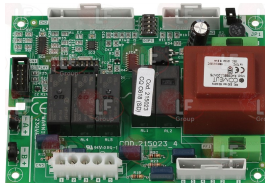

HOBART E215023

HOBART 139321-451

6041523 CABLE FLAT 10-POLE 1200 m m
for Pan/utensilwashing machines (HOBART)
ECOMAX701F



HOBART E041523

3390194 CABLE FLAT 10-POLE 3100 m m
for Dishwasher (HOBART) ECOMAX701L



HOBART 139321

HOBART 139451

HOBART 80933


5028103 CONNECTOR 5-POLE
for Dishwasher (HOBART) ECOMAX 683



3390088 MICROPROCESSOR GET.5 NIAGARA-RIVER



3390035 MICROPROCESSOR GET.5 EB

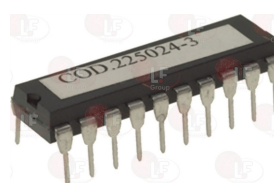

HOBART 139321-731

5039672 MICROPROCESSOR GET5300



5009306 MICROPROCESSOR U61E





Suitable for:

3390036 SET OF 2 TEMPERATURE PROBES GET-5
bulb \varnothing 5x30 mm
length 350 mm
for tank and boiler
for Dishwasher (HOBART) ECOMAX 683
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E231014

HOBART 139321

HOBART 139321-591

HOBART 139591

3319250 10-WAYS FLAT CABLE 2300 mm



HOBART




Suitable for:

5037825 SPIKE FOR CONNECTOR (GET5)



3390210 CONTROL BOARD
dimensions 97x120 mm
for Dishwasher (HOBART) ECOMAX 683
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F

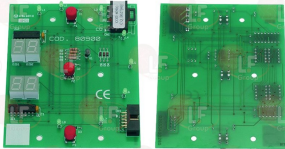

HOBART E080900

6080934 CABLE FLAT 10-POLE LENGTH 730 mm
for NIAGARA 281
for Dishwasher (HOBART) ECOMAX 683



5054819 ELECTROMECHANICAL BOARD MWASH
dimensions 133x82 mm
for Dishwasher (HOBART) ECOMAX500A - ECOMAX501
ECOMAX501A



HOBART E215029

HOBART 215029

5029875 ELECTRONIC BOARD
size 225x100 mm
for DISHWASHER FTX/SB
for Dishwasher pull-through (HOBART) FTX
for Dishwasher (HOBART) GCS32 CNAS-S



HOBART 00-897502-001

HOBART 897502-1




Suitable for:

HOBART



7151269 EPROM REV.7.06 series 2
for Dishwasher (HOBART) - Series FX - Series GX
for Dishwasher (HOBART) FXD400 - FX800
for Glasswasher/Cupwasher (HOBART) FX - GX

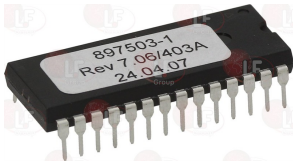


HOBART 00-897503-001
HOBART 897503-08

HOBART 00-897503-008

HOBART 897503-01


Suitable for:
5037202 EPROM VERSION 10.04/5D51

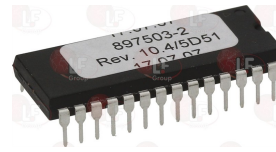

HOBART 00-897503-002


HOBART 897503-2

3390195 HOOD MICROPROCESSOR RIVER NM
for Dishwasher (HOBART) ECOMAX 683 ECOMAX 683

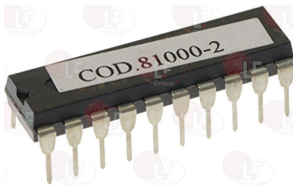


HOBART 139321-688

3390191 SUPPLEMENTARY CIRCUIT BOARD
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F

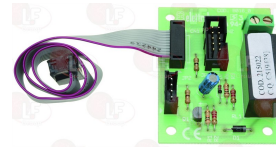

HOBART E215022

3446202 TIMER BOARD
with connection diagram
for Dishwasher (HOBART) - Series FX - Series GX
for Dishwasher hood type (HOBART) - Series HX

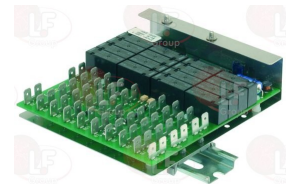

HOBART 00-785422-001

HOBART 374391-1

HOBART 785422-1

Filters

3160476 COMPLETE TANK FILTER
for Dishwasher hood type (HOBART) AMX - AUX



HOBART 00-323534-001

HOBART 323534

HOBART 323534-1

3160508 PRE-FILTER SIEVE
for Dishwasher hood type (HOBART) AMX - AUX



HOBART 00-324768-000

HOBART 324768

5064508 FILTER ø 136 mm
for Glasswasher/Cupwasher (HOBART) ECOMAX502



HOBART 01-240630-001
HOBART 01-240630-2

HOBART 01-240630-002

HOBART 01-240630-1

5031947 FILTER DRAIN ø 163 mm
height 115 mm



HOBART 00-323893-001

HOBART 323893-1




HOBART



Suitable for:

7112583 FILTER FOR WASH PUMP 85x165 mm
for Dishwasher conveyor type (HOBART) FTN - FUX

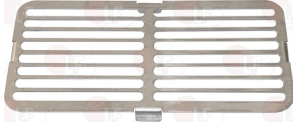

HOBART 01-245377-004

Suitable for:

7109864 FILTER PLASTIC ø 137 mm
for Dishwasher (HOBART) ECOMAX 502S-10



HOBART 01-240630-003


HOBART 01-240630-3

3391071 FILTER SUPPORT



HOBART 983766

3160605 INTERNAL FILTER ø 136x75 mm - GREY

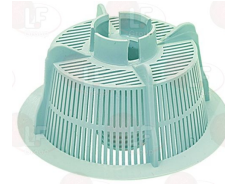

HOBART 139321-51

3160622 PLASTIC WASH PUMP FILTER ø 112 mm



HOBART 139321-744

3160614 RETAINING ASSEMBLY FOR DRAIN
for Dishwasher (HOBART) ECOMAX 683
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E080470

5035446 PUMP FILTER CLOSED



3160509 TANK FILTER
for Dishwasher hood type (HOBART) AMXX - AMXXT



HOBART 00-323534-003

HOBART 323534-3


3160414 TANK FILTER ASSEMBLY
for Dishwasher (HOBART) - Series FX - Series GX



HOBART 00-324179-000

HOBART 324179

3786563 GASKET FILTER ø 100x79x4 mm
for Dishwasher (HOBART) FX - GX

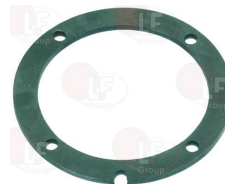

HOBART 00-324056-000

HOBART 324056



Suitable for:

HOBART



Suitable for:

3160510 TOP FILTER WITH PIPE
 for Dishwasher (HOBART) SEFCRA100 - UX30 - UX60
 for Dishwasher pull-through (HOBART) - Series CR
 for Dishwasher (HOBART) SEFCRA100



HOBART 00-323534-002
HOBART 774457-01

HOBART 323534-2
HOBART 774457-1

HOBART 774412-2

Fittings

3090609 FITTING FOR RINSE AID INLET
 for boiler
 for Dishwasher (HOBART) ECOMAX 683
 for Pan/utensilwashing machines (HOBART)
 ECOMAX701B



HOBART E468117

3186613 GASKET FLAT FIBRE \varnothing 12x8x1.5 mm
 for Pan/utensilwashing machines (HOBART)
 ECOMAX701B



HOBART E437021

Floats


3188006 FLOAT
 for Dishwasher pull-through (HOBART) - Series FTX



HOBART 00-122674

HOBART 122674

5046945 KIT MICROSWITCH FLOATING
 for Dishwasher (HOBART) - Series CSA - Series FTX

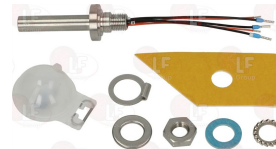

HOBART ML-102826

HOBART ML102826

5029871 SWITCH FLOATER MÜLLER
 0.3-10 Bar - thread 3/4" hose-end fitting \varnothing 14 mm
 type 21.010.115
 inlet dark-blue reducer 3,5 L/min
 for Dishwasher pull-through (HOBART) - Series CSA



HOBART 00-897665-002

HOBART 897665-2


5050749 FLOAT \varnothing 55x60 mm





Gaskets and seals

5022939 BOILER GASKET
external \varnothing 257 mm - internal \varnothing 209 mm

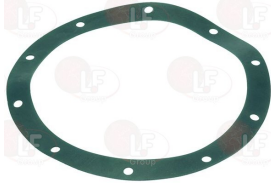

HOBART B-230994

HOBART 00-230994-000

HOBART 230994

5061620 GASKET FLAT PTFE \varnothing 24x13x1 mm
for Dishwasher hood type (HOBART) AMX - AMXX - AUP
AUXX - ECOMAX602-10 - ECOMAX602-11
ECOMAX612-10
for Glasswasher/Cupwasher (HOBART) ECOMAX502



HOBART 00-774072-007

HOBART 774072-7

5032589 GASKET WASH ARM
for Dishwasher conveyor type (HOBART) - Series FTN



HOBART 00-885500-001

HOBART 885500-1

3786705 TOP ARM FLANGE GASKET



HOBART 966090

Guides

7109190 GUIDE DOOR 810x30 mm
for Dishwasher (HOBART) CNR EW



HOBART 00-325064-004

HOBART 325064-4

5035364 GUIDE SLIDING 120 mm



HOBART 00-324322-000

HOBART 324322

5053196 GUIDE 869 mm



HOBART 00-302207-004

HOBART 302207-4

Heating elements

5021682 CAP FOR HEATING ELEMENT
flange 81x27 mm
for Pan/utensilwashing machines (HOBART) UXT
UXTL



HOBART 00-774808-001

HOBART 774808-1

5031628 HEATING ELEMENT ADHESIVE 390W 240V
size 370x95 mm
cable length 800 mm
for Dishwasher (HOBART) - Series FX - GX



HOBART 00-775575-001

HOBART 775575-1



Suitable for:

HOBART



5024593 HEATING ELEMENT 2440W 254V
immersed depth 420 mm
flange 81x28 mm



HOBART 00-229189-023

HOBART 229189-23

Suitable for:

5047245 HEATING ELEMENT 7320W 254V
flange ø 74 mm
immersed length 335 mm
for Pan/utensilwashing machines (HOBART) UX60



HOBART 00-323949-001

HOBART 323949-1

Hinges, catches and accessories

7112556 HINGE PIN
thread 5 mm
for Dishwasher (HOBART) ECOMAX 502S-10



HOBART 01-240151-1

Hose-end fittings

3315031 ELBOW FITTING INLET/OUTLET BOILER
thread 1/4" - tapered connection ø 12 mm



HOBART 139321-379

3315014 RINSE HOSE-END FITTING
ø insert 12 mm
for all new models
for Dishwasher (HOBART) ECOMAX 683
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E143173

Hydraulic piping

3450622 PRESSURE SWITCH PIPE ø 5x11 mm - 5 m
temperature -30°+110°C
operating pressure 10 bar
burst pressure 40 bar
non-toxic rubber hose
external ø 11 mm
internal ø 5 mm
5-m bundles
for 50-m bundles see 3450652
for Dishwasher (HOBART) ECOMAX 683
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E143005

3449298 PVC HOSE CLEAR ø 4x6 mm
sold per meter



HOBART 00-898252-001

HOBART 775601

HOBART 898252-1



HOBART



Suitable for:

Suitable for:

3090759 PVC PIPE \varnothing 4/6 mm - 10 m
alimentary

3090259 PVC PIPE \varnothing 4/6 mm - 100 m
alimentary



HOBART 01-515410-001
HOBART 775590-10MT

HOBART 775590

HOBART 775590-1

HOBART 775590

HOBART 775590-1

3450114 PVC PIPE \varnothing 4/7 mm - 10 mt
alimentary

3450115 PVC PIPE \varnothing 6/9 mm - 10 mt
alimentary



HOBART 324402

HOBART 324402-3

HOBART 324402-4

HOBART 00-165168-001

HOBART 00-165168-007

HOBART 165168-10

3450215 PVC PIPE \varnothing 6/9 mm - 100 m
alimentary

3450209 RUBBER PIPE \varnothing 13x20 mm - 40 m
operating temperature -40+100°C
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART 165168-10

HOBART E143010

3450125 RUBBER PIPE 20x30 mm
sold per meter
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F

1449682 SILICONE HOSE \varnothing 5x8 SHORE 60 - 10 m
alimentary



HOBART E929171

HOBART 00-324081-003

HOBART 324081-3

Ironmongery (screws,nuts,washers)

5027044 WASHER PTFE 19x14x0.5 mm

5027764 WASHER PTFE 24x16x0.5 mm



HOBART 00-774072-001

HOBART 774072-1

HOBART 00-774072-002

HOBART 774072-2



Suitable for:

HOBART



Suitable for:

Labels for control panels

5023852 DIAPHRAGM BUTTON PANEL DISHWASHER
size 150x52 mm



HOBART 00-324202-000

HOBART 324202

7100814 OVERLAY SILK-SCREEN PRINTED STICKER
for Pan/utensilwashing machines (HOBART)
till 31/12/03 UX60 - UX60B - UX60H - UX60HB



HOBART 00-774052-000

HOBART 774052

Level sensors

5044448 KIT SWITCH FLOATING
for Dishwasher hood type (HOBART) HE33



HOBART ML102831

Magnets

7102910 CONTACT MAGNET \varnothing 34x17 mm
for Dishwasher (HOBART) UX60B



HOBART 00-774714-001

HOBART 774714-1

Manifolds for dishwashers

3743860 BOTTOM MANIFOLD



HOBART 56596

3186333 EPDM O-RING GASKET 06200



HOBART 15082K

3743270 EXTERNAL WASH PIPE



HOBART E115113

3186604 SUPPORT GASKET
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E437064



Suitable for:

5035714 TUBING FOR WASH OUTLET HOSE
internal \varnothing 45 mm - external \varnothing 55 mm
length 66 mm
for Dishwasher (HOBART) ECOMAX 683



HOBART

Suitable for:



3743202 WASH OUTLET HOSE GOLD COMPLETE
for Dishwasher (HOBART) ECOMAX 683



HOBART 139321-906

3743312 ARM ASSEMBLY SPACER
for Dishwasher (HOBART) ECOMAX 683




3743786 ARM ASSEMBLY PIN
for Dishwasher (HOBART) ECOMAX 683
OREANE LB PRO 1



3248215 COUPLING FOR BOTTOM EXTERNAL WASH
external connection \varnothing 45.5 mm
internal fitting \varnothing 10.5 mm
for Dishwasher (HOBART) ECOMAX 683



5036646 FITTING WASH UPPER EXTERNAL
hose-end \varnothing 45 / 12 mm
for Dishwasher (HOBART) ECOMAX 683

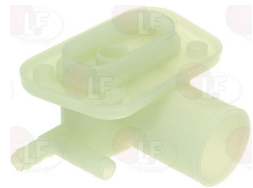

3786044 GASKET FLAT EPDM \varnothing 61x47x2 mm
for Dishwasher (HOBART) ECOMAX 683



HOBART E80174

3449472 HOSE CLAMP 40-60
for pipes \varnothing 40÷60 mm
made of stainless steel AISI 304
height 12 mm and screw E7
suitable for food industry
for Dishwasher (HOBART) ECOMAX 683



3243696 INSERT FOR CLAMP
for Dishwasher (HOBART) ECOMAX 683





Suitable for:

3743313 INTERNAL BOTTOM WASH RING NUT



3743785 RING NUT FOR WASH ARM LOWER \varnothing 1"1/2
for Dishwasher (HOBART) ECOMAX 683



3243991 STAINLESS STEEL PIN FOR ARM
height 53 mm
for Dishwasher (HOBART) ECOMAX 683



HOBART 139321-918

HOBART



Suitable for:

6303032 RING MADE OF PLASTIC \varnothing 44x40x3 mm
for Dishwasher (HOBART) ECOMAX 683



5018807 SEALING RING FOR WASH SUPPORT
external \varnothing 44 mm
thickness 3 mm




5035714 TUBING FOR WASH OUTLET HOSE
internal \varnothing 45 mm - external \varnothing 55 mm
length 66 mm
for Dishwasher (HOBART) ECOMAX 683



Microswitches

3240228 DOOR MICROSWITCH 250V 10A
for Dishwasher (HOBART) FE - FX - GX

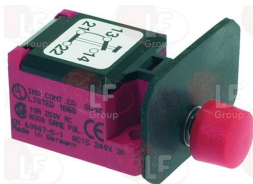

HOBART 00-735221-001

HOBART 735221-1

3240475 LEVEL SWITCH HORIZONTAL L221 WITH CABLE
1 contact NO-NC 250V 50W 1A
max. fixing hole \varnothing 22.5 mm



HOBART 00-735171-001

HOBART 735171-1

HOBART 896960

3240608 MAGNETIC MICROSWITCH
250-mm cable
for Dishwasher (HOBART) ECOMAX 683



HOBART 139321-344

HOBART 139321-586

3240610 MAGNETIC UNIT RECTANGULAR M303
40x13x8 mm
for Dishwasher (HOBART) ECOMAX 683



Suitable for:

5047134 MAGNETIC MICROSWITCH
 250V 0,2A 1NO
 dimensions 80x30x15 mm with cable 1300 mm
 for Dishwasher pull-through (HOBART) - Series CN
 Series CP - Series CS



HOBART 00-229517-000

HOBART 229517

Suitable for:

3240227 MAGNETIC MICROSWITCH 220V 0.2A
 sizes 80x30 mm
 complete with cable length 3800 mm
 for Glasswasher/Cupwasher (HOBART) CN - CNA - CNR
 CR - CR-OG - CSA - CS09



HOBART 00-229517-002

HOBART 229517-2

HOBART 785287-01


3240226 MAGNETIC MICROSWITCH 250V 3A
 sizes 80x30 mm
 complete with cable length 1600 mm



HOBART 00-297980-004

HOBART 297980-4

3803008 MAGNETIC SWITCH 250V 50HZ
 for Dishwasher (HOBART) FX - GX

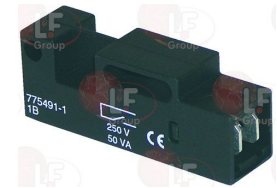

HOBART 00-775491-001

HOBART 775491-01

HOBART 775491-1

3240189 MICRO SWITCH M1DX20 10A 250V



HOBART 1700340

HOBART 300682


3240234 LIMIT SWITCH PIN



3250071 MICROSWITCH SPRING \varnothing 13x25 mm



3240235 RING NUT M16x1.5 mm

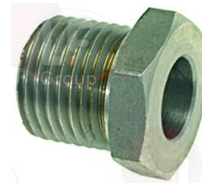

5003350 ROD MICROSWITCH 48x30 MM





Suitable for:

HOBART



5053203 MICROSWITCH MAGNETIC
 MAGNET \varnothing 5.7 mm - cable length 300 mm
 for Dishwasher hood type (HOBART) AMX - AMXX - AUP
 AUXX - ECOMAX602-10 - ECOMAX602-11
 ECOMAX612-10
 for Glasswasher/Cupwasher (HOBART) ECOMAX502




HOBART 01-240288-001 HOBART 01-240288-1

5065617 MICROSWITCH MAGNETIC DOOR
 MAGNET 80x30x15 mm - cable 1300 mm



HOBART 00-297980-003 HOBART 297980-3

3240601 MICROSWITCH N16 250V
 contact capacity 16A 250V

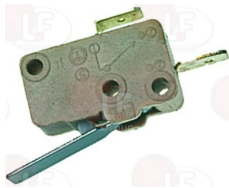

HOBART 139321-41

3240206 PUSH ROD FOR MICRO




Non-return and expansion valves

3526279 NON-RETURN VALVE



HOBART 00-324091-000 HOBART 324091

5073729 NON-RETURN VALVE

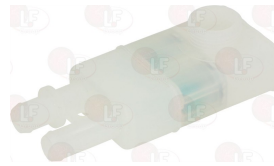

HOBART 00-775759-001 HOBART 775759-1

Outlet solenoid valves and accessories

3120553 DRAIN VALVE ASCO 230V 50Hz
 inlet \varnothing 17 mm - outlet \varnothing 19 mm
 for Dishwasher (HOBART) FX - GX



HOBART 00-323785-011 HOBART 323785-11 HOBART 323785-12

5032588 SOLENOID VALVE 230V 50/60Hz
 inlet \varnothing 36x41 mm - outlet \varnothing 33x40 mm
 for Dishwasher conveyor type (HOBART) - Series FTN
 for Dishwasher pull-through (HOBART) - Series CSA



HOBART 00-774683-001 HOBART 774683-1

Pegs

5061118 FINGER CONVEYOR
 for Dishwasher conveyor type (HOBART) - Series FTX



HOBART 00-229102-000 HOBART 229102

5029977 PEG FOR DRAGGING
 for Dishwasher pull-through (HOBART) - Series FTX



HOBART 00-229049-002 HOBART 229049-2

Suitable for:

Suitable for:

5055809 PIN STAINLESS STEEL FOR TAPE PEG
 dimensions \varnothing 7x600 mm
 for Dishwasher conveyor type (HOBART) - Series FTX



HOBART 00-229326-001

HOBART 229326-1

Pins

3743859 BOTTOM WATER INLET PIPE



HOBART 983560

5031217 PIN \varnothing 10x95 mm
 for DISHWASHER FX



HOBART 00-602812-000

HOBART 602812

5055224 PIN FOR RINSE ARM ASSEMBLY 29 mm
 for Dishwasher hood type (HOBART) ECOMAX602-10
 ECOMAX602-11 - ECOMAX612-10
 for Glasswasher/Cupwasher (HOBART) ECOMAX502



HOBART 01-240095-001

HOBART 01-240095-1

HOBART 240095-1

Pressure switches

7101901 PRESSURE SWITCH 0-50 mbar 0.5-3.5Vdc



HOBART 00-775866-002

HOBART 775866-2


3320044 PRESSURE SWITCH 0-30 mbar
 1 level



HOBART 00-775866-001

HOBART 775866-1

5021403 PRESSURE SWITCH 3 LEVEL
 calibration 1° level 40/25 mm
 calibration 2° level 57/37 mm
 calibration 3° level 125/105 mm
 250V 16(4)A
 for Dishwasher (HOBART) HX40E

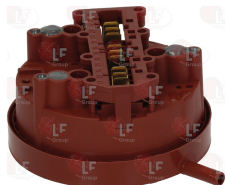

HOBART 00-378758-001

HOBART 378758-1



Suitable for:

HOBART



Suitable for:

Probes

3397005 BOILER TEMPERATURE PROBE
 bulb \varnothing 5x30 mm
 capillary 3500 mm
 for Dishwasher hood type (HOBART) HX



HOBART 00-378584-000

HOBART 378584

3397198 TEMPERATURE PROBE



HOBART 00-775612-001

HOBART 775612-1

Pump motors

3122750 ELECTRIC PUMP HANNING UP30 0.15HP
 outlet external \varnothing 26 mm
 0.15HP 230V 50Hz - capacitor 4 μ f
 for Dishwasher (HOBART) - Series FX - Series GX



HOBART 00-775465-001

HOBART 00-897929-000

HOBART 775465-1

HOBART 897929


5033237 ELECTRIC PUMP HANNING UP30-324
 inlet \varnothing 28 mm - outlet \varnothing 26 mm
 220/240V 50Hz - 140W - capacitor 4 μ F
 for Dishwasher (HOBART) AMXX-31



HOBART 00-775854-001

HOBART 775854-1


7108411 ELECTRIC PUMP HANNING UP30-420 0,140Kw
 220-240V 50Hz 0,6A 115 lt/min
 inlet \varnothing 28 mm - outlet \varnothing 26 mm
 for Dishwasher (HOBART) AUPRS31

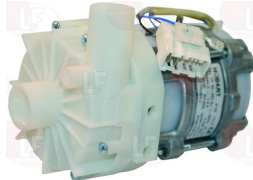

HOBART 00-775854-003

HOBART 775854-3


5042335 ELECTRIC PUMP HANNING UP60-321
 inlet \varnothing extern 28 mm - outlet \varnothing extern 26 mm
 230V 50Hz - 270W - capacitor 5 μ F

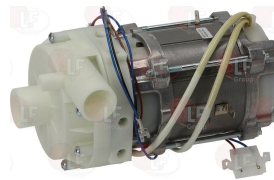

HOBART 324914-1

HOBART 324914-1V

3122334 ELECTRIC PUMP HOBART UP60-315 0.33HP
 inlet external \varnothing 28 mm - outlet external \varnothing 26 mm
 0.33HP 230V 50Hz 1.2A - capacitor 5 μ f
 flow rate 150 l/min
 for Dishwasher (HOBART) FE - Series FX - Series GX
 for Dishwasher hood type (HOBART) HE - HX

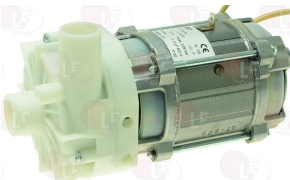

HOBART 324093-21

HOBART 324093-21V

3786662 RING GASKET KIT
 for Dishwasher (HOBART) FX - GX
 for Dishwasher hood type (HOBART) HX




HOBART 00-896974-000

HOBART 896974

Suitable for:

Suitable for:

3122189 ELECTRIC PUMP LGB W 180SX 0.25HP
with manifold and filter
0.25HP 230V 50Hz 1A - Rpm 2800
capacitor 5 µf
for Glasswasher/Cupwasher (HOBART) ECOMAX350

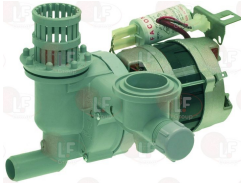

HOBART E999134

HOBART 139321-551

3243687 CLOSING CAP FOR BOSS



3122195 FLANGE E35/40
external ø 100 mm



3186605 GASKET FLAT EPDM ø 33x17x1.5 mm
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E437078

3243684 GASKET FLAT EPDM ø 60x48x2 mm
for Dishwasher (HOBART) - Series FX - Series GX
H60



3122194 IMPELLER FOR PUMP T.176 ø 67 mm



3243682 LOWER BOSS



1186803 O-RING 02037 EPDM



HOBART 139321-762

HOBART 67500-30

HOBART 67500-55

1186237 O-RING 03300 EPDM



3243683 RING NUT FOR LOWER BOSS



3122632 SEAL ROTARY ø 13 BACK FACE 5.5 mm



HOBART 139321-746

3743276 TOP WASH CLOSING CAP






Suitable for:

HOBART



3122196 ELECTRIC PUMP LGB W 210SX 0.32HP
 with manifold and filter
 0.32HP 230V 50Hz 1.1A - Rpm 2800
 capacitor 6.3 µf
 for Dishwasher (HOBART) ECOMAX
 for Dishwasher (HOBART) ECOMAX400 ECOMAX400

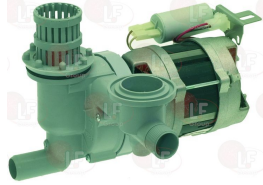

HOBART E999135

3122195 FLANGE E35/40
 external ø 100 mm



3243684 GASKET FLAT EPDM ø 60x48x2 mm
 for Dishwasher (HOBART) - Series FX - Series GX
 H60



3243682 LOWER BOSS



HOBART 139321-762


1186237 O-RING 03300 EPDM



3243687 CLOSING CAP FOR BOSS



3186605 GASKET FLAT EPDM ø 33x17x1.5 mm
 for Pan/utensilwashing machines (HOBART)
 ECOMAX701B - ECOMAX701F

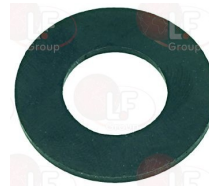

HOBART E437078

3122197 IMPELLER FOR PUMP ø 71 mm



1186803 O-RING 02037 EPDM



HOBART 67500-30

HOBART 67500-55

3243683 RING NUT FOR LOWER BOSS



HOBART 139321-746



Suitable for:

3122632 SEAL ROTARY ø 13 BACK FACE 5.5 mm



HOBART 324913-1

HOBART 324913-1V

HOBART




Suitable for:

3743276 TOP WASH CLOSING CAP




3122694 ELECTRIC PUMP UP60-343RU 0.29HP
inlet external ø 28 mm - outlet external ø 25 mm
0.29HP 230V 50Hz - capacitor 5 µf
for Dishwasher hood type (HOBART) AMX - AUX

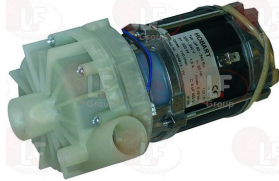

HOBART 324913-1

HOBART 324913-1V

3786659 KIT GASKETS FOR PUMP
for Dishwasher pull-through (HOBART) CNREW

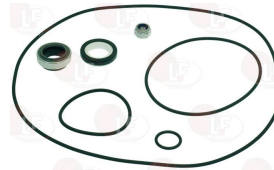

HOBART ML74328

HOBART 00-895444-000

Relays

3351603 RELAY A2L-FA 16A 230V
bipolar switch
2 NO contacts



HOBART 00-371450-011

HOBART 371450-11

Rinse aid pumps and accessories

3090222 DETERGENT DISPENSER 220/240V 50/60Hz
for Dishwasher (HOBART) FX - GX - UX30



HOBART 00-378625-001

HOBART 378625-1

3090165 DETERGENT INJECTOR 230V 50Hz
for Pan/utensilwashing machines (HOBART) UW135
UW135H



HOBART 172927-1

3090133 VALVE HOLDER





Suitable for:

HOBART



Suitable for:

5021423 NON-RETURN VALVE



HOBART 00-227441-001

HOBART 227441-1

3090038 RINSE AID INJECTOR DB2

power supply 220/240V 50Hz
screw for flow rate regulation



HOBART 139321-39

HOBART 297891

3090039 COIL 220/240V 50Hz



HOBART 139321-40

3090003 INLET VALVE FOR RINSE AID INJECTOR



Rotary switches

3057050 CONNECTING BRACKET 28x21x16 mm

distance between hooking brackets 27 mm
f/connection between selector switch and thermost.



HOBART 300177

HOBART 905109

3057327 SELECTOR SWITCH FOR PROGRAM SELECTION

for Dishwasher (HOBART) FX - GX
for Dishwasher hood type (HOBART) AMX - HX
for Pan/utensilwashing machines (HOBART) UX30
UX30B - UX30H - UX30S - UX30SB - UX30SH




HOBART 00-231960-005
HOBART 231960-5

HOBART 231960-03-13

HOBART 231960-13

7106178 BLACK KNOB \varnothing 43.5 mm

D-shaped hole 6x4.6 mm
for Pan/utensilwashing machines (HOBART) UX30
UX30B - UX30H - UX30S - UX30SB - UX30SH

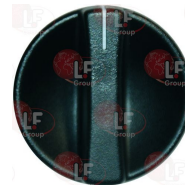


HOBART 00-324301-000

HOBART 324301



Suitable for:

5034245 CONTROL PANEL SILK SCREEN PRINT STICKER
dimensions 173/152x82 mm
for Pan/utensilwashing machines (HOBART) UX30
UX30B - UX30H - UX30S - UX30SB - UX30SH

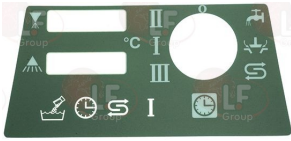

HOBART 00-324755-000

HOBART 324755

HOBART




Suitable for:

3057333 SELECTOR SWITCH WITH KNOB
ELEBERG SCH-X021 16A



HOBART 900086

3057049 SELECTOR SWITCH 4-POLE 16A 250V

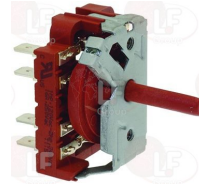

HOBART

Salt containers and accessories

3067603 CAP FOR SALT CONTAINER



HOBART 139321-123

3067604 RETAINING NUT FOR CAP



HOBART 139321-217

3067002 GASKET FOR CONTAINER

external \varnothing 82 mm
internal \varnothing 64 mm
thickness 3 mm



HOBART 139321-194

5065187 CAP FOR SALT CONTAINER
for Glasswasher/Cupwasher (HOBART) FP - FX - GP
GX
for Pan/utensilwashing machines (HOBART) UXT
UXTL



HOBART 00-775530-050

HOBART 775530-50



Suitable for:

HOBART



3067001 SALT CONTAINER



HOBART 139321-122

3067002 GASKET FOR CONTAINER
external \varnothing 82 mm
internal \varnothing 64 mm
thickness 3 mm



HOBART 139321-194

3067198 O-RING 04162 EPDM



3067005 SALT CONTAINER RING NUT



HOBART 139321-193

3067006 SALT CONTAINER LID



HOBART 139321-191

Suitable for:

3067016 FUNNEL FOR SALT INTAKE
external \varnothing 93 mm hole \varnothing 27 mm



3450152 HOSE RUBBER REINFORCED \varnothing 13/19 mm
internal \varnothing 13 mm - external \varnothing 19 mm
temperature -40+100°C
sold per meter
for Dishwasher (HOBART) ECOMAX 683



3067007 SALT CONTAINER CAP



HOBART



Scale removers for dishwashers

7111769 SCALE REMOVER ONE-PIECE COMPLETE



HOBART 00-775918-001

HOBART 775918-1

Solenoid valves

5060793 SOLENOID VALVE 1-WAY 180° 220/240V 50/60Hz 7W - max. temperature 90°C inlet 3/4" - outlet ø 10.5 mm



HOBART 00-883658-001

HOBART 883658-1

Spare parts for pumps

5047186 GASKET for Dishwasher conveyor type (HOBART) - Series FTX



HOBART 00-229402-000

HOBART 229402

5030896 SEAL ROTARY ø 16 mm ceramic counterface 10 mm for Dishwasher (HOBART) FM30



HOBART 00-104329

HOBART 104329

Springs

5026762 ASSEMBLY SPRING DOOR external ø 50x48 mm - hole ø 10.5 mm for Dishwasher pull-through (HOBART) - Series CNA Series CNR - Series CR



HOBART 00-774749-002

HOBART 774749-2

5026763 ASSEMBLY SPRING DOOR external ø 50x48 mm - hole ø 10.5 mm for Dishwasher pull-through (HOBART) - Series CNA Series CNR



HOBART 00-774749-005

HOBART 774749-5




Suitable for:

HOBART



5026781 DOOR SPRING \varnothing 41x40 mm
length 900 mm
for Dishwasher (HOBART) CX

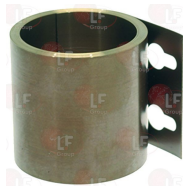

HOBART 00-229277-000

HOBART 229277

Suitable for:

3250202 DOOR SPRING \varnothing 45x400 mm
for AMX/AUX



HOBART 00-119079-00002

HOBART 119079-2

5004248 SPRING DOOR POT-WASHER
dimensions \varnothing 55x65 mm
for Pan/utensilwashing machines (HOBART) UW100
UW105 - UW120 - UW125 - UW200 - UW205



HOBART 00-378591-000

HOBART 299110

HOBART 378591

5032980 SPRING FOR DOOR
support \varnothing 50x48 mm - hole \varnothing 10.5 mm
for Dishwasher conveyor type (HOBART) - Series FTN
for Dishwasher pull-through (HOBART) - Series CNR
for Dishwasher pull-through (HOBART) - Series CNA



HOBART 00-774749-004

HOBART 774749-4

Supports for wash and rinse arms

3743764 BOSS FOR UPPER WASH ARM ASSEMB. WITH PIN
for Dishwasher hood type (HOBART) AM12E - AM12EC
AM12EF - AM600 - AM600C



HOBART 00-172695-000

HOBART 172695

5048529 GASKET WASH ARM ASSEMBLY
for Dishwasher hood type (HOBART) AM12E - AM12EC
AM12EF - AM600 - AM600C



HOBART 00-226643-000

HOBART 226643

3743862 BOTTOM EXTENSIBLE HOSE



HOBART 1244661

3743803 COUPLING FOR WASH ARM
fittings \varnothing 62 mm 48 mm
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E4206301

3743802 FLANGE FRAME FOR WASH ARM SUPPORT
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E041064



Suitable for:

5022973 GASKET O-RING 04275 EPDM
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E926252

3743771 DRUM FOR TOP TURNING ARM
for Dishwasher (HOBART) UX30
for Dishwasher hood type (HOBART) AMX - AUX



HOBART 00-886607-000

HOBART 324670

HOBART 886607

3743766 ARM ASSEMBLY SUPPORTING RING
for Dishwasher hood type (HOBART) AMX - AUX



HOBART 00-324751-000

HOBART 324751

3786660 GASKET FLAT EPDM ϕ 71x59x2 mm
for Dishwasher hood type (HOBART) - Series AMX
Series AUX



HOBART 00-172986-022

HOBART 172986-22

3743774 SPACER FOR LH ARM ASSEMBLY
for Dishwasher hood type (HOBART) AMX - AUX



HOBART 00-324698-001

HOBART 324698-1

HOBART

Suitable for:



3743773 ARM ASSEMBLY PIN
for Dishwasher (HOBART) FX15 - GX60
for Dishwasher hood type (HOBART) AMX - HX
for Glasswasher/Cupwasher (HOBART) FX30 - FX40



HOBART 00-324067-000

HOBART 324067

3786658 GASKET FLAT EPDM ϕ 60x46x1 mm
for Dishwasher (HOBART) FX - GX



HOBART 00-172986-019

HOBART 172986-19

3743772 RING NUT FOR ARM ASSEMBLY
for Dishwasher (HOBART) FX15 - GX60
for Dishwasher hood type (HOBART) AMX - HX
for Glasswasher/Cupwasher (HOBART) FX30 - FX40



HOBART 01-240205-001

HOBART 01-240205-1

HOBART 324036



Suitable for:

HOBART



3243667 LOWER CENTER CONDUIT



HOBART 139321-757


3186602 GASKET FLAT NYLON \varnothing 40x34.5x2 mm



HOBART 00-371450-066

HOBART 371450-66

3243686 NUT FOR SPINDLE SUPPORT

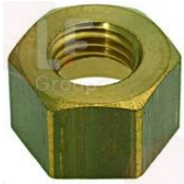

1186318 O-RING 03043 EPDM
for Dishwasher (HOBART) GW600
for Glasswasher/Cupwasher (HOBART) GW601



HOBART 139321-178

3243626 RINSE ARM SECURING CLIP



3243901 SPACER



3786454 EPDM O-RING GASKET 0153



3243680 LOWER WASH ARM ASSEMBLY SPINDLE



1186803 O-RING 02037 EPDM



HOBART 67500-30

HOBART 67500-55

5054316 RATCHET ROUNDED \varnothing 19.5 mm
threaded hole M5



3243679 SPACER



3243685 WASH ARM ASSEMBLY SPINDLE SUPPORT





HOBART



Suitable for:

3243988 PLASTIC FITTING PIPE
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E468165

Suitable for:

3186605 GASKET FLAT EPDM \varnothing 33x17x1.5 mm
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E437078

3743130 HOSE-END FITTING RING NUT



3743768 RINSE ARM COUPLING KIT



HOBART 00-324480-000

HOBART 324268

HOBART 324480

5042614 SUPPORT FOR LOWER WASH ARM ASSY W/PIN
for Dishwasher hood type (HOBART) AM12E - AM12EC
AM12EF - AM600 - AM600C



HOBART 00-172694-000

HOBART 172694

5037932 SUPPORT WASH ARM LOWER
for Dishwasher hood type (HOBART) AMS900 - AMX900
AM700 - AM900 - ECOMAX650 - ECOMAX652



HOBART 00-898194-001

HOBART 898194-1

5037933 GASKET FLAT EPDM \varnothing 59x47x3 mm
for Dishwasher hood type (HOBART) AMS900 - AMX900
AM700 - AM900 - ECOMAX650 - ECOMAX652



HOBART 00-172986-033

HOBART 172986-33

3743775 WASH ARM ASSEMBLY SPACER
for Dishwasher (HOBART) FE



HOBART 00-231893-001

HOBART 231893-1

5037934 WASHER 70x49x3 mm
for Dishwasher hood type (HOBART) AMS900 - AMX900
AM700 - AM900 - ECOMAX650 - ECOMAX652



HOBART 00-898263-001

HOBART 898263-1



Suitable for:

HOBART



3243688 UPPER WASH ARM ASSEMBLY SUPPORT
connection external \varnothing 31 mm
hose end fitting external \varnothing 12 mm - height 55 mm
for Pan/utensilwashing machines (HOBART)
ECOMAX701F




HOBART E115074

3243640 LOWER WASH ARM ASSY KNOB LOCKING BOLT



HOBART 139321-107

3243610 WASH ARM ASSEMBLY LOWER BOSS SPINDLE
for Dishwasher (HOBART) ECOMAX501A
for Dishwasher (HOBART) ECOMAX501A

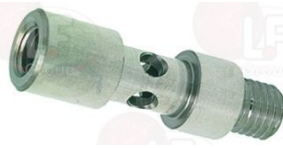

HOBART E327006

HOBART 00-139321-113

HOBART 139321-113

5021286 UPPER WASH ARM ASSEMBLY SUPPORT
for Pan/utensilwashing machines (HOBART)
ECOMAX701B



HOBART E042059-01

5022973 GASKET O-RING 04275 EPDM
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E926252

Suitable for:

3243639 LOWER WASH ARM ASSEMBLY LOCKING KNOB



HOBART 139321-28

3186604 SUPPORT GASKET
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E437064

3743802 FLANGE FRAME FOR WASH ARM SUPPORT
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F




HOBART E041064



Suitable for:

3743070 UPPER WASHING CONDUIT

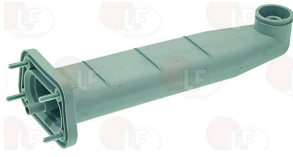

HOBART E80177

3243977 PIN FOR TURNING ARM
for Dishwasher (HOBART) ECOMAX 683



HOBART 139321-947

6303032 RING MADE OF PLASTIC \varnothing 44x40x3 mm
for Dishwasher (HOBART) ECOMAX 683



3186167 UPPER WASHING INLET GASKET
dimensions 110x68 mm.
for Dishwasher (HOBART) ECOMAX 683



HOBART E80178

HOBART



Suitable for:

5036646 FITTING WASH UPPER EXTERNAL
hose-end \varnothing 45 / 12 mm
for Dishwasher (HOBART) ECOMAX 683



HOBART E80174

5038121 PIN UPPER WASH/RINSE
thread \varnothing M12



HOBART E079042

3243991 STAINLESS STEEL PIN FOR ARM
height 53 mm
for Dishwasher (HOBART) ECOMAX 683



HOBART 139321-918



Suitable for:


HOBART



Suitable for:


Thermostats

3444249 SAFETY SINGLE-PHASE THERMOSTAT 125°C
 with manual reset
 capillary 1200 mm
 bulb \varnothing 4x128 mm
 insulating part 800 mm
 16A 230V
 for Dishwasher (HOBART) FE11 - FE26
 for Dishwasher hood type (HOBART) HX40
 for Glasswasher/Cupwasher (HOBART) FX10 - FX20
 FX25 - FX30 - FX40 - Series GX
 for Dishwasher (HOBART) CX95

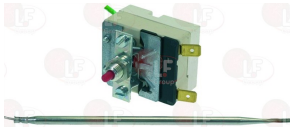

HOBART 227879

3444270 SAFETY THREE-PHASE THERMOSTAT 100°C
 with manual reset
 covered capillary 850 mm
 bulb \varnothing 4x230 mm
 16A 230V
 for Glasswasher/Cupwasher (HOBART) - Series FX

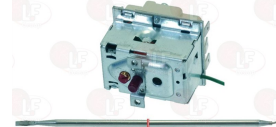

HOBART 378791


3444612 SINGLE-PHASE THERMOSTAT FOR BOILER 85°C
 15A 250V
 covered capillary 600 mm
 bulb \varnothing 6x120 mm



HOBART E236043

HOBART 139321-532

3444602 SINGLE-PHASE THERMOSTAT 0-85°C
 for tank
 covered capillary 600 mm
 button bulb \varnothing 14x31 mm
 16A 250V
 D shaft \varnothing 6x4.6 mm

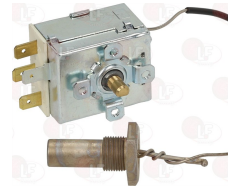

HOBART E236042

HOBART 139321-20


3444719 SINGLE-PHASE THERMOSTAT 30-85°C
 covered capillary 850 mm
 bulb \varnothing 6x94 mm
 D-shaped pin \varnothing 6x4.6 mm



HOBART 00-371450-015

HOBART 371450-15

 3444274 SINGLE-PHASE THERMOSTAT 93°C
 screw adjustment
 covered capillary 2200 mm
 bulb \varnothing 4x200 mm
 16A 250V
 for Dishwasher (HOBART) FE11 - FE26
 for Dishwasher hood type (HOBART) AMX - AUX - HE HX
 for Glasswasher/Cupwasher (HOBART) - Series FX
 Series GX



HOBART 226505

HOBART 886638



Tubing and hoses

6929164 HOSE ELBOW SHAPED RUBBER \varnothing 60x78 mm
for Pan/utensilwashing machines (HOBART)
ECOMAX701B - ECOMAX701F



HOBART E929164

3248211 INLET SLEEVE
for Dishwasher (HOBART) - Series FX - Series GX



HOBART 00-886640-000

HOBART 227751

HOBART 886640

3248212 CAP FOR INLET SLEEVE
for Dishwasher (HOBART) - Series FX - Series GX



HOBART 00-227883-000

HOBART 227883

3248605 PUMP OUTLET HOSE
internal \varnothing 33 mm



HOBART 139321-110

3349476 PUMP OUTLET HOSE
internal \varnothing 47-54 mm
overall length 315 mm



HOBART 28782

Wash and rinse arms for warewashers

3743858 BOTTOM DRUM SHAFT
overall length 140 mm - \varnothing internal 17 mm



HOBART 981263

5032916 BUSH RINSE ARM
 \varnothing external 15 mm - \varnothing internal 12 mm



HOBART 00-493414-000

HOBART 493414-1

HOBART 00-493414-001

HOBART 493414

5050386 BUSHING FOR ARM ASSEMBLY WITH NUT
for mod. AMX



HOBART 00-883974-001

HOBART 883974-1

5031215 CAP \varnothing 13 mm



HOBART 00-226816-000

HOBART 226816



Suitable for:

HOBART



3743767 CAP FOR WASH ARM - 6 PCS
for Dishwasher pull-through (HOBART) - Series CN
Series CR - Series FTN - Series UCA



HOBART ML-102845 HOBART ML102845 HOBART 325109-1

5032915 CONNECTION RINSE ARM
for Dishwasher pull-through (HOBART) - Series CR



HOBART 00-325308-001 HOBART 325308 HOBART 325308-1

6429055 RING NUT \varnothing 46 mm UPPER REED



HOBART 00-371450-138 HOBART 371450-138

5060133 RINSE ARM ASSEMBLY 520 mm
for Dishwasher (HOBART) FE



HOBART 01-240096-001 HOBART 01-240096-1

3743605 RINSE ARM 515 mm
for Dishwasher (HOBART) FX300 - FX800 - Series GX
for Dishwasher hood type (HOBART) AMX - AUX



HOBART 01-240096-002 HOBART 01-240096-2 HOBART 242-01-240096
HOBART 324052

3439010 WASH/RINSE ARM CAPS 4 PCS
for Dishwasher (HOBART) FE



HOBART 00-886609-000 HOBART 324172 HOBART 867429-1
HOBART 886609

3743769 RINSE ARM 675 mm
for Pan/utensilwashing machines (HOBART) UX - UXL
UXLS - UXS



HOBART 00-886898-001 HOBART 324738 HOBART 886898-1

5074789 STAINLESS STEEL WASH ARM ASSEMBLY 393 mm



HOBART 01-294032-001 HOBART 01-294032-1

5024556 STAINLESS STEEL WASH ARM ASSEMBLY 690 mm
for Dishwasher (HOBART) UX80



HOBART 00-324798-002 HOBART 324798-2

6129036 UPPER WASH ARM ASSEMBLY 385 mm



HOBART 00-371450-075 HOBART 371450-75



Suitable for:

Suitable for:

3743300 WASH ARM ASSEMBLY 395 mm
for Glasswasher/Cupwasher (HOBART) GC

3743301 PTFE WASHER \varnothing 21x8x1.5 mm



HOBART 00-775762-001

HOBART 775762-1

HOBART 00-775808-001

HOBART 775808-1

3743650 WASH ARM ASSEMBLY 510 mm
for Dishwasher (HOBART) FX15
for Dishwasher hood type (HOBART) HE33 - HE600/33
for Glasswasher/Cupwasher (HOBART) FX10 - FX20
FX25 - FX30 - FX40

3743630 DRUM FOR WASH ARM
for Dishwasher (HOBART) FX15 - GX60
for Dishwasher hood type (HOBART) HE33 - HE600/33
for Glasswasher/Cupwasher (HOBART) FX10 - FX20
FX25 - FX30 - FX40



HOBART 00-883472-001

HOBART 324039

HOBART 324444

HOBART 00-734803-001

HOBART 734803-1

HOBART 883472-1

3743775 WASH ARM ASSEMBLY SPACER
for Dishwasher (HOBART) FE

3743685 WASH SHAFT PIN 60 mm
for Dishwasher (HOBART) FX15 - GX60
for Glasswasher/Cupwasher (HOBART) FX30 - FX40



HOBART 00-231893-001

HOBART 231893-1

HOBART 00-324040-000

HOBART 324040

3439010 WASH/RINSE ARM CAPS 4 PCS
for Dishwasher (HOBART) FE



HOBART 00-886609-000

HOBART 324172

HOBART 867429-1

HOBART 886609

5014452 WASH ARM ASSEMBLY 510 mm
for Dishwasher (HOBART) ECOMAX500

3243691 STAINLESS STEEL ROD FOR WASH ARM ASSY



HOBART E129046



Suitable for:

Suitable for:

7103498 WASH ARM ASSEMBLY 512 mm
 for Dishwasher hood type (HOBART) ECOMAX602-10
 ECOMAX602-11 - ECOMAX612-10
 for Glasswasher/Cupwasher (HOBART) ECOMAX502 - FP
 FX - GP - GX

5063228 WASH ARM BUSHING
 ø internal 16 mm - height 39 mm



HOBART 01-240050-001

HOBART 01-240050-1

HOBART 00-324042-000

HOBART 324042

3743770 WASH ARM CAP - 4 PCS KIT
 for Dishwasher hood type (HOBART) AMX

7105110 WASH ARM END CAP
 for Dishwasher (HOBART) CN-LADS
 for Dishwasher (HOBART) CN-LADS - CS-E-A-22



HOBART 00-324785-000

HOBART 324785

HOBART 886610

HOBART 01-245084-001

HOBART 01-245084-1

5021675 WASH ARM KIT



HOBART ML-102842

HOBART ML102842

3743606 WASH ARM 535 mm
 for Dishwasher hood type (HOBART) AMX - AUX

3743632 WASH ARM SET
 for Dishwasher hood type (HOBART) AMX - AUX



HOBART 00-324798-001
HOBART 324798-1

HOBART 00-883453-001
HOBART 883453-1

HOBART 324614

HOBART 00-734804-001

HOBART 324727

HOBART 734804-1

3743790 WASH/RINSE ARM ASSEMBLY UNIT
 for Dishwasher (HOBART) ECOMAX350



HOBART E129057



Wash jets and accessories

3501622 GREY WASH JET



HOBART 00-139321-098

HOBART 139321-98

3501620 WASH JET PROPELLER



HOBART 00-139321-097

HOBART 139321-97

3501249 RINSE JET



HOBART 00-226800-002

HOBART 226800-2

3743550 RINSE JET

for Dishwasher hood type (HOBART) AM-12E - AM-12EC
AM-12EF



HOBART 00-226800-001

HOBART 226800-01

HOBART 226800-1

5027878 WATER JET
connection \varnothing 11 mm



HOBART 00-885520-006

HOBART 885520-6

Watertight seals and rings

5028336 RING INTERRUPTED 45x41x3 mm



HOBART 00-324068-000

HOBART 324068

5061621 SEALING RING \varnothing 46 mm
for Dishwasher hood type (HOBART) AMX
ECOMAX602-10 - ECOMAX602-11 - ECOMAX612-10
for Glasswasher/Cupwasher (HOBART) ECOMAX502



HOBART 01-515356-001

HOBART 01-515356-1

HOBART 775933-3

5037832 SHROUDING RING KIT
extern \varnothing 107 mm
central hole \varnothing 70 mm



HOBART 00-886639-000

HOBART 886639

The data herewith contained may change without notice and LF SpA cannot be held responsible for possible errors stated or resulting by the use of this document. All rights reserved. No part of this publication may be reproduced without written permission by LF SpA.



Distributing Components, Spare Parts & Accessories in original quality worldwide

-
-  **LF SpA HEADQUARTERS**
via Voltri, 80 - 47522 Cesena (FC) ITALY
Tel. +39 0547 34 11 11 - Fax +39 0547 34 11 10
www.lfircambi724.it - www.lfircambi724.mobi
info@lfircambi.it
Export Dept.: Tel. +39 0547 34 11 50 - Fax: +39 0547 34 11 55
www.lfspareparts724.com - www.lfspareparts724.mobi
export@lfspareparts.com
-  **LF SpA HOUSEHOLD COMPONENTS DIVISION**
Via Padriciano, 34149 Trieste - Italia - AREA Science Park
Tel. +39 0547 34 12 42 - Fax +39 0547 34 12 48
www.lfspareparts724.com - www.lfspareparts724.mobi
info@lfspareparts.com
-  **EPGC Sas FRANCE**
13, Rue des Forts - 59960 Neuville en Ferrain
Tel. +33 (0)3 20 25 06 21
Fax +33 (0)3 20 25 34 12
www.epgc.com
www.epgc724.mobi
epgc@epgc.com
-  **LF GmbH GERMANY**
Junkersstrasse, 3 - D-82178 Puchheim - München
Tel. +49 89 89 45 78 66
Fax +49 89 89 45 78 88
www.lfersatzteile724.de
www.lfersatzteile724.mobi
info@lfersatzteile.de
-  **LF China REPUBLIC OF CHINA**
Room 403, No.2, Huadu Mansion, Lane 422, Huanghua Rd.
Minhang Dist. - 201103 Shanghai
Tel. +86 (0)21 33 53 66 31
Fax +86 (0)21 33 53 66 32
www.lfspareparts724.com
www.lfspareparts724.mobi
china@lfspareparts.com
-  **OOO LF RUSSIAN FEDERATION**
Ul. Anatoliya Zhivova, 8 - office 1 - 123100 Moscow
Tel./Fax +7 495 725 26 53
www.lfspareparts724.ru
www.lfspareparts724.mobi
info@lfspareparts.ru
-  **LF Repuestos Horeca S.L.U. SPAIN**
Poligono Industrial Carpetania - C/Miguel Faraday, 8 - 28906 Getafe
Tel. +34 91 477 91 00
Fax +34 91 477 90 81
www.lfrepuestos-horeca724.es
www.lfrepuestos724.mobi
info@lfrepuestos.es
-  **LF SpA Cesena (IT) Swiss Branch Steinhausen SWITZERLAND**
Sennweidstrasse, 45 - CH-6312 Steinhausen
Tel. +41 (0)41 760 15 80-1
Fax +41 (0)41 760 15 85
www.lfersatzteile724.ch
www.lfersatzteile724.mobi
info@lfersatzteile.ch
-  **LF Spare Parts Ltd. UNITED KINGDOM**
A10a Lakeside Business Park, Broadway Lane
South Cerney, Gloucestershire GL7 5XL
Tel. +44 (0)1285 86 16 25
Fax +44 (0)1285 86 39 49
www.lfspareparts724.co.uk
www.lfspareparts724.mobi
info@lfspareparts.co.uk
-
-  **AUSTRALIA AND NEW ZEALAND**
www.lfspareparts724.com
andrea.calvio@lfspareparts.com
-  **AUSTRIA**
www.lfersatzteile724.at
info@lfersatzteile.at
-  **BALKAN COUNTRIES**
www.lfspareparts724.com
matija.ramov@lfspareparts.com
-  **BALTIC COUNTRIES**
www.lfspareparts724.com
inara.silina@lfspareparts.com
-  **CENTRAL AND EASTERN EUROPE**
www.lfspareparts724.cz
jiri.kremla@lfspareparts.cz
-  **DENMARK**
www.lfspareparts724.dk
michael.leth@lfspareparts.com
-  **JAPAN**
www.lfspareparts724.jp
hiroshi.ukai@lfspareparts.jp
-  **SOUTH KOREA**
www.lfspareparts724.com
fabio.doni@lfspareparts.com
-  **TURKEY**
www.lfyedekparca724.com
basar.ergun@lfyedekparca.com
-  **USA AND CANADA**
www.lfspareparts724.us
sauro.dallaglio@lfspareparts.us
howard.truitt@lfspareparts.us