



Spare parts for the professional sector: Coffee grinders



Suitable for:

QUAMAR



 
This catalogue is automatically generated.
Therefore, the sequence of the items might
not be always shown at best.
Updates will be issued in case of additions
and/or amendments.

Suitable universal spare parts may not be included





GRINDER ASSEMBLY M1

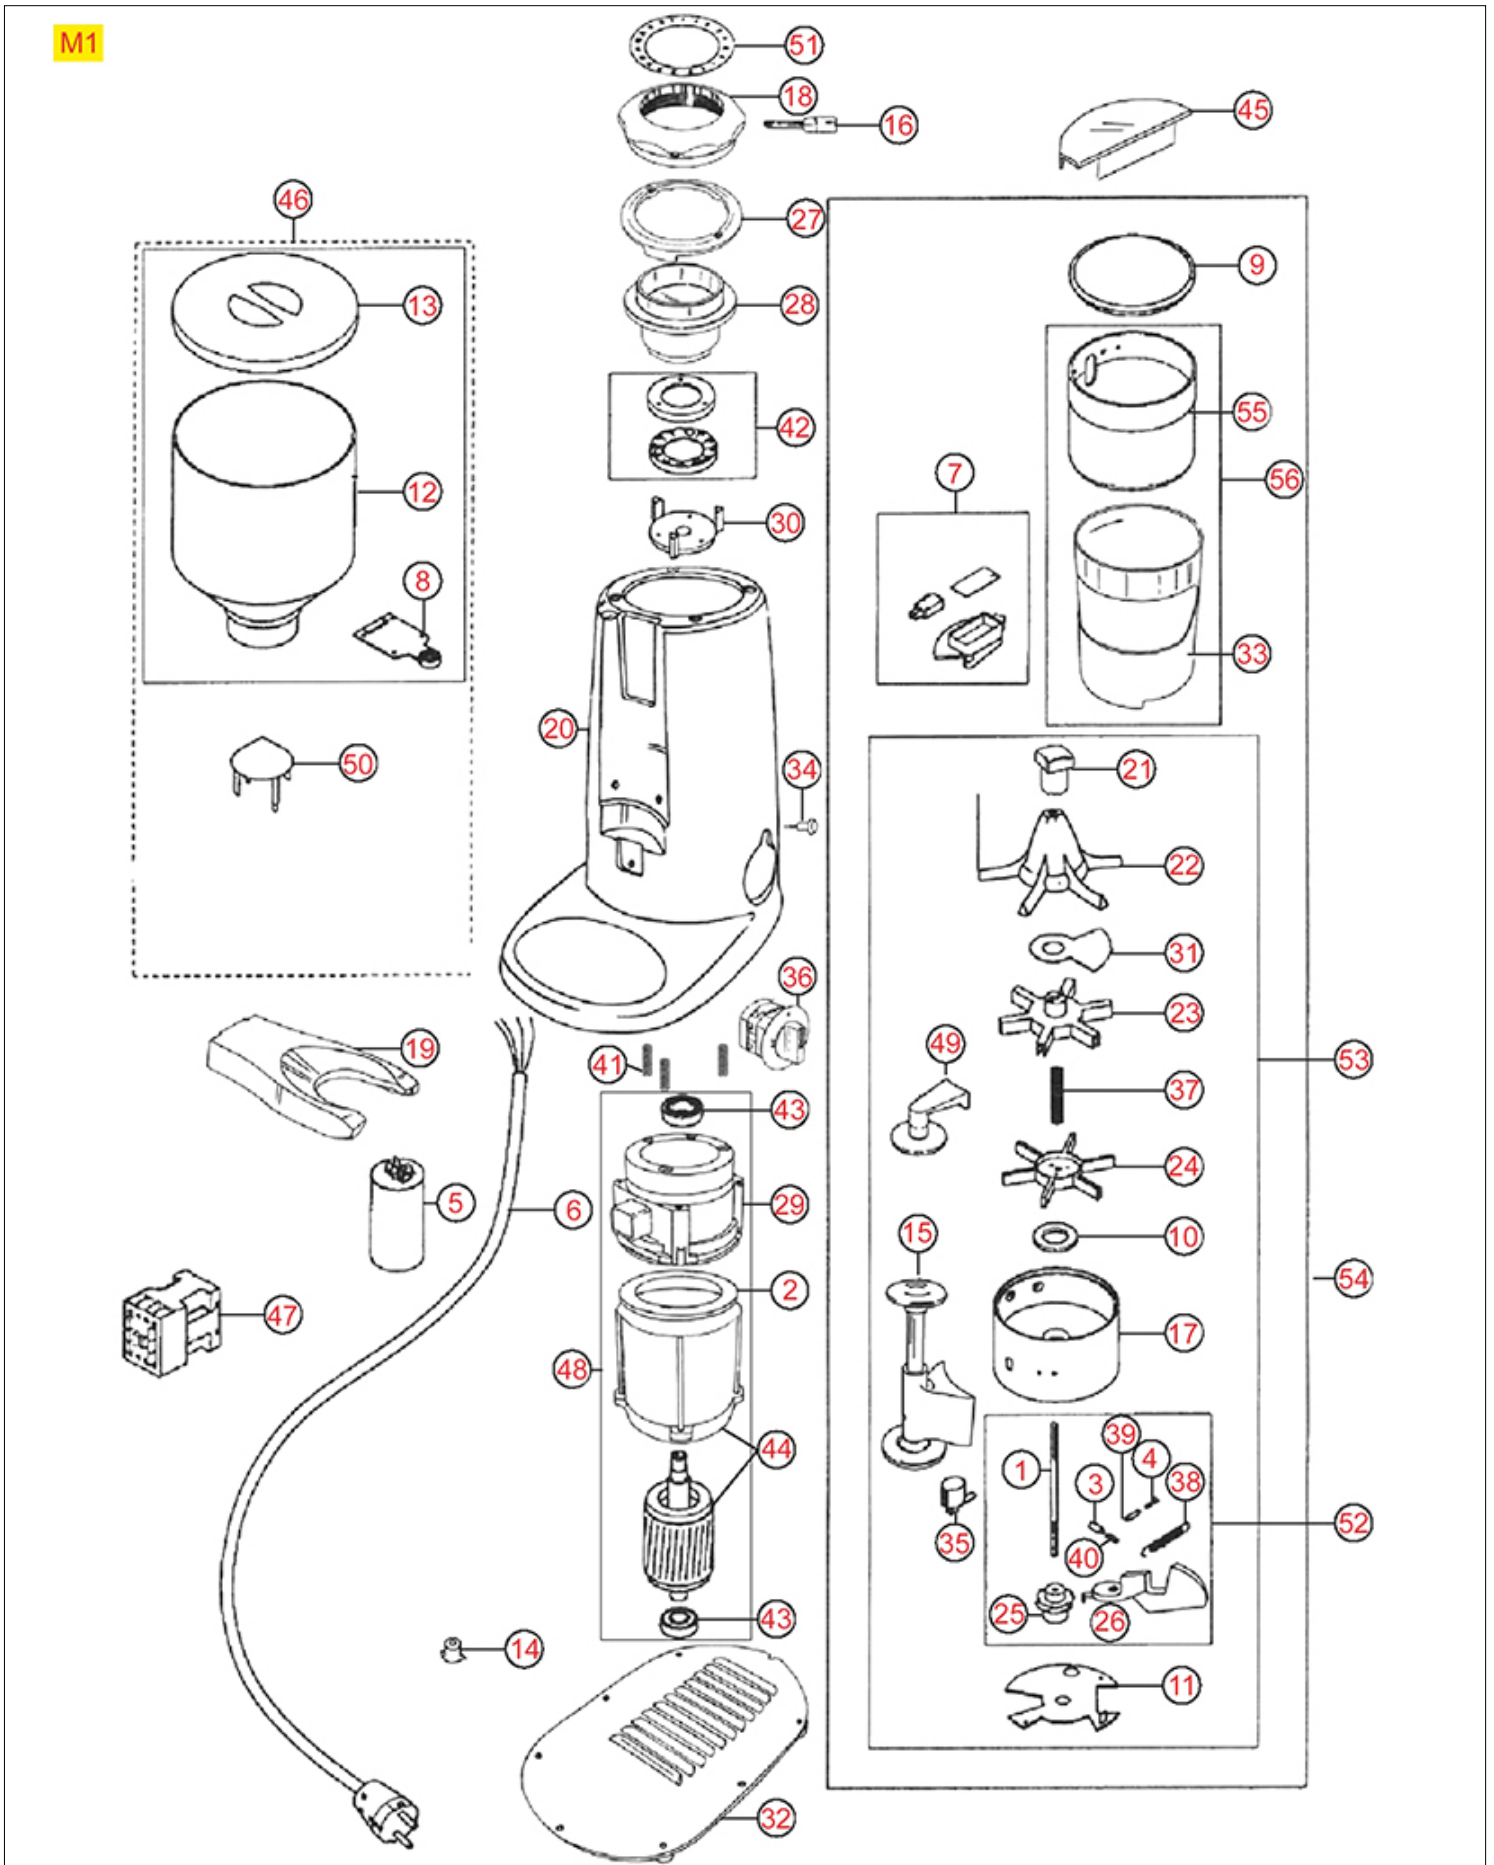

Positions without LF code no.: upon request




QUAMAR



Position	LF code no.	Description
1	1324908	PIN FOR DISPENSER T80/T48
3	1252130	FEEDING PAL D6
5	3068084	CAPACITOR ELECTRICAL 20 μ F
7	1252151	AUTOMATIC BOX ASSEMBLY
8	1252117	COFFEE HOPPER CLOSING SHEET
9	1252150	DISPENSER LID
10	1252138	DOSER PLASTIC WASHER
11	1252134	DOSER LOWER LID
12	1080921	COFFEE CONTAINER 1.5Kg \varnothing 200 mm
13	1252116	COFFEE HOPPER LID \varnothing 205 mm
14	1313911	FOOT \varnothing 19x13 mm MADE OF RUBBER
30	1251936	LOWER BURRS HOLDER \varnothing 63 mm
35	1252139	GRINDER-DOSER COUNTER
37	1250961	DOSING SYSTEM SPRING
38	1250962	DISPENSER LEVER RETURN SPRING
39	1250964	DISPENSER CATCH RATCHET SPRING
40	1250963	FEEDING SPRING FOR DISPENSER
42	1251078	GRINDING BURRS FIORENZATO CS/QUAMAR RH
42	1251185	GRINDING BURRS FIORENZATO MS/QUAMAR RH
43	1063911	BEARING 6202 ZZ NSK
47	1454902	CONTACTOR LOVATO BG0910A
47	3446556	CONTACTOR LOVATO BG0910A
50	1252147	COFFEE HOPPER INNER PROTECTION
55	1520902	DISPENSER CYLINDER



 GRINDER ASSEMBLY M80 OLD

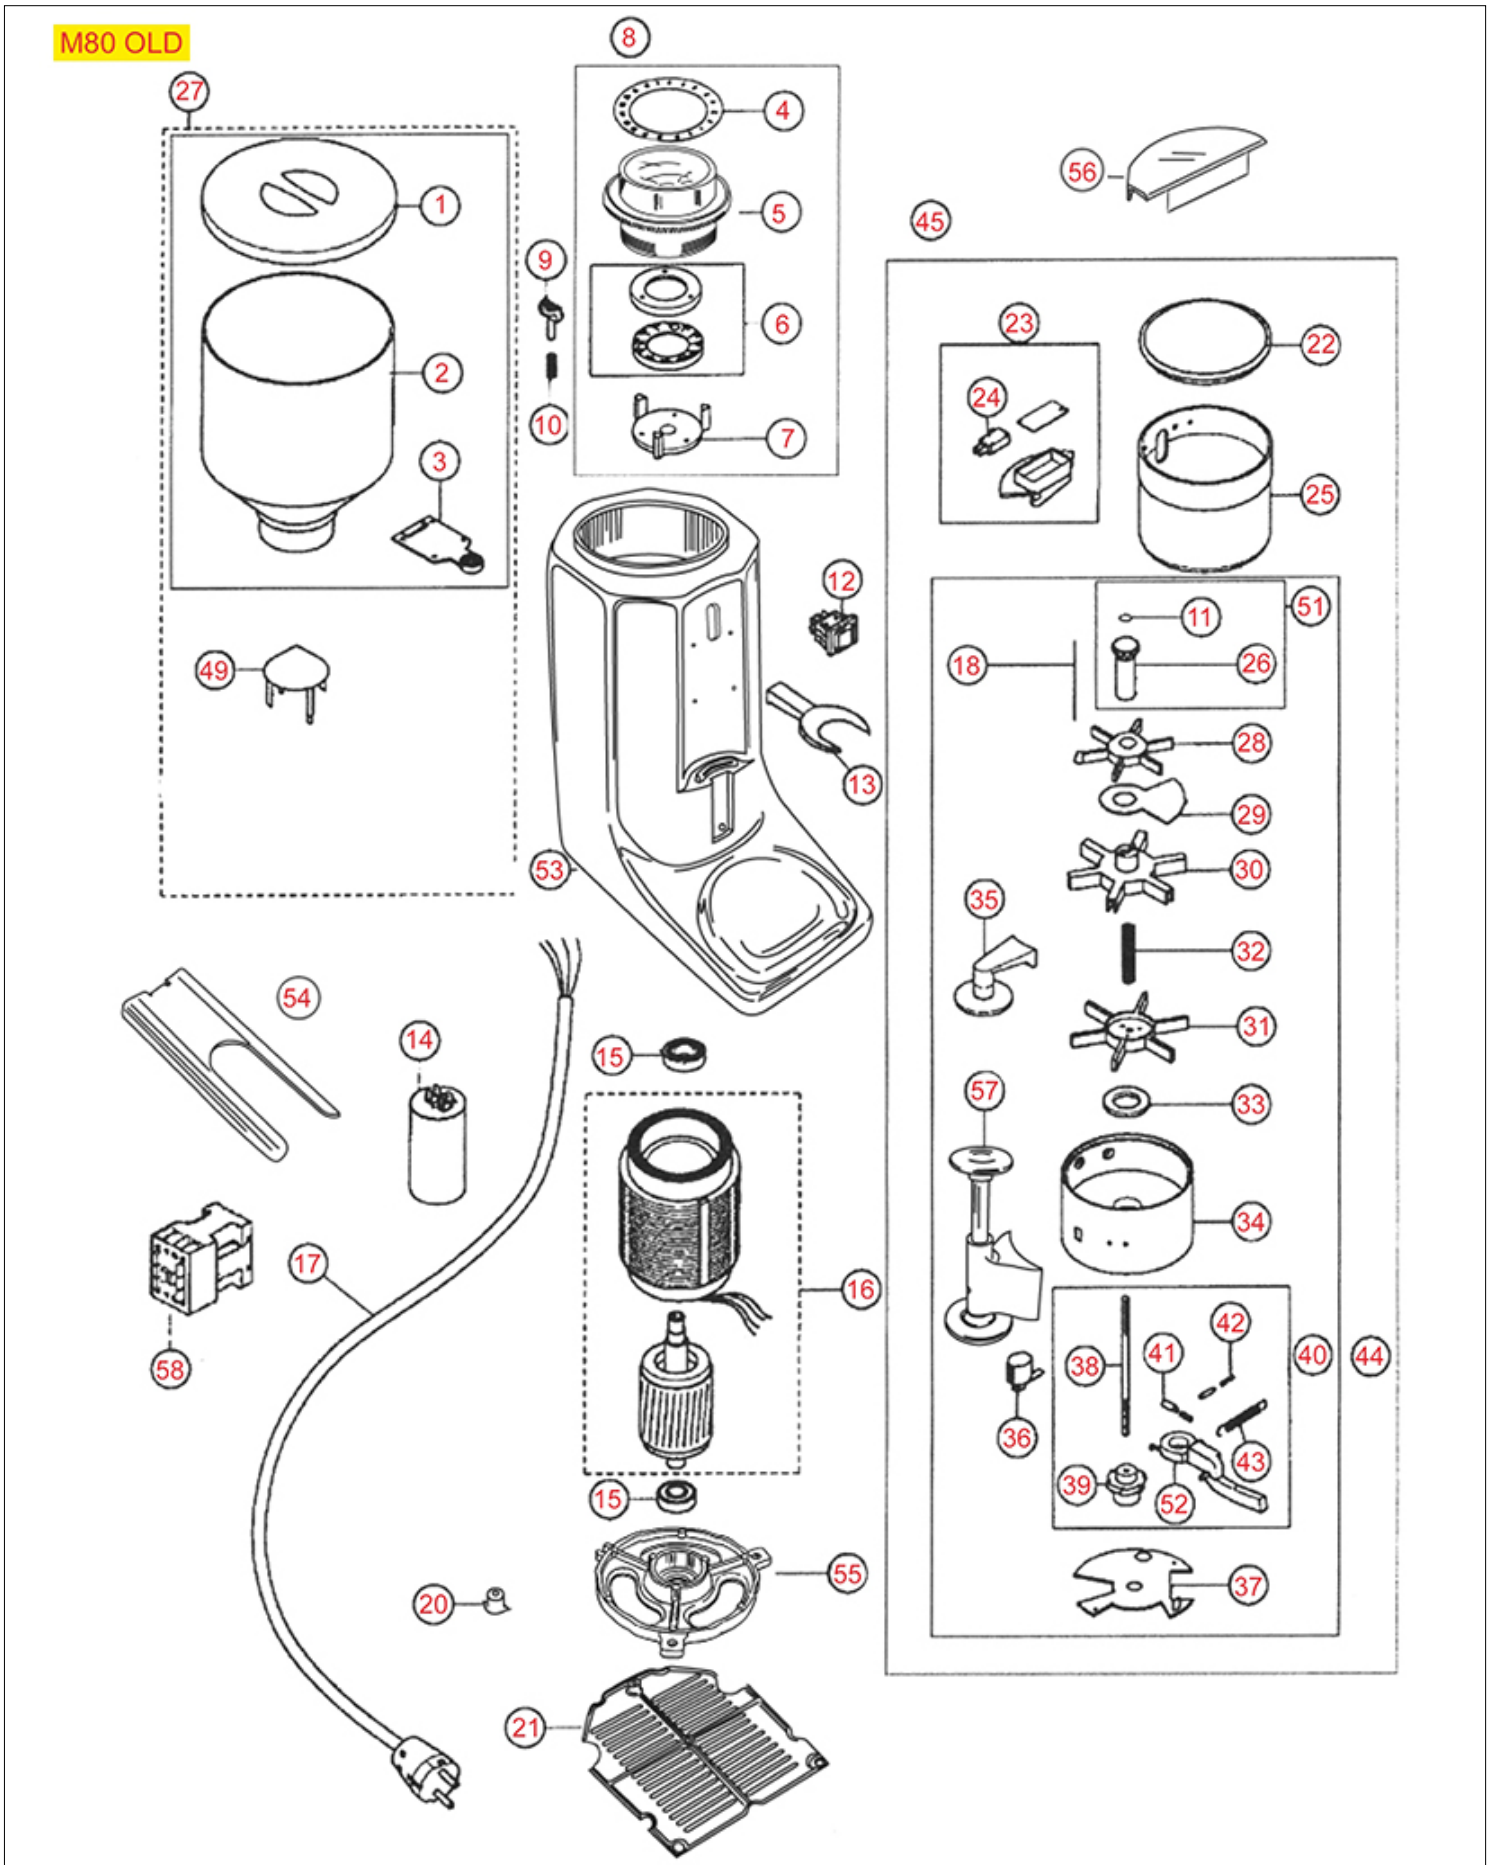

Positions without LF code no.: upon request




QUAMAR



Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
6	1251078	GRINDING BURRS FIORENZATO CS/QUAMAR RH
7	1251936	LOWER BURRS HOLDER ø 63 mm
9	1252144	RING-RETAINING RATCHET
10	1250966	RING CATCH SPRING
12	3319012	BIPOLAR SWITCH GREEN 16A 250V
12	3319016	BIPOLAR SWITCH RED 16A 250V
12	3319501	PUSH-BUTTON PROTECTION CAP
13	1252121	FILTER HOLDER FORK
14	3068084	CAPACITOR ELECTRICAL 20µF
15	1063911	BEARING 6202 ZZ NSK
20	1313921	FOOT FOR MIXER
22	1252150	DISPENSER LID
23	1252151	AUTOMATIC BOX ASSEMBLY
25	1520902	DISPENSER CYLINDER
26	1252118	MIXER KNOB
28	1252126	STIRRING WHEEL T48
29	1252127	CLOSING SECTOR
30	1343911	UPPER STAR NEW MODEL
31	1343912	LOWER STAR NEW MODEL
32	1250961	DOSING SYSTEM SPRING
33	1252138	DOSER PLASTIC WASHER
35	1385546	COFFEE TAMPER ø 56 mm
36	1252139	GRINDER-DOSER COUNTER
37	1252134	DOSER LOWER LID
39	1252137	DOSER PAWL RH
40	1252133	COMPLETE DOSER LEVER
41	1250963	FEEDING SPRING FOR DISPENSER
41	1252130	FEEDING PAL D6
42	1250964	DISPENSER CATCH RATCHET SPRING
43	1250962	DISPENSER LEVER RETURN SPRING
49	1252147	COFFEE HOPPER INNER PROTECTION
51	1252118	MIXER KNOB
52	1252132	DOSER LEVER
58	1454902	CONTACTOR LOVATO BG0910A
58	3446556	CONTACTOR LOVATO BG0910A



 GRINDER ASSEMBLY M80 TOP

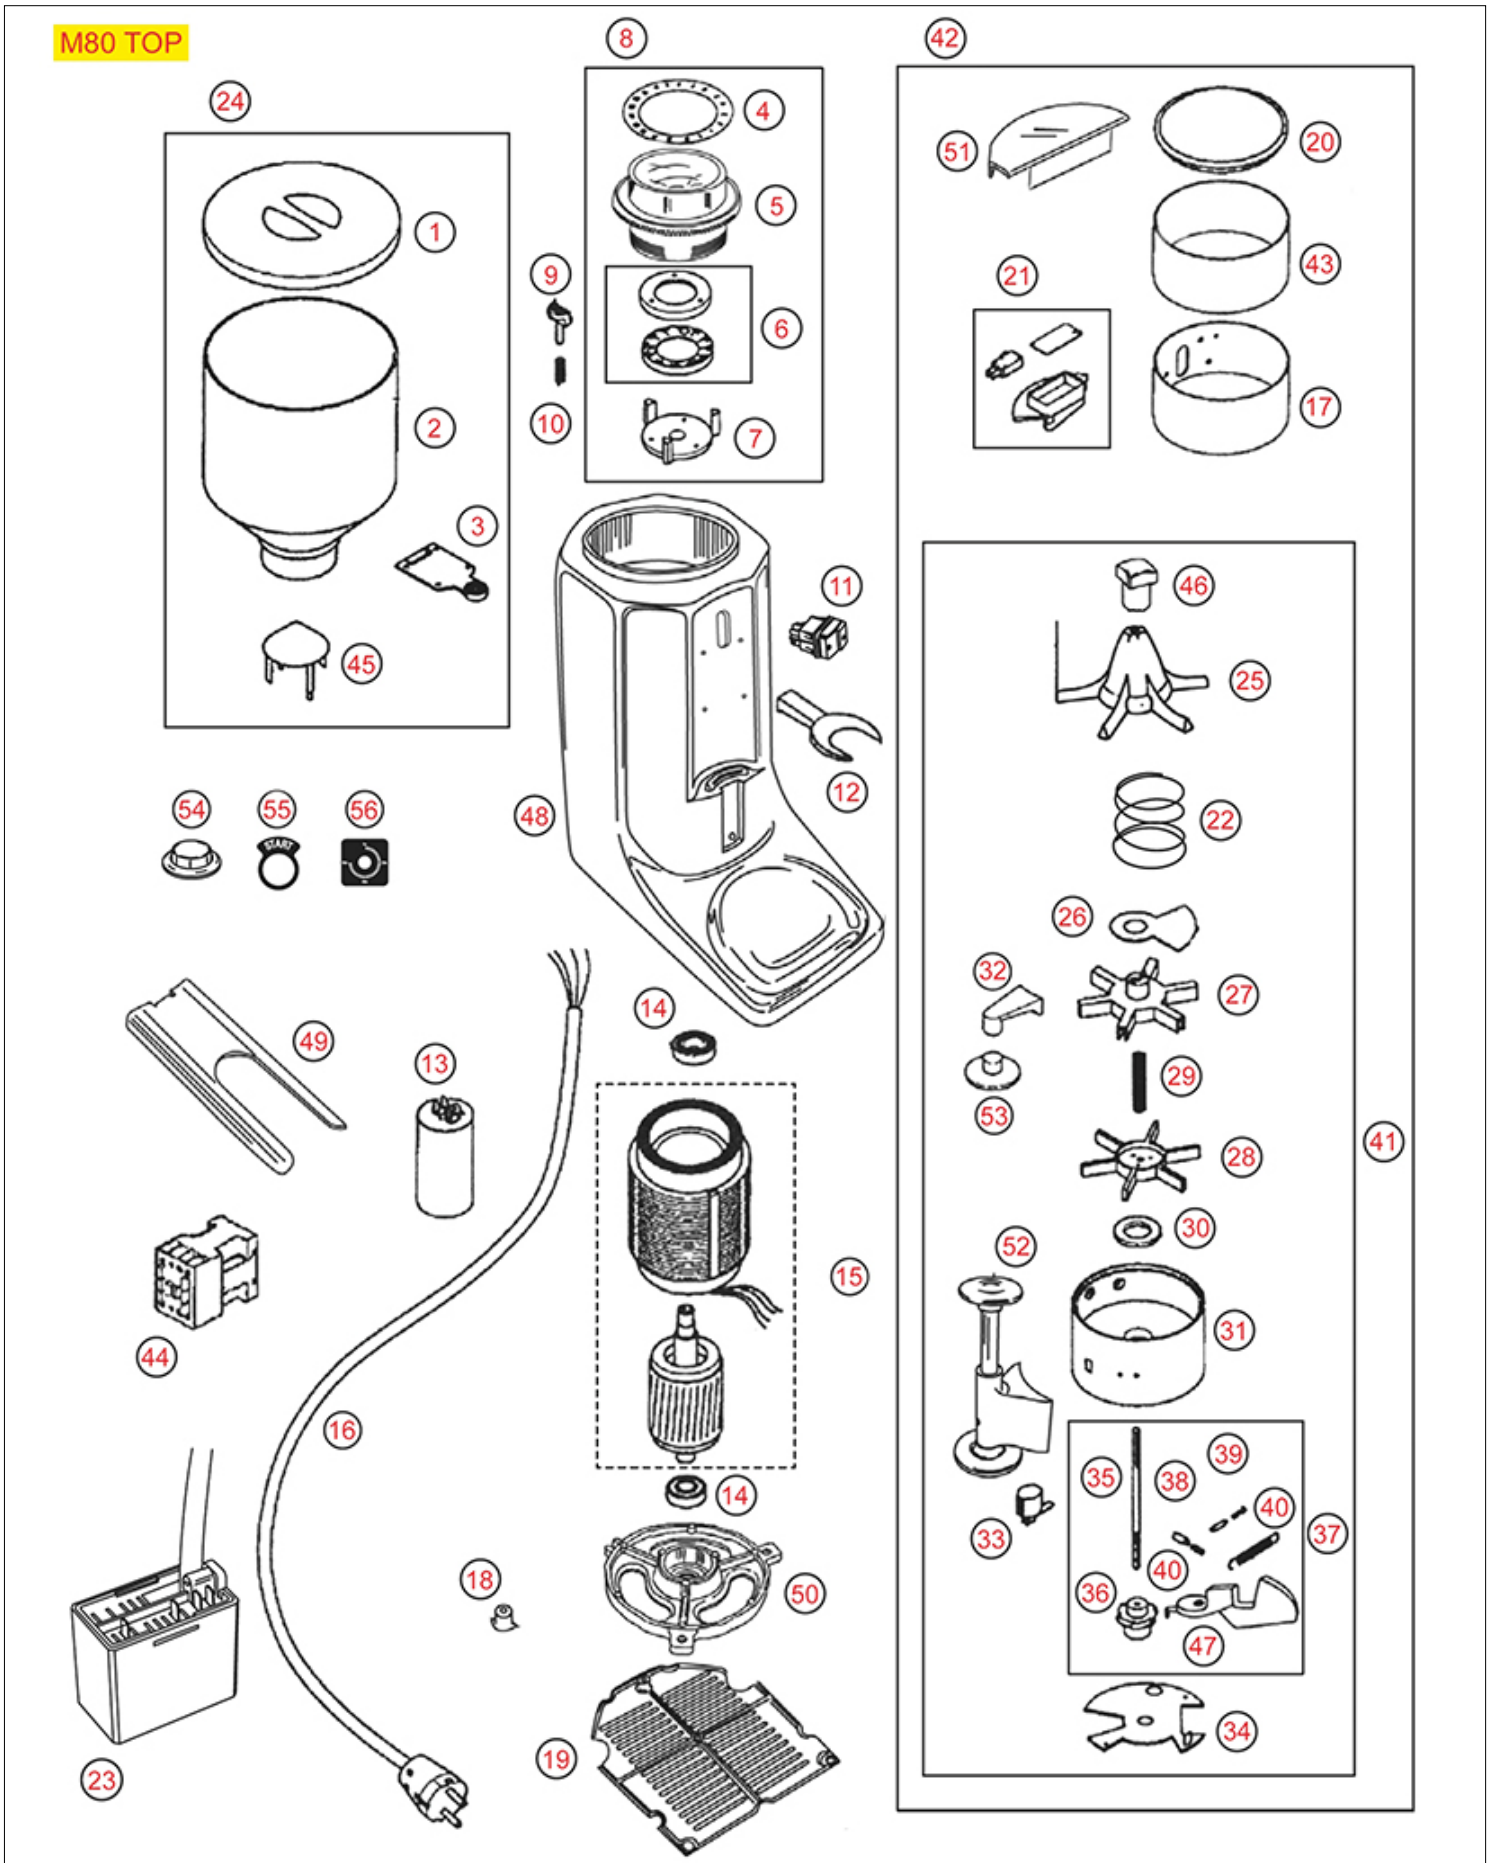

Positions without LF code no.: upon request



QUAMAR




Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
6	1251078	GRINDING BURRS FIORENZATO CS/QUAMAR RH
7	1251936	LOWER BURRS HOLDER ø 63 mm
9	1252144	RING-RETAINING RATCHET
10	1250966	RING CATCH SPRING
12	1252121	FILTER HOLDER FORK
13	3068084	CAPACITOR ELECTRICAL 20µF
14	1063911	BEARING 6202 ZZ NSK
20	1252150	DISPENSER LID
21	1252151	AUTOMATIC BOX ASSEMBLY
33	1252139	GRINDER-DOSER COUNTER
35	1324908	PIN FOR DISPENSER T80/T48
36	1252137	DOSER PAWL RH
37	1252133	COMPLETE DOSER LEVER
38	1250963	FEEDING SPRING FOR DISPENSER
38	1252130	FEEDING PAL D6
39	1250964	DISPENSER CATCH RATCHET SPRING
40	1250962	DISPENSER LEVER RETURN SPRING
44	1454902	CONTACTOR LOVATO BG0910A
44	3446556	CONTACTOR LOVATO BG0910A
45	1252147	COFFEE HOPPER INNER PROTECTION
53	1385546	COFFEE TAMPER ø 56 mm



GRINDER ASSEMBLY M80

 M80 A/M/T

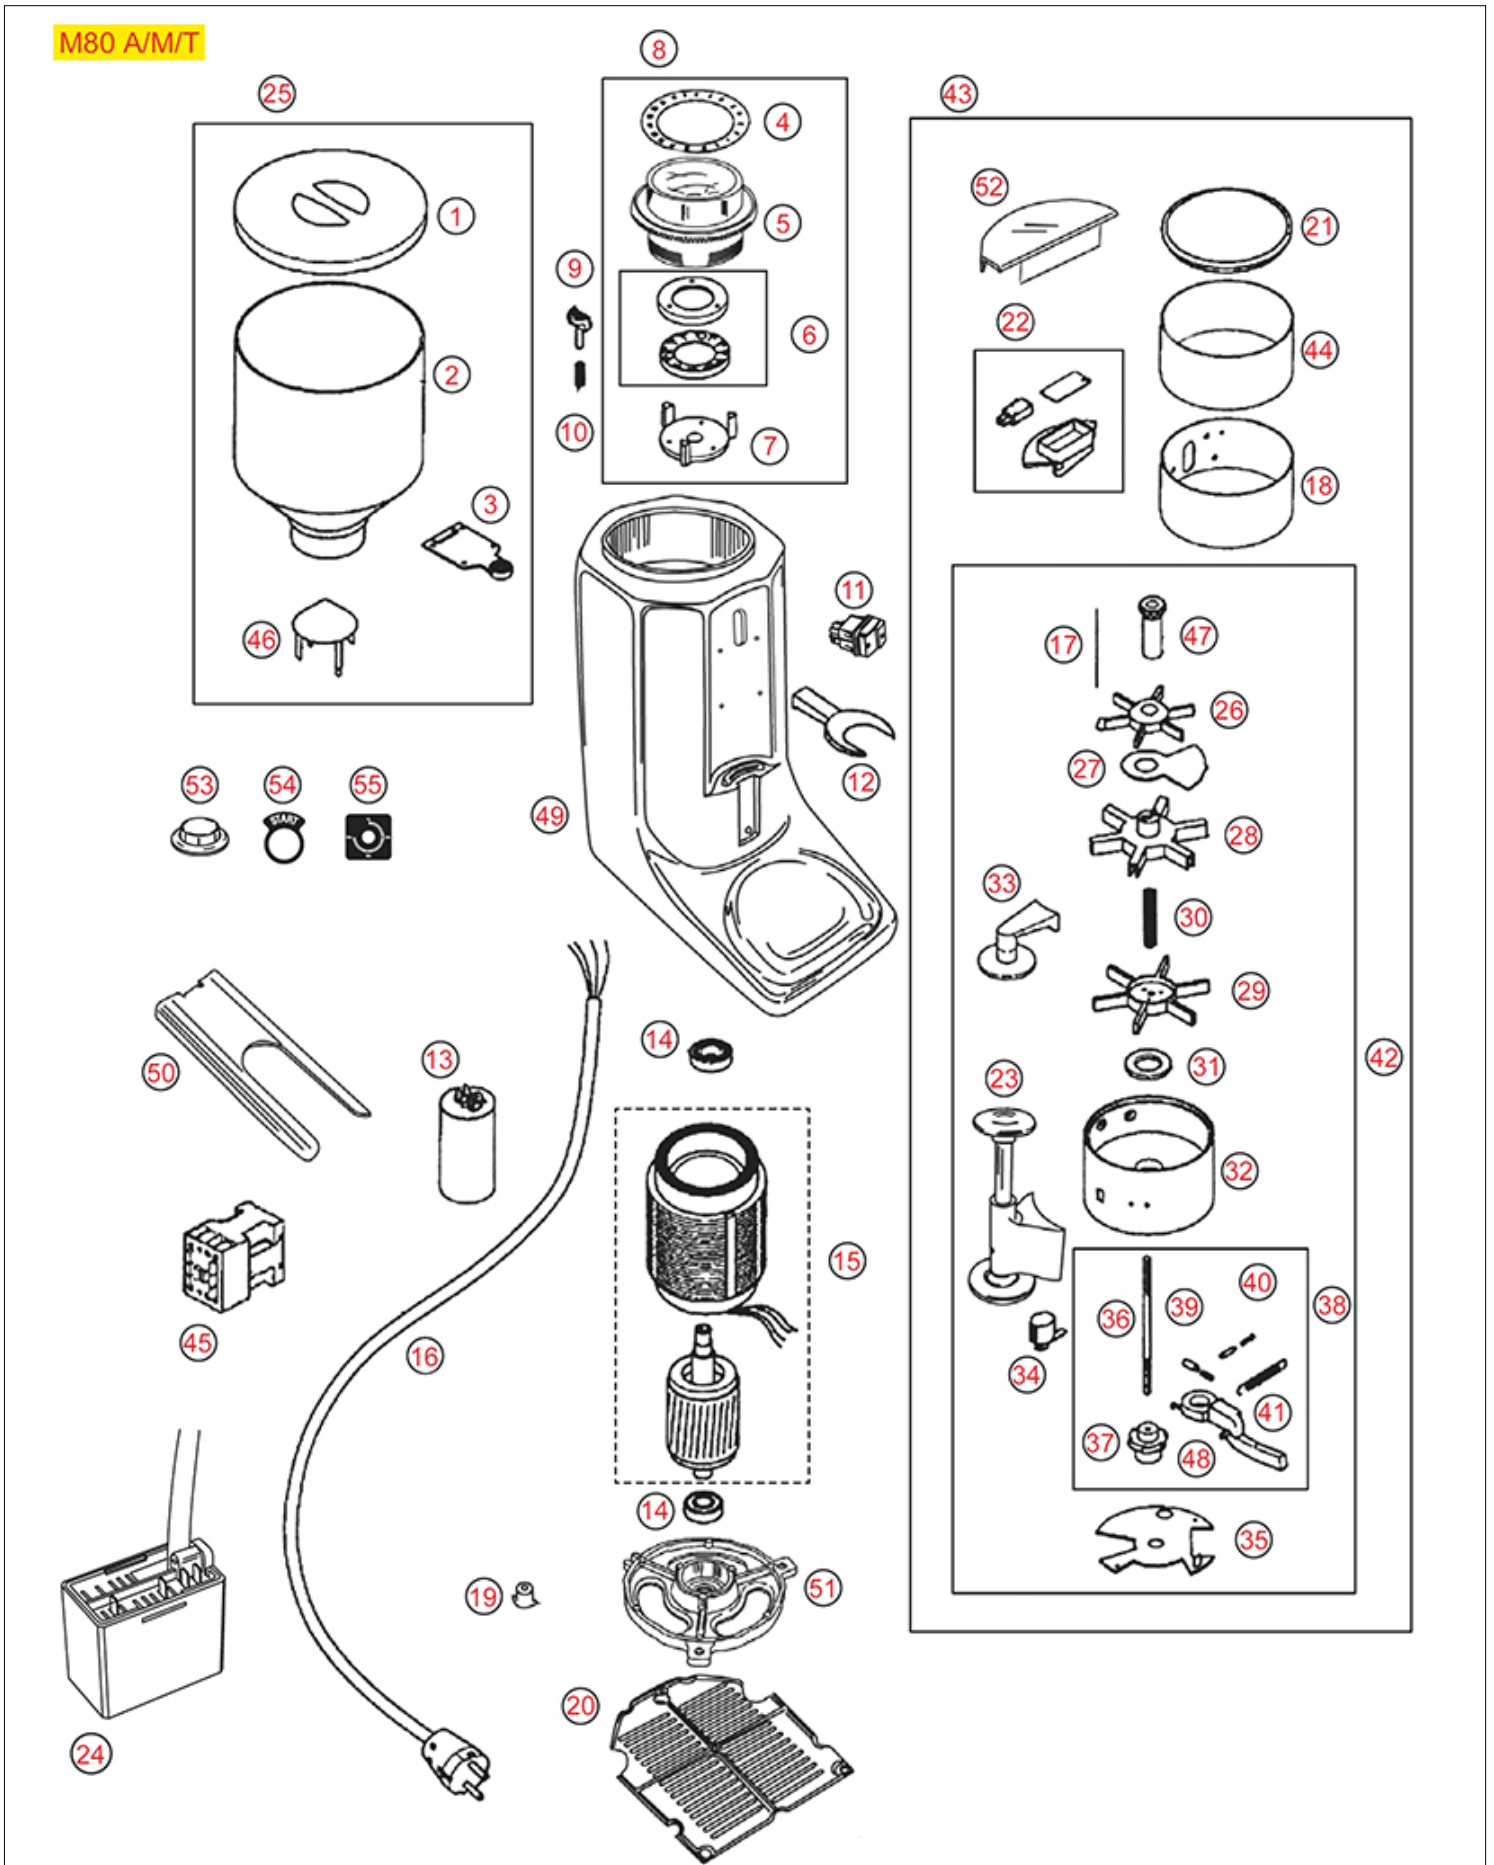

Positions without LF code no.: upon request



QUAMAR




Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
6	1251078	GRINDING BURRS FIORENZATO CS/QUAMAR RH
7	1251936	LOWER BURRS HOLDER ø 63 mm
9	1252144	RING-RETAINING RATCHET
10	1250966	RING CATCH SPRING
12	1252121	FILTER HOLDER FORK
13	3068084	CAPACITOR ELECTRICAL 20µF
14	1063911	BEARING 6202 ZZ NSK
21	1252150	DISPENSER LID
22	1252151	AUTOMATIC BOX ASSEMBLY
26	1252126	STIRRING WHEEL T48
28	1343911	UPPER STAR NEW MODEL
29	1343912	LOWER STAR NEW MODEL
30	1250961	DOSING SYSTEM SPRING
31	1252138	DOSER PLASTIC WASHER
33	1385546	COFFEE TAMPER ø 56 mm
34	1252139	GRINDER-DOSER COUNTER
35	1252134	DOSER LOWER LID
36	1324908	PIN FOR DISPENSER T80/T48
37	1252137	DOSER PAWL RH
38	1252133	COMPLETE DOSER LEVER
39	1250963	FEEDING SPRING FOR DISPENSER
39	1252130	FEEDING PAL D6
40	1250964	DISPENSER CATCH RATCHET SPRING
41	1250962	DISPENSER LEVER RETURN SPRING
45	1454902	CONTACTOR LOVATO BG0910A
45	3446556	CONTACTOR LOVATO BG0910A
46	1252147	COFFEE HOPPER INNER PROTECTION
47	1252118	MIXER KNOB
48	1252132	DOSER LEVER



GRINDER ASSEMBLY T80

 T80

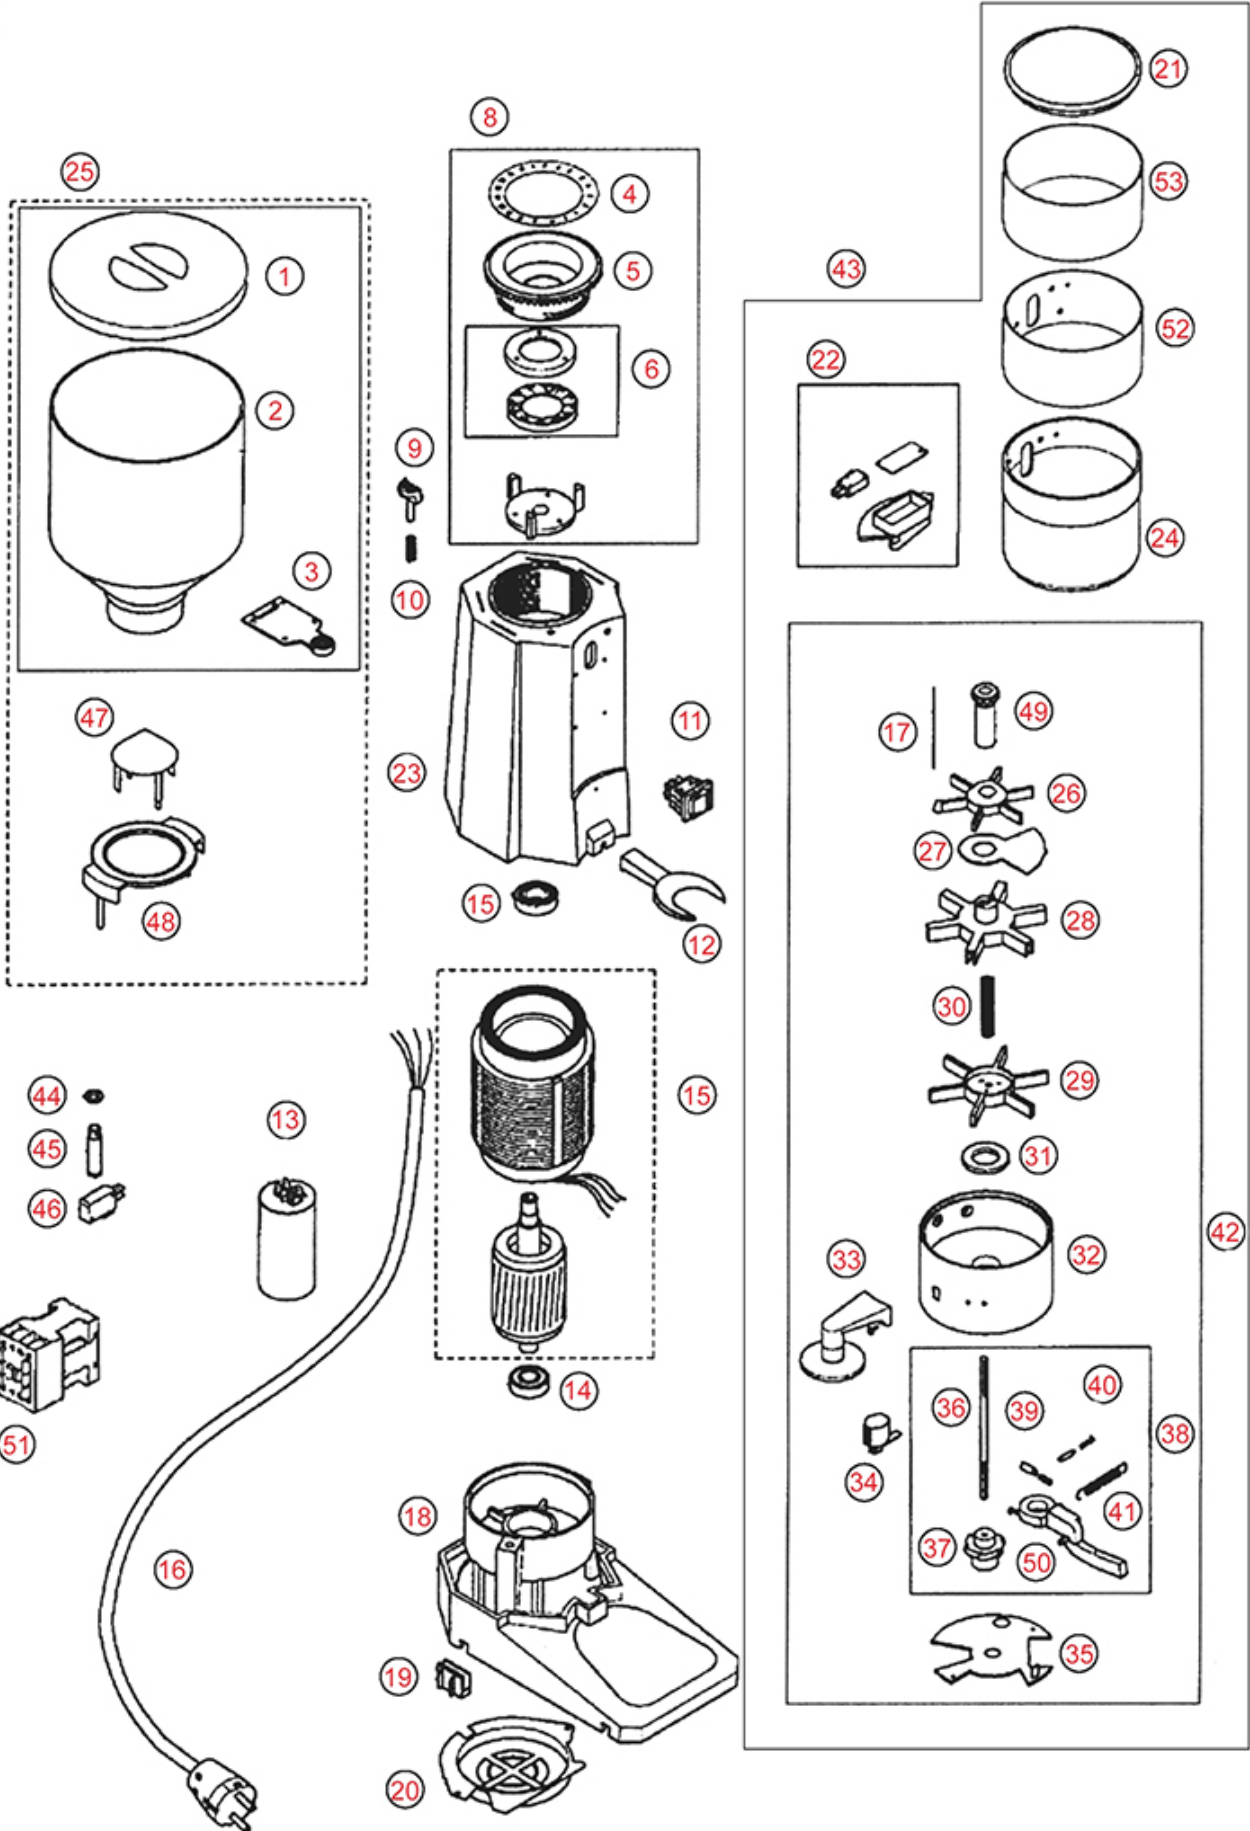

Positions without LF code no.: upon request




QUAMAR



Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
4	1252142	GRIND SELECTION LABEL
5	1252143	UPPER GRINDER BURRS RING NUT
6	1251078	GRINDING BURRS FIORENTINO CS/QUAMAR RH
7	1251936	LOWER BURRS HOLDER ø 63 mm
9	1252144	RING-RETAINING RATCHET
10	1250966	RING CATCH SPRING
11	3319012	BIPOLAR SWITCH GREEN 16A 250V
12	1252121	FILTER HOLDER FORK
13	3068083	CAPACITOR ELECTRICAL 16µF
13	3068084	CAPACITOR ELECTRICAL 20µF
14	1063911	BEARING 6202 ZZ NSK
19	1313912	FOOT T80
21	1252150	DISPENSER LID
22	1252151	AUTOMATIC BOX ASSEMBLY
24	1520902	DISPENSER CYLINDER
25	1080927	COMPLETE COFFEE HOPPER
26	1252126	STIRRING WHEEL T48
27	1252127	CLOSING SECTOR
28	1343911	UPPER STAR NEW MODEL
29	1343912	LOWER STAR NEW MODEL
30	1250961	DOSING SYSTEM SPRING
31	1252138	DOSER PLASTIC WASHER
33	1385546	COFFEE TAMPER ø 56 mm
34	1252139	GRINDER-DOSER COUNTER
35	1252134	DOSER LOWER LID
36	1324908	PIN FOR DISPENSER T80/T48
37	1252137	DOSER PAWL RH
38	1252133	COMPLETE DOSER LEVER
39	1250963	FEEDING SPRING FOR DISPENSER
39	1252130	FEEDING PAL D6
40	1250964	DISPENSER CATCH RATCHET SPRING
41	1250962	DISPENSER LEVER RETURN SPRING
46	1240949	MICROSWITCH ROLD
47	1252147	COFFEE HOPPER INNER PROTECTION
48	1252148	COFFEE HOPPER INNER PROTECTION
49	1252118	MIXER KNOB
50	1252132	DOSER LEVER
51	1454902	CONTACTOR LOVATO BG0910A
51	3446556	CONTACTOR LOVATO BG0910A



 GRINDER ASSEMBLY T48

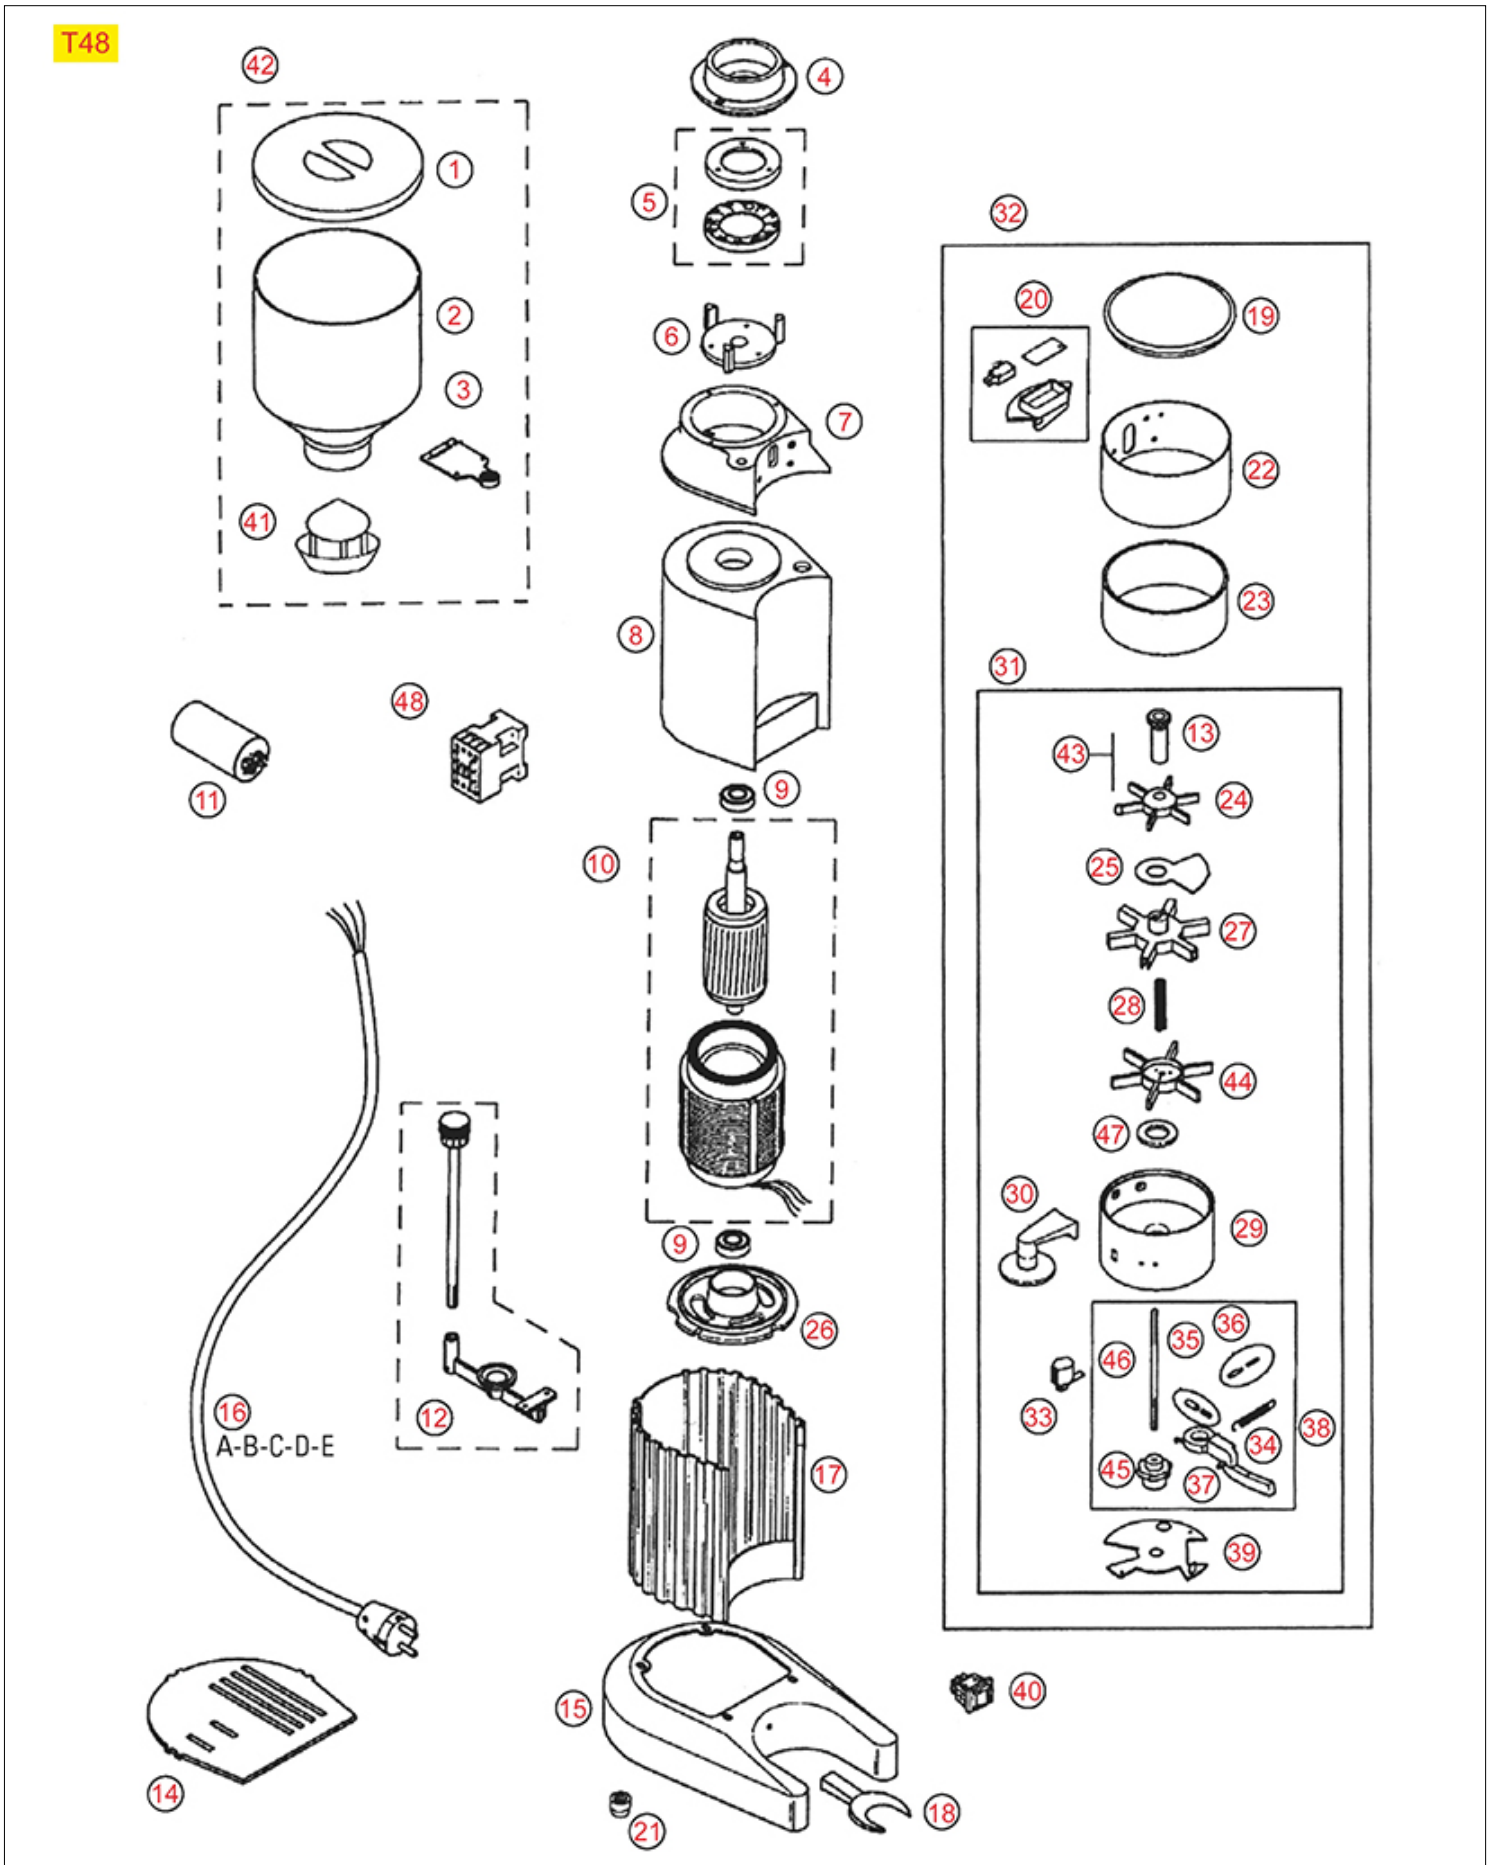

Positions without LF code no.: upon request



QUAMAR




Position	LF code no.	Description
1	1252116	COFFEE HOPPER LID ø 205 mm
2	1080921	COFFEE CONTAINER 1.5Kg ø 200 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
5	1251052	GRINDING BURRS FIORENTINO MS (PAIR) RH
6	1251932	LOWER BURRS HOLDER
9	1063906	BEARING 6203 ZZ NSK
11	3068083	CAPACITOR ELECTRICAL 16µF
13	1252118	MIXER KNOB
18	1252121	FILTER HOLDER FORK
19	1252122	DOSER LID
20	1252123	AUTOMATIC T48 BOX ASSEMBLY
21	1313911	FOOT ø 19x13 mm MADE OF RUBBER
23	1520901	DOSER CYLINDER
24	1252126	STIRRING WHEEL T48
25	1252127	CLOSING SECTOR
27	1343911	UPPER STAR NEW MODEL
28	1250961	DOSING SYSTEM SPRING
29	1252129	DOSER CYLINDER SUPPORT
30	1385546	COFFEE TAMPER ø 56 mm
33	1252139	GRINDER-DOSER COUNTER
34	1250962	DISPENSER LEVER RETURN SPRING
35	1250963	FEEDING SPRING FOR DISPENSER
35	1252130	FEEDING PAL D6
36	1250964	DISPENSER CATCH RATCHET SPRING
37	1252132	DOSER LEVER
38	1252133	COMPLETE DOSER LEVER
39	1252134	DOSER LOWER LID
41	1252135	COFFEE HOPPER INNER PROTECTION
42	1080922	COMPLETE COFFEE HOPPER
44	1343912	LOWER STAR NEW MODEL
45	1252137	DOSER PAWL RH
46	1324908	PIN FOR DISPENSER T80/T48
47	1252138	DOSER PLASTIC WASHER
48	1454902	CONTACTOR LOVATO BG0910A
48	3446556	CONTACTOR LOVATO BG0910A



GRINDER ASSEMBLY T48 TOP

 T48 TOP

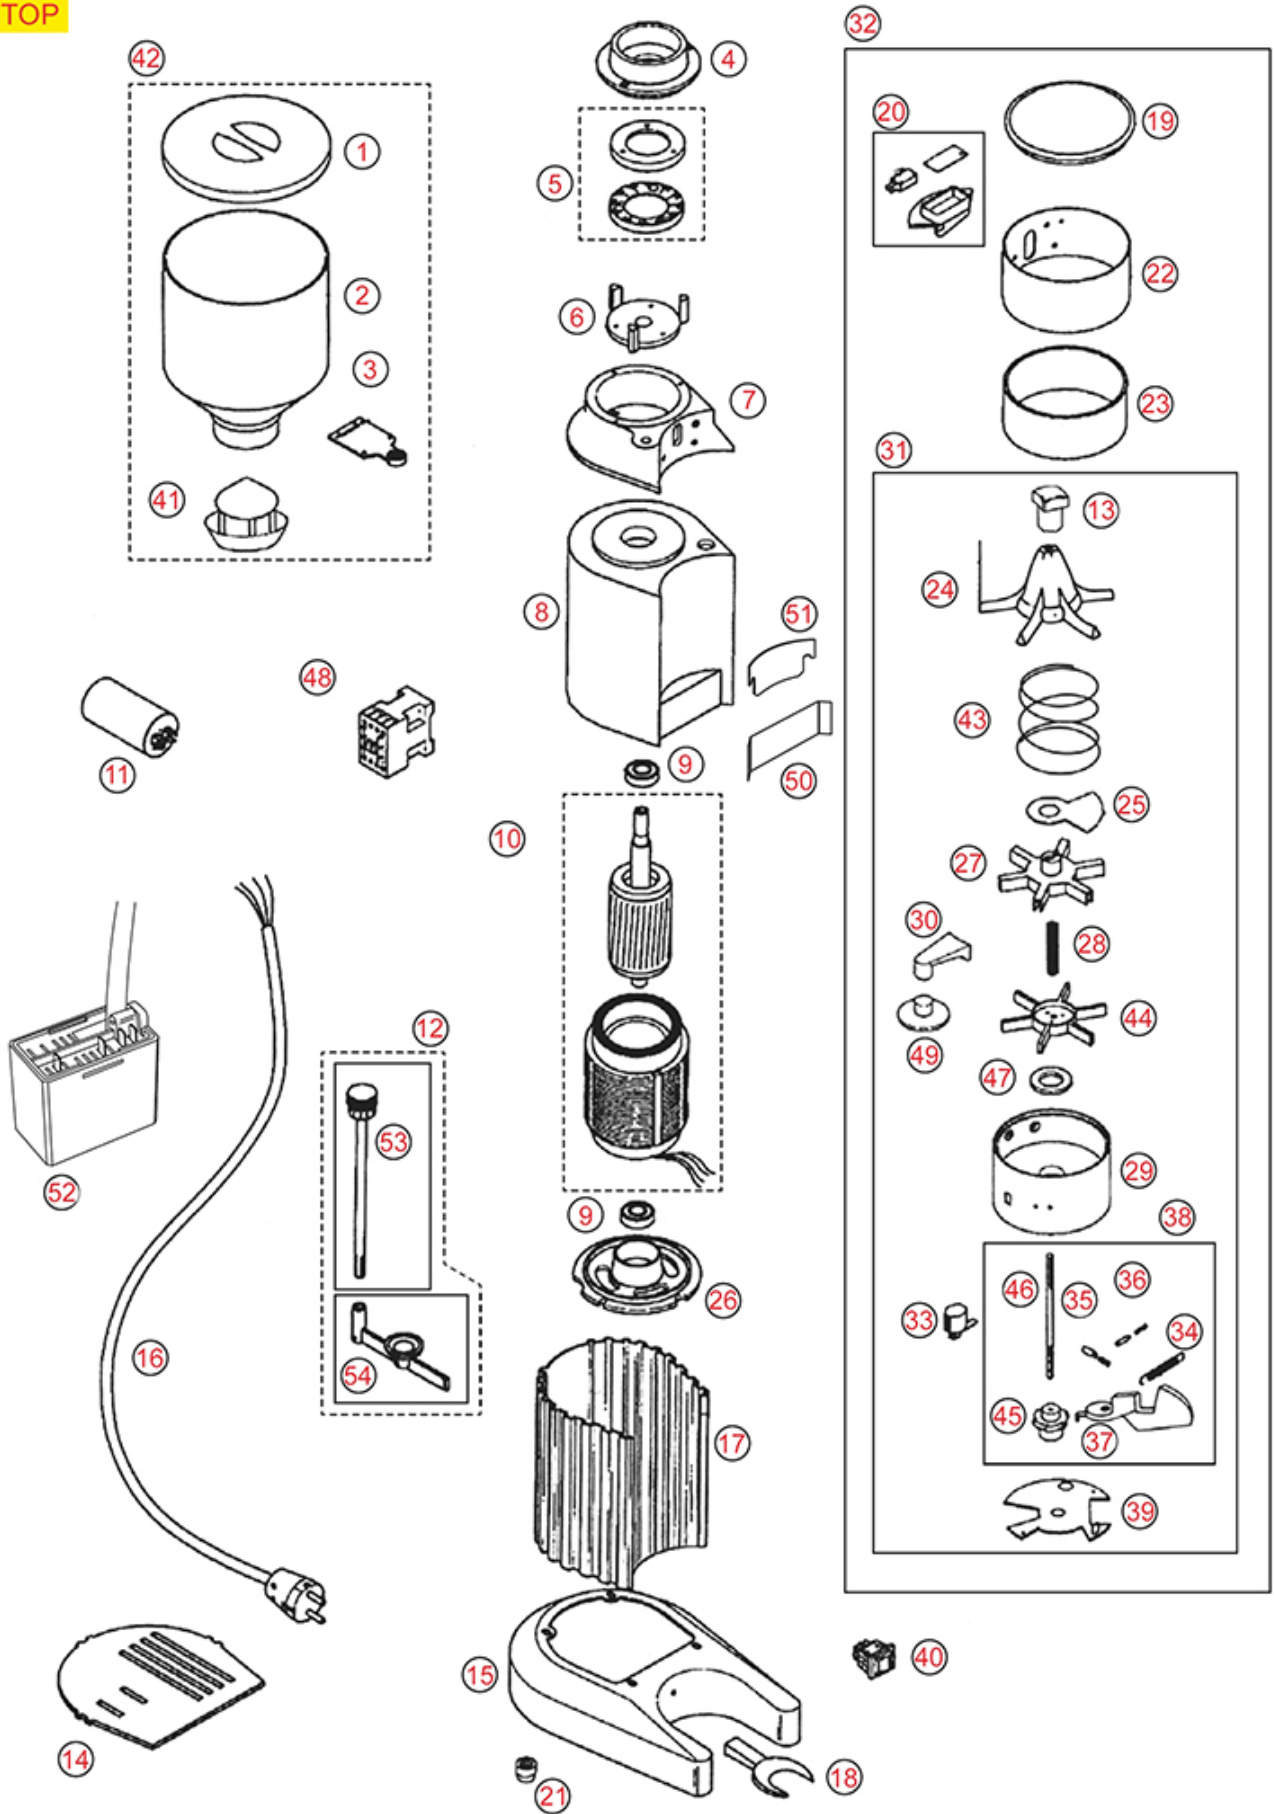



QUAMAR




Position	LF code no.	Description
1	1252116	COFFEE HOPPER LID ø 205 mm
2	1080921	COFFEE CONTAINER 1.5Kg ø 200 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
5	1251052	GRINDING BURRS FIORENTINO MS (PAIR) RH
6	1251932	LOWER BURRS HOLDER
9	1063906	BEARING 6203 ZZ NSK
11	3068083	CAPACITOR ELECTRICAL 16µF
18	1252121	FILTER HOLDER FORK
19	1252122	DOSER LID
20	1252123	AUTOMATIC T48 BOX ASSEMBLY
21	1313911	FOOT ø 19x13 mm MADE OF RUBBER
23	1520901	DOSER CYLINDER
33	1252139	GRINDER-DOSER COUNTER
34	1250962	DISPENSER LEVER RETURN SPRING
35	1250963	FEEDING SPRING FOR DISPENSER
35	1252130	FEEDING PAL D6
36	1250964	DISPENSER CATCH RATCHET SPRING
41	1252135	COFFEE HOPPER INNER PROTECTION
42	1080922	COMPLETE COFFEE HOPPER
46	1324908	PIN FOR DISPENSER T80/T48
48	1454902	CONTACTOR LOVATO BG0910A
48	3446556	CONTACTOR LOVATO BG0910A
49	1252137	DOSER PAWL RH
49	1385546	COFFEE TAMPER ø 56 mm



GRINDER ASSEMBLY Q13/75

 Q13/75

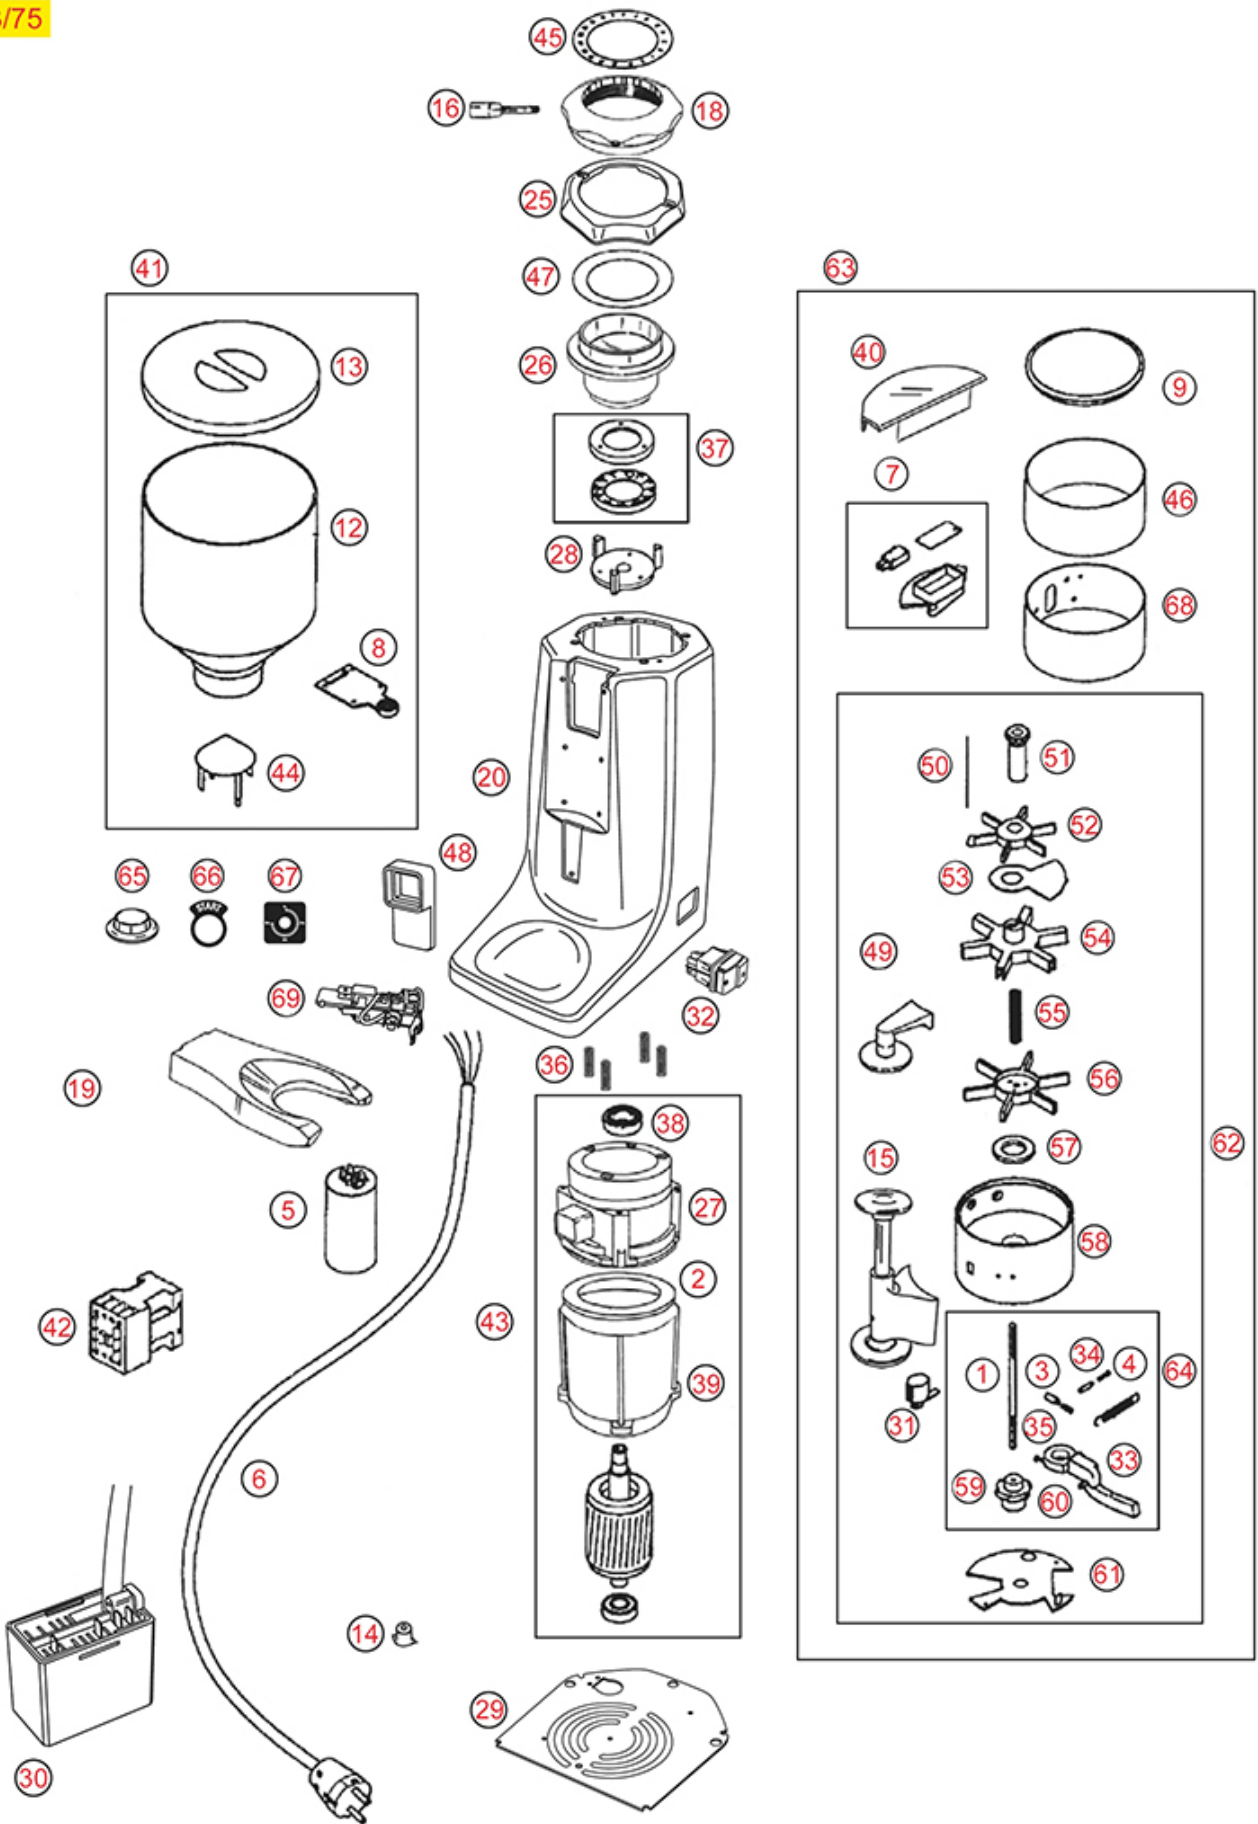

Positions without LF code no.: upon request



QUAMAR




Position	LF code no.	Description
1	1324908	PIN FOR DISPENSER T80/T48
3	1252130	FEEDING PAL D6
7	1252151	AUTOMATIC BOX ASSEMBLY
8	1252117	COFFEE HOPPER CLOSING SHEET
9	1252150	DISPENSER LID
12	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
13	1252141	COFFEE HOPPER LID ø 180 mm
31	1252139	GRINDER-DOSER COUNTER
33	1250962	DISPENSER LEVER RETURN SPRING
34	1250964	DISPENSER CATCH RATCHET SPRING
35	1250963	FEEDING SPRING FOR DISPENSER
37	1251185	GRINDING BURRS FIORENZATO MS/QUAMAR RH
38	1063911	BEARING 6202 ZZ NSK
42	1454902	CONTACTOR LOVATO BG0910A
42	3446556	CONTACTOR LOVATO BG0910A
44	1252147	COFFEE HOPPER INNER PROTECTION
49	1385546	COFFEE TAMPER ø 56 mm
51	1252118	MIXER KNOB
52	1252126	STIRRING WHEEL T48
54	1343911	UPPER STAR NEW MODEL
55	1250961	DOSING SYSTEM SPRING
56	1343912	LOWER STAR NEW MODEL
57	1252138	DOSER PLASTIC WASHER
59	1252137	DOSER PAWL RH
60	1252132	DOSER LEVER
61	1252134	DOSER LOWER LID
64	1252133	COMPLETE DOSER LEVER



GRINDER ASSEMBLY Q13 CONI

 Q13 CONI

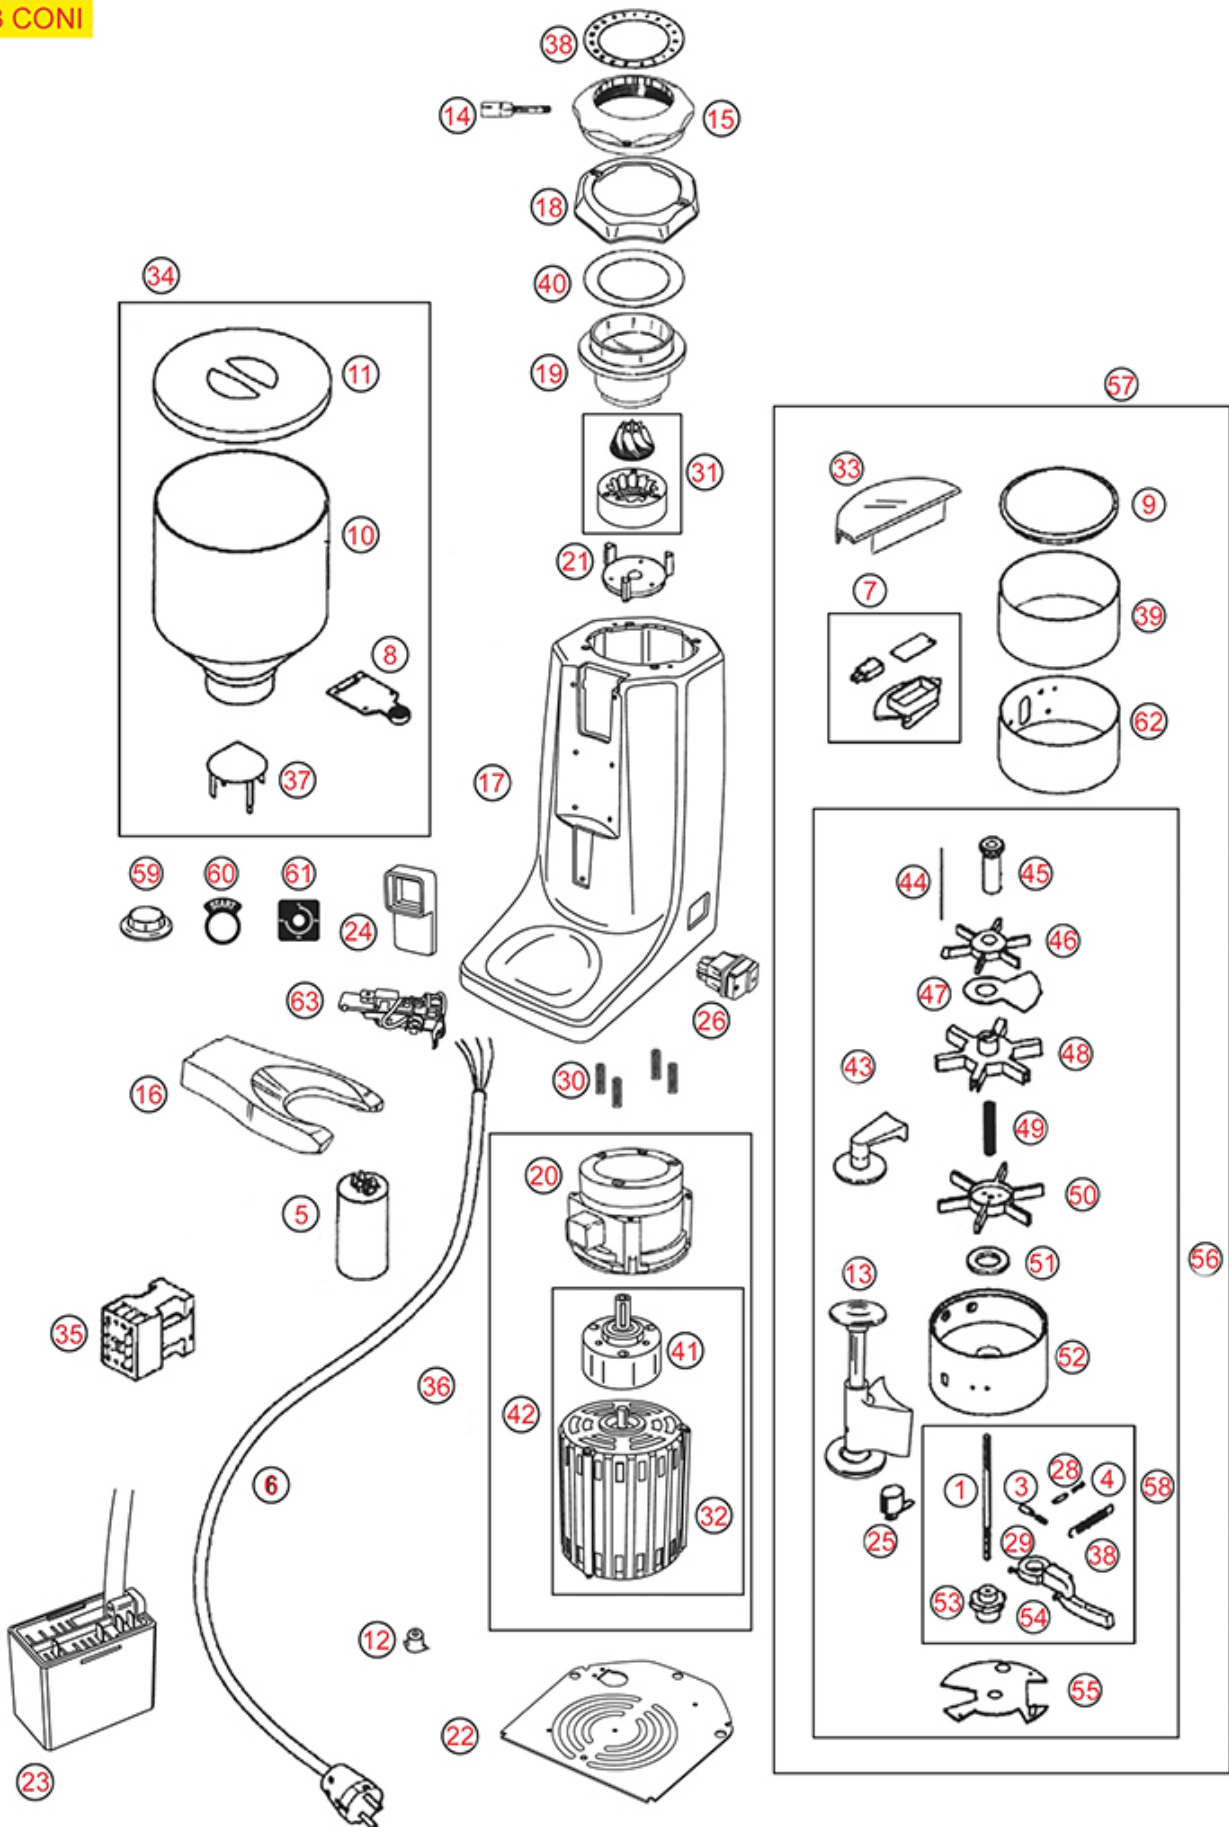

Positions without LF code no.: upon request




QUAMAR



Position	LF code no.	Description
1	1324908	PIN FOR DISPENSER T80/T48
3	1252130	FEEDING PAL D6
7	1252151	AUTOMATIC BOX ASSEMBLY
8	1252117	COFFEE HOPPER CLOSING SHEET
9	1252150	DISPENSER LID
10	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
11	1252116	COFFEE HOPPER LID ø 205 mm
25	1252139	GRINDER-DOSER COUNTER
27	1250962	DISPENSER LEVER RETURN SPRING
28	1250964	DISPENSER CATCH RATCHET SPRING
29	1250963	FEEDING SPRING FOR DISPENSER
35	1454902	CONTACTOR LOVATO BG0910A
35	3446556	CONTACTOR LOVATO BG0910A
37	1252147	COFFEE HOPPER INNER PROTECTION
43	1385546	COFFEE TAMPER ø 56 mm
45	1252118	MIXER KNOB
46	1252126	STIRRING WHEEL T48
48	1343911	UPPER STAR NEW MODEL
49	1250961	DOSING SYSTEM SPRING
50	1343912	LOWER STAR NEW MODEL
51	1252138	DOSER PLASTIC WASHER
53	1252137	DOSER PAWL RH
54	1252132	DOSER LEVER
55	1252134	DOSER LOWER LID
58	1252133	COMPLETE DOSER LEVER



 COFFEE GRINDER T80D

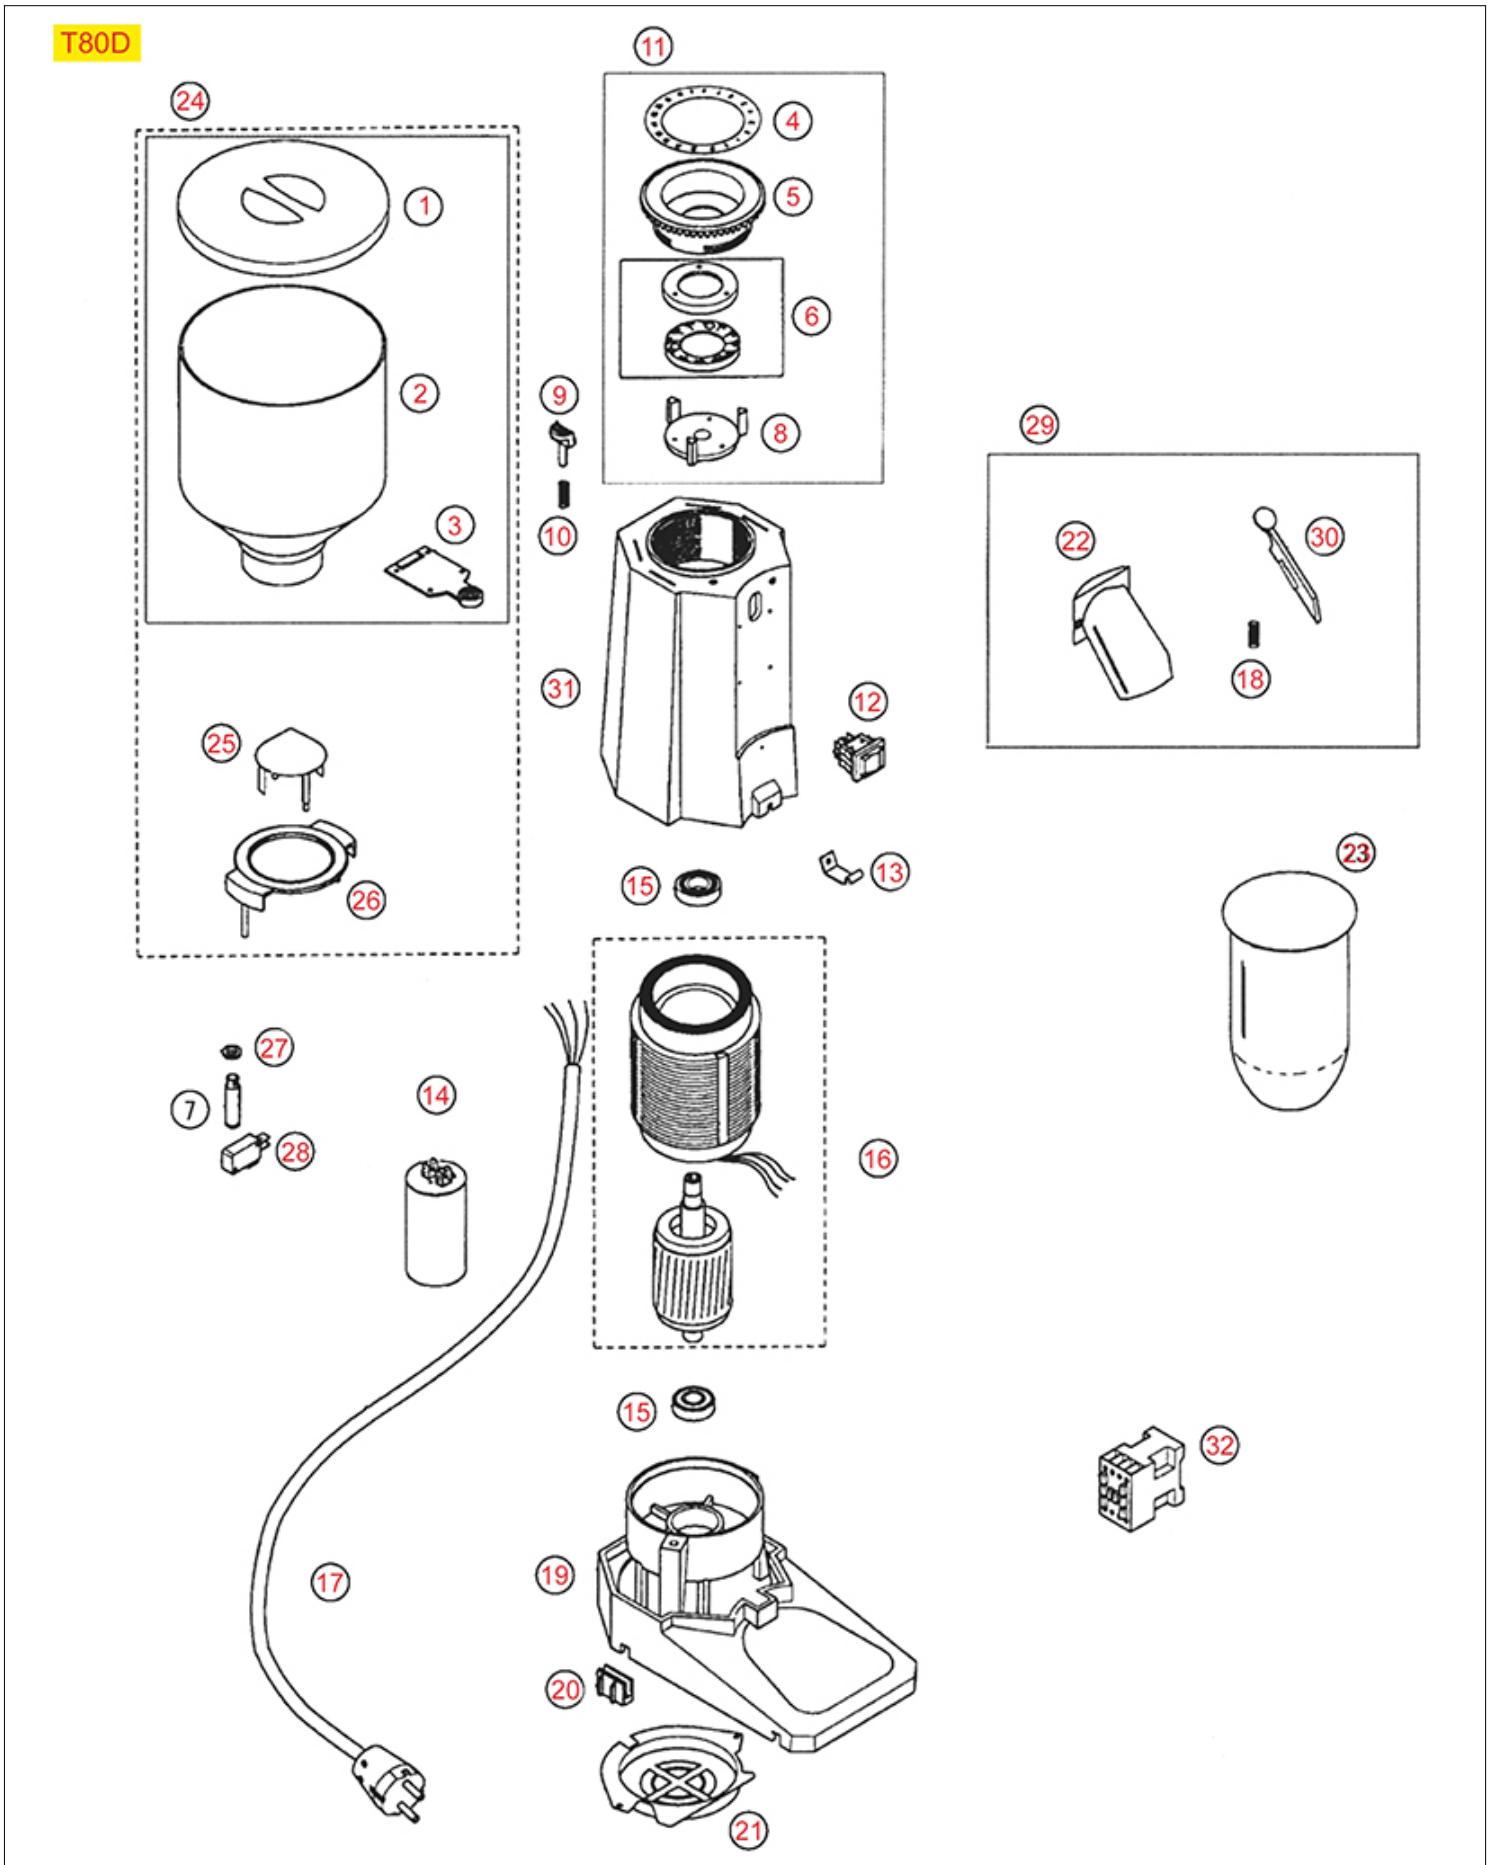

Positions without LF code no.: upon request



QUAMAR




Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
4	1252142	GRIND SELECTION LABEL
5	1252143	UPPER GRINDER BURRS RING NUT
6	1251078	GRINDING BURRS FIORENZATO CS/QUAMAR RH
8	1251936	LOWER BURRS HOLDER ø 63 mm
9	1252144	RING-RETAINING RATCHET
10	1250966	RING CATCH SPRING
14	3068083	CAPACITOR ELECTRICAL 16µF
14	3068084	CAPACITOR ELECTRICAL 20µF
15	1063911	BEARING 6202 ZZ NSK
18	1250966	RING CATCH SPRING
20	1313912	FOOT T80
24	1080927	COMPLETE COFFEE HOPPER
25	1252147	COFFEE HOPPER INNER PROTECTION
26	1252148	COFFEE HOPPER INNER PROTECTION
28	1240949	MICROSWITCH ROLD
29	1252160	SPOUT ASSEMBLY T80/D
32	1454902	CONTACTOR LOVATO BG0910A
32	3446556	CONTACTOR LOVATO BG0910A



COFFEE GRINDER ELECTRONIC M1E

 M1E

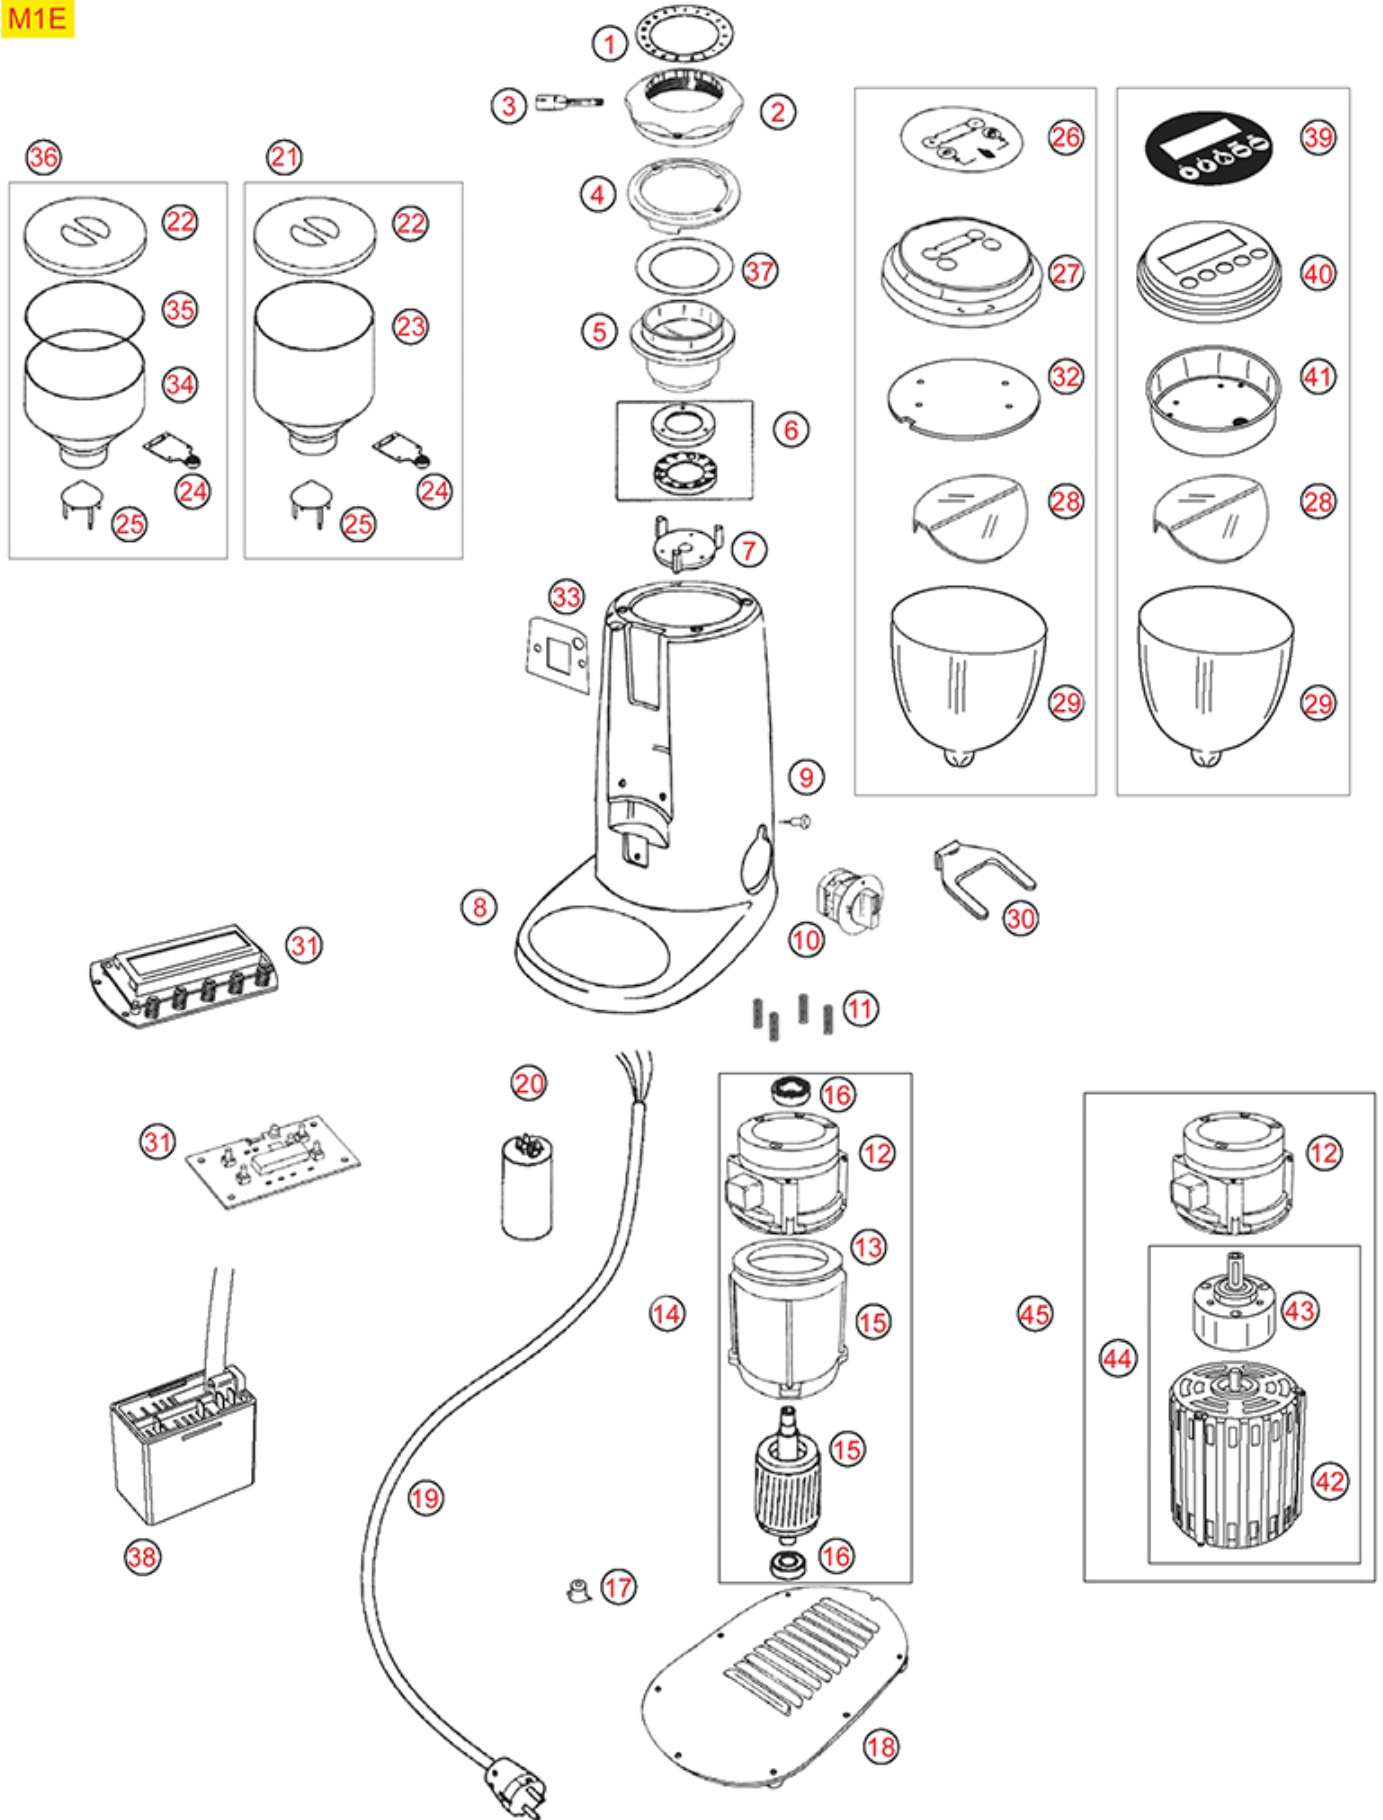

Positions without LF code no.: upon request



QUAMAR




Position	LF code no.	Description
6	1251078	GRINDING BURRS FIORENZATO CS/QUAMAR RH
6	1251185	GRINDING BURRS FIORENZATO MS/QUAMAR RH
16	1063911	BEARING 6202 ZZ NSK
17	1313911	FOOT \varnothing 19x13 mm MADE OF RUBBER
20	3068084	CAPACITOR ELECTRICAL 20 μ F
22	1252116	COFFEE HOPPER LID \varnothing 205 mm
23	1080921	COFFEE CONTAINER 1.5Kg \varnothing 200 mm
24	1252117	COFFEE HOPPER CLOSING SHEET
25	1252147	COFFEE HOPPER INNER PROTECTION
26	5075302	MEMBRANE ADHESIVE \varnothing 97 mm
31	5075301	BUTTON PANEL BOARD WITH DISPLAY OLD TYPE
31	5078082	DISPLAY CIRCUIT BOARD
39	5066561	MEMBRANE ADHESIVE \varnothing 104 mm



COFFEE GRINDER ELECTRONIC M80E

 M80E

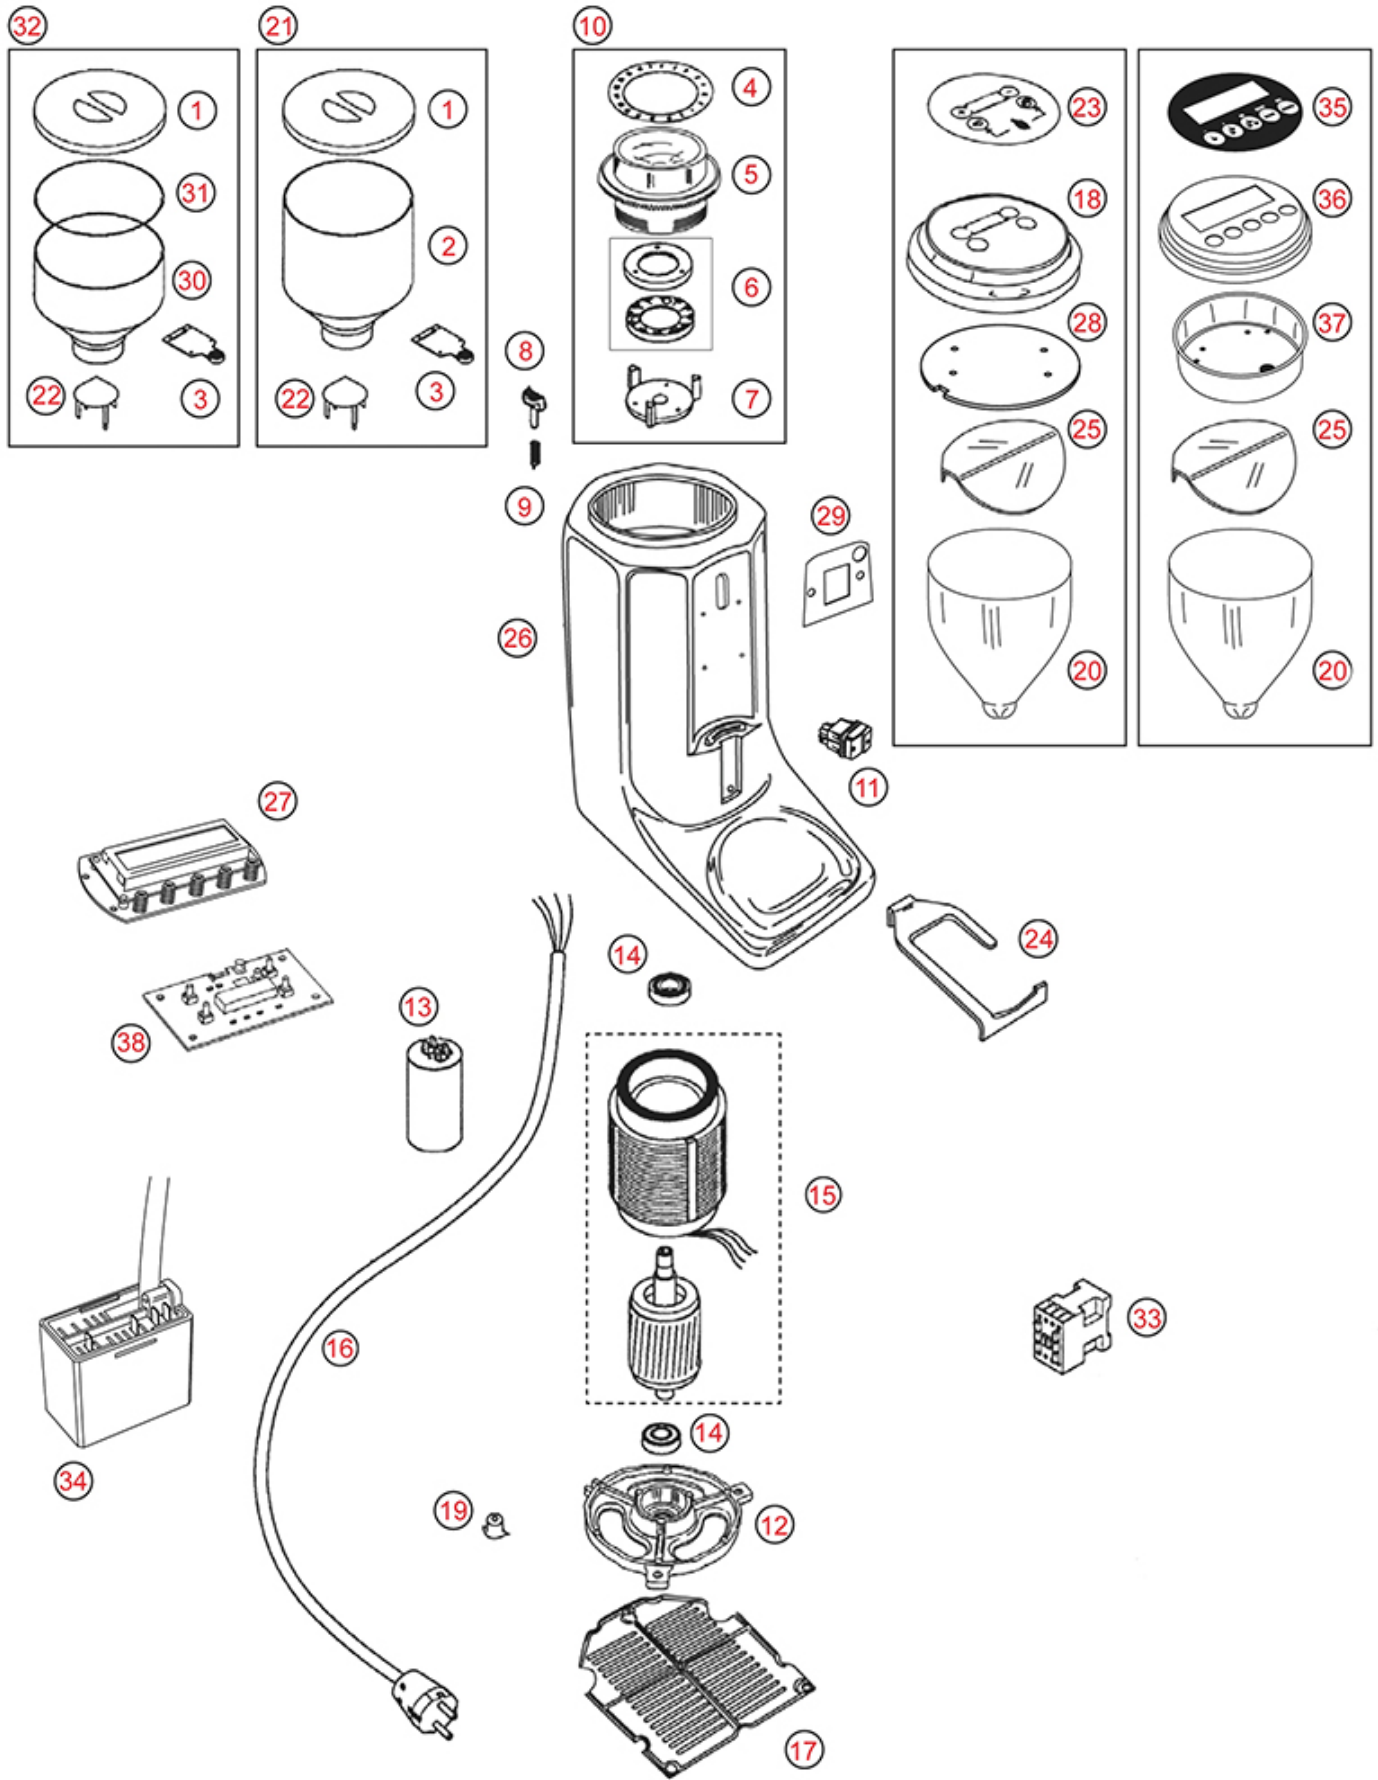

Positions without LF code no.: upon request



QUAMAR



Position	LF code no.	Description
1	1252141	COFFEE HOPPER LID ø 180 mm
2	1080926	COFFEE CONTAINER 1.2Kg ø 175 mm
3	1252117	COFFEE HOPPER CLOSING SHEET
4	1252142	GRIND SELECTION LABEL
6	1251078	GRINDING BURRS FIORENZATO CS/QUAMAR RH
7	1251936	LOWER BURRS HOLDER ø 63 mm
8	1252144	RING-RETAINING RATCHET
9	1250966	RING CATCH SPRING
13	3068084	CAPACITOR ELECTRICAL 20µF
14	1063911	BEARING 6202 ZZ NSK
22	1252147	COFFEE HOPPER INNER PROTECTION
23	5075302	MEMBRANE ADHESIVE ø 97 mm
27	5078082	DISPLAY CIRCUIT BOARD
33	1454902	CONTACTOR LOVATO BG0910A
33	3446556	CONTACTOR LOVATO BG0910A
35	5066561	MEMBRANE ADHESIVE ø 104 mm
38	5075301	BUTTON PANEL BOARD WITH DISPLAY OLD TYPE



Suitable for:

QUAMAR



Suitable for:

Adhesive labels

1252142 GRIND SELECTION LABEL
for Grinder-dispenser (QUAMAR) T80 - T80D




QUAMAR 240022

5066561 MEMBRANE ADHESIVE ø 104 mm
for Coffee grinder (QUAMAR) M1E - M80E



QUAMAR 240024

 5075302 MEMBRANE ADHESIVE ø 97 mm
for Coffee grinder (QUAMAR) M1E - M80E

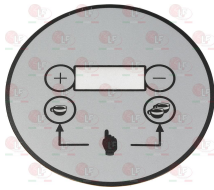

QUAMAR 240020

Bearings

1063911 BEARING 6202 ZZ NSK
external ø 35 mm-internal ø 15 mm-thickness 11 mm



QUAMAR 260005

1063906 BEARING 6203 ZZ NSK
external ø 40mm - internal ø 17mm - thickness 12mm



QUAMAR 260006

Bodies

1252160 SPOUT ASSEMBLY T80/D



QUAMAR RMT80D001

Capacitors, electrical

3068024 CAPACITOR DUCATI ENERGIA 16µF
450V 50/60Hz
operating temperature -25 + 85°C
lead connector 6.35x0.8 mm
ø 36xh70 mm



QUAMAR 150063

3068027 CAPACITOR DUCATI ENERGIA 20µF
450V 50/60Hz
operating temperature -25 + 85°C
lead connector 6.35x0.8 mm
ø 40xh70 mm



QUAMAR 150064

QUAMAR 150081

Suitable for:

3068014 CAPACITOR DUCATI ENERGIA 8μF
 450V 50/60Hz
 operating temperature -25 + 85°C
 lead connection 6.35x0.8 mm
 ø 32xh55 mm



QUAMAR 150070

Suitable for:

3068083 CAPACITOR ELECTRICAL 16μF
 450V 50/60Hz - ø 35xh71 mm



QUAMAR 150063

3068084 CAPACITOR ELECTRICAL 20μF
 450V 50/60Hz - ø 40xh71 mm



QUAMAR 150064

QUAMAR 150081

3068079 CAPACITOR ELECTRICAL 8μF
 450V 50/60Hz - ø 30xh71 mm



QUAMAR 150070

Contactors

1454902 CONTACTOR LOVATO BG0910A
 9A 400V 50Hz 4Kw
 3 closed power contacts
 1 open auxiliary contact



QUAMAR 210035

3446556 CONTACTOR LOVATO BG0910A
 coil 9A 230V 50/60Hz 4Kw
 3 normally open contacts
 1 normally open auxiliary contact



QUAMAR 210034

3446227 AUXILIARY CONTACT LOVATO G218
 10A
 1 contact NO
 1 contact NC





Suitable for:

QUAMAR



Suitable for:

Containers for coffee

1080926 COFFEE CONTAINER 1.2Kg ø 175 mm
for Grinder-dispenser (QUAMAR) M80 - T80 - T80D



QUAMAR 160080

1080921 COFFEE CONTAINER 1.5Kg ø 200 mm
for Grinder-dispenser (QUAMAR) M1 - T48



QUAMAR 160076

1252117 COFFEE HOPPER CLOSING SHEET
for Grinder-dispenser (QUAMAR) M80 - T48 - T80 T80D



QUAMAR 160063

1252135 COFFEE HOPPER INNER PROTECTION
for Grinder-dispenser (QUAMAR) T48



QUAMAR 160091

1252147 COFFEE HOPPER INNER PROTECTION
for Grinder-dispenser (QUAMAR) M80 - T80 - T80D




QUAMAR 160067

1252148 COFFEE HOPPER INNER PROTECTION
for Grinder-dispenser (QUAMAR) T80 - T80D




QUAMAR 160066

 1252141 COFFEE HOPPER LID ø 180 mm
for Grinder-dispenser (QUAMAR) M80 - T80 - T80D

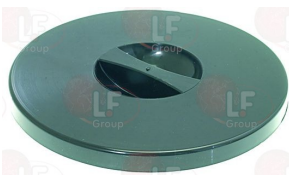

QUAMAR 160149

 1252116 COFFEE HOPPER LID ø 205 mm
for Grinder-dispenser (QUAMAR) M1 - T48

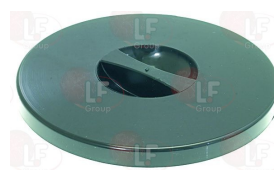

QUAMAR 160081

1080922 COMPLETE COFFEE HOPPER
for Grinder-dispenser (QUAMAR) T48



QUAMAR RMT480001

QUAMAR 340066

1080927 COMPLETE COFFEE HOPPER
for Grinder-dispenser (QUAMAR) T80 - T80D



QUAMAR RMT800001

QUAMAR 340068



Counters

- 1252139 GRINDER-DOSER COUNTER**
for Grinder-dispenser (QUAMAR) M80 - T48 - T80



QUAMAR 210033

Dosers for coffee

- 1520902 DISPENSER CYLINDER**
for Grinder-dispenser (QUAMAR) M1 - M80 - T80



QUAMAR 160083

QUAMAR 340231

- 1252150 DISPENSER LID**
for Grinder-dispenser (QUAMAR) M1 - M80 - T80




QUAMAR 160064

- 1520901 DOSER CYLINDER**
for Grinder-dispenser (QUAMAR) T48



QUAMAR 160079

 - 1252129 DOSER CYLINDER SUPPORT**
for Grinder-dispenser (QUAMAR) T48

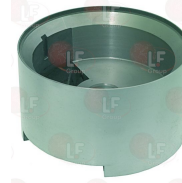

QUAMAR 170109

- 1252122 DOSER LID**
for Grinder-dispenser (QUAMAR) T48



QUAMAR 160078

- 1252134 DOSER LOWER LID**



QUAMAR 160074

- 1324908 PIN FOR DISPENSER T80/T48**
total length 115 mm
threaded part length 45 mm
threaded part diameter 7,85 mm



QUAMAR 110030



Suitable for:

 
QUAMAR



Suitable for:


Electronic printed-circuit boards

5075301 **BUTTON PANEL BOARD WITH DISPLAY OLD TYPE**
dimensions 83x48 mm
for Coffee grinder (QUAMAR) M1E - M80E

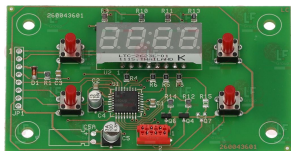

QUAMAR 130142

 5078082 **DISPLAY CIRCUIT BOARD**
dimensions 95x52 mm
for Coffee grinder (QUAMAR) M1E - M80E

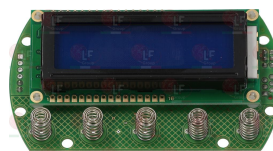

QUAMAR 130141

Feet

1313911 **FOOT \varnothing 19x13 mm MADE OF RUBBER**
for Grinder-dispenser (QUAMAR) M1 - T48 - T65
T82



QUAMAR 160096

1313921 **FOOT FOR MIXER**



QUAMAR 160098

1313912 **FOOT T80**



QUAMAR 160097

Forks for portafilter coffee grinder

1252121 **FILTER HOLDER FORK**
for Grinder-dispenser (QUAMAR) M80 - T48 - T80



QUAMAR 170033

QUAMAR 170044

Gaskets and seals

1252138 **DOSER PLASTIC WASHER**



QUAMAR 160065



Grinders

1251078 GRINDING BURRS FIORENZATO CS/QUAMAR RH
 external \varnothing 63 mm - internal \varnothing 38 mm
 thickness 9.5 mm - 3 mounting holes
 for Grinder-dispenser (QUAMAR) M1 - M80 - T80
 T80D



QUAMAR 260001

1251052 GRINDING BURRS FIORENZATO MS (PAIR) RH
 external \varnothing 83 mm - internal \varnothing 45 mm
 thickness 10 mm - 3 fixing holes
 for Grinder-dispenser (QUAMAR) T48



QUAMAR 260003

1251185 GRINDING BURRS FIORENZATO MS/QUAMAR RH
 external \varnothing 75 mm - internal \varnothing 43 mm
 thickness 10.5 mm - 3 fastening holes
 for Grinder-dispenser (QUAMAR) M1/E



QUAMAR 260002

QUAMAR 260014

1251211 GRINDING BURRS QUAMAR CONIC RIGHT
 \varnothing extern 71/49 mm - \varnothing intern 41/14 mm
 thickness 25 mm - 3 fastening holes
 inner groove for feather
 for Coffee grinder (QUAMAR) M1E - Q13 CONI



QUAMAR 260004

Grinding burr holders

1251932 LOWER BURRS HOLDER
 for Grinder-dispenser (QUAMAR) T48



QUAMAR 170106

QUAMAR 340181

QUAMAR 340183

1251936 LOWER BURRS HOLDER \varnothing 63 mm
 for Grinder-dispenser (QUAMAR) M1 - M80 - T80
 T80D



QUAMAR 170090

QUAMAR 340182

1252143 UPPER GRINDER BURRS RING NUT
 for Grinder-dispenser (QUAMAR) T80 - T80D



QUAMAR 170091

QUAMAR 340147



Suitable for:

QUAMAR



Suitable for:

Indicator lights

3221042 GREEN INDICATOR LAMP 230V
 head ø 20 mm - hole ø 10 mm - 120°C
 wires connection length 200 mm
 for Coffee grinder (QUAMAR) M1E
 for Grinder-dispenser (QUAMAR) M1



QUAMAR 210032

Knobs

1252118 MIXER KNOB



QUAMAR RMT800013

QUAMAR 160059

QUAMAR 340120

Levers

1252133 COMPLETE DOSER LEVER
 for Grinder-dispenser (QUAMAR) M80 - T48 - T80



QUAMAR RMUNI0007

QUAMAR 340159

1252132 DOSER LEVER
 for Grinder-dispenser (QUAMAR) M80 - T48 - T80



QUAMAR RMUNI0009

QUAMAR 160075

1225055 LEVER DOSER
 for Grinder-dispenser (QUAMAR) M1



QUAMAR 170460

Microswitches, mechanical

1252151 AUTOMATIC BOX ASSEMBLY



QUAMAR RMT800002

1252123 AUTOMATIC T48 BOX ASSEMBLY



QUAMAR RMT480003

Suitable for:

1240949 MICROSWITCH ROLD
for Grinder-dispenser (QUAMAR) T80 - T80D



QUAMAR 210014

Suitable for:

3240123 MICROSWITCH ROLD VRSRB1DA1
16A 250V



QUAMAR 210029

1803005 MICROSWITCH 10A
for Grinder-dispenser (QUAMAR) M80



QUAMAR 210021

Pawls for coffee grinder dosers

1252137 DOSER PAWL RH



QUAMAR RMUNI0008

QUAMAR 160068

1227002 PAWL 6-TEETH RIGHT
for Grinder-dispenser (QUAMAR) M80 TOP



QUAMAR 170451

Pins

1252130 FEEDING PAL D6



QUAMAR 130059

1252144 RING-RETAINING RATCHET



QUAMAR 160062

Rotary switches

1057042 SELECTOR SWITCH 0-1 POSITIONS 16A 600V
for Coffee grinder (QUAMAR) M1E
for Grinder-dispenser (QUAMAR) M1



QUAMAR 210105



Suitable for:

QUAMAR



Suitable for:

Springs

1250964 DISPENSER CATCH RATCHET SPRING



QUAMAR 230028

1250962 DISPENSER LEVER RETURN SPRING
for FIORENZATO MS T48-T80-M80-M1



QUAMAR 230027

1250961 DOSING SYSTEM SPRING



QUAMAR 230023

1250963 FEEDING SPRING FOR DISPENSER



QUAMAR 230029

1250966 RING CATCH SPRING



QUAMAR 230013


Stars and spare parts

1252127 CLOSING SECTOR



QUAMAR 160073

 1343912 LOWER STAR NEW MODEL

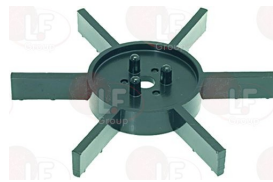


QUAMAR 160070

1252126 STIRRING WHEEL T48



QUAMAR 160072

 1343911 UPPER STAR NEW MODEL

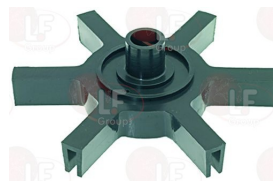

QUAMAR 160071



Switches

1319902 BIPOLAR SWITCH BLACK 16A 250V
 with indicator led lamp
 mounting hole 22x30 mm
 for Coffee grinder (QUAMAR) M80E
 for Grinder-dispenser (QUAMAR) M80 - M80 TOP



QUAMAR 210015

3319012 BIPOLAR SWITCH GREEN 16A 250V
 16(4)A 250V - max. temperature 120°C
 with indicator lamp and push-button cap
 mounting hole 22x30 mm - silk screen print 0 - I



QUAMAR 210018

3319779 BLOCK CONNECTIONS BLACK 22x30 mm



3319783 FRAME SAFETY 4 SIDES BLACK 22x30 mm



3319780 BLOCK CONNECTION WHITE 22x30 mm



3319782 FRAME SAFETY 2 SIDES BLACK 22x30 mm



3319501 PUSH-BUTTON PROTECTION CAP
 external dimensions 29x36 mm
 for switches with mounting hole 22x30 mm



QUAMAR 210016

3319016 BIPOLAR SWITCH RED 16A 250V
 16(4)A 250V - max. temperature 120°C
 with indicator lamp - silk screen printing 0 - I
 mounting hole 22x30 mm



QUAMAR 150027

QUAMAR 210018

3319780 BLOCK CONNECTION WHITE 22x30 mm





Suitable for:

3319779 BLOCK CONNECTIONS BLACK 22x30 mm



3319783 FRAME SAFETY 4 SIDES BLACK 22x30 mm



QUAMAR

Suitable for:

3319782 FRAME SAFETY 2 SIDES BLACK 22x30 mm



3319501 PUSH-BUTTON PROTECTION CAP
external dimensions 29x36 mm
for switches with mounting hole 22x30 mm



QUAMAR 210016

3319501 PUSH-BUTTON PROTECTION CAP
external dimensions 29x36 mm
for switches with mounting hole 22x30 mm



QUAMAR 210016

Tampers for coffee

1385546 COFFEE TAMPER ø 56 mm



QUAMAR RMT800014

QUAMAR 160061

The data herewith contained may change without notice and LF SpA cannot be held responsible for possible errors stated or resulting by the use of this document. All rights reserved. No part of this publication may be reproduced without written permission by LF SpA.



Distributing Components, Spare Parts & Accessories in original quality worldwide

-
- LF SpA HEADQUARTERS**
via Voltri, 80 - 47522 Cesena (FC) ITALY
Tel. +39 0547 34 11 11 - Fax +39 0547 34 11 10
www.lfricambi724.it - info@lfricambi.it
Export Dept. Tel. +39 0547 34 11 50 - Fax +39 0547 34 11 55
www.lfspareparts724.com - export@lfspareparts.com
- LF SpA HOUSEHOLD COMPONENTS DIVISION**
Via Padriciano, 99 - AREA Science Park - 34149 Trieste (TS) ITALY
Tel. +39 0547 34 12 42 - Fax +39 0547 34 12 48
www.lfspareparts724.com - info@lfspareparts.com
- EPGC Sas FRANCE**
13, Rue des Forts - 59960 Neuville en Ferrain
Tel. +33 (0)3 20 25 06 21 - Fax +33 (0)3 20 25 34 12
www.epgc.com - epgc@epgc.com
- LF GmbH GERMANY**
Junkersstrasse, 3 - D-82178 Puchheim - München
Tel. +49 89 89 45 78 66 - Fax +49 89 89 45 78 88
www.lfersatzteile724.de - info@lfersatzteile.de
- LF China REPUBLIC OF CHINA**
Room 403, No.2, Huadu Mansion, Lane 422, Huanghua Rd.
Minhang Dist. - 201103 Shanghai
Tel. +86 (0)21 33 53 66 31 - Fax +86 (0)21 33 53 66 32
www.lfspareparts724.com - china@lfspareparts.com
- OOO LF RUSSIAN FEDERATION**
Ul. Anatoliya Zhivova, 8 - office 1 - 123100 Moscow
Tel./Fax +7 495 725 26 53
www.lfspareparts724.ru - info@lfspareparts.ru
- LF Repuestos Horeca S.L.U. SPAIN**
Poligono Industrial Carpetania - C/Miguel Faraday, 8 - 28906 Getafe
Tel. +34 91 477 91 00 - Fax +34 91 477 90 81
www.lfrepuestos-horeca724.es - info@lfrepuestos.es
- LF Scandinavia Aps - LF Spareparts S.p.A. DENMARK**
Nupark, 51 - 7500 Holstebro
Tel. +45 70 70 77 33
www.lfspareparts724.dk - denmark@lfspareparts.dk
- LF SpA Cesena (IT) Swiss Branch Steinhausen SWITZERLAND**
Sennweidstrasse, 45 - CH-6312 Steinhausen
Tel. +41 (0)41 760 15 80/1 - Fax +41 (0)41 760 15 85
www.lfersatzteile724.ch - info@lfersatzteile.ch
- LF Spare Parts Ltd. UNITED KINGDOM**
A10a Lakeside Business Park, Broadway Lane
South Cerney, Gloucestershire GL7 5XL
Tel. +44 (0)1285 86 16 25 - Fax +44 (0)1285 86 39 49
www.lfspareparts724.co.uk - info@lfspareparts.co.uk
- LF Central Est Europe S.r.o. CZECH REPUBLIC**
Antala Staska 1859/34
14000 Praha 4 - KRC
Tel. +420 730 156 910
www.lfspareparts724.cz - info@lfspareparts.cz
- LF SPARE PARTS INC. USA**
Legal address:
155 Office Plaza Dr - Suite A - Tallahassee, FL 32301
Business/Mailing address:
1100 South Tower, 225 Peachtree St., N.E. - Atlanta, GA 30303, USA
Tel. +1-404-525-2600 - Fax +1-404-586-3528
www.lfspareparts724.us - info@lfspareparts.us
Tel. West Coast and Midwest: 206-349-1525 Sauro
Tel. East Coast and the Caribbean: 786-817-1764 Luis
-
- AUSTRALIA AND NEW ZEALAND**
www.lfspareparts724.com
andrea.calvio@lfspareparts.com
- AUSTRIA**
www.lfersatzteile724.at
info@lfersatzteile.at
- BALKAN COUNTRIES**
www.lfspareparts724.com
matija.ramov@lfspareparts.com
- BALTIC COUNTRIES**
www.lfspareparts724.com
inara.silina@lfspareparts.com
- LATIN AMERICA AND THE CARRIBEANS**
www.lfrepuestos-horeca724.es
export@lfrepuestos.es
- POLAND**
www.lfspareparts724.pl
info@lfspareparts.pl
- SOUTH KOREA**
www.lfspareparts724.com
fabio.doni@lfspareparts.com
- TURKEY**
www.lfyedekparca724.com
export@lfspareparts.com