



Spare parts for the professional sector:  
**Cooking equipment**



# Burners, flame spreaders and accessories

- Flame spreaders
- Venturi tubes



This catalogue is automatically generated.  
Therefore, the sequence of the items might  
not be always shown at best.  
Updates will be issued in case of additions  
and/or amendments.

Rel. 2018-03051637





# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS AMBACH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025146	∅ 90	5018705710
2	3025212	∅ 90	2016905411
3	3025213	---	2000605350
4	3025147	∅ 125	5018705859
5	3025215	---	2000605351
6	3025216	---	3028604319

## BURNER ASSEMBLY FOR COOKING TOPS AMBACH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025144	∅ 65	3018703054
2	3025188	∅ 65	2016902026
3	3025145	∅ 80	3018702019

## BURNER ASSEMBLY FOR COOKING TOPS AMBACH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025053	∅ 75	5018714245
2	3025054	∅ 75	5016914265
3	3025186	---	5016914238
4	3025059	---	5050120709
5	3025202	---	5006314268
6	3186347	---	5017314079
---	3250125	---	5004714244



## BURNER ASSEMBLY FOR COOKING TOPS AMBACH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025269	∅ 125	5018714247
2	3025270	∅ 125	5016914267
3	3025058	---	5016914240
4	3025059	---	5050120709
5	3025202	---	5006314268
6	3186347	---	5017314079
---	3250125	---	5004714244

## BURNER ASSEMBLY FOR COOKING TOPS AMBACH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025266	∅ 70	5018709571
2	3025265	∅ 70	5016909391
3	3025268	∅ 80	5018709572
4	3025267	∅ 80	5016909392
5	3061011	---	5017308860

## BURNER ASSEMBLY FOR COOKING TOPS AMBASSADE



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025667	∅ 45	6528202
2	3025726	---	5039141
1	3025668	∅ 65	6528203
2	3025798	---	5039142
1	3025669	∅ 78	6517430
2	3025725	---	5039143



## Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025670	∅ 100	6528204
2	3025724	---	5039144
3	3025727	∅ 26.5	5014741
4	3025728	∅ 38	6516862
5	3025729	---	6517160
6	3025723	---	6530915

### BURNER ASSEMBLY FOR COOKING TOPS AMBASSADE



1

2

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025738	∅ 54.5	65330005
2	3025734	∅ 45	65640003
1	3025739	∅ 71.5	65330006
2	3025735	∅ 68	65640004
1	3025740	∅ 89.5	65330007
2	3025736	∅ 80.5	65640005
1	3025732	∅ 116.5	65330008
2	3025737	∅ 98	65640006

### BURNER ASSEMBLY FOR COOKING TOPS ANGELO PO



1

2

3

4

5

6

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025158	∅ 90	34A1123
2	3025217	∅ 90	34A1380
1	3025160	∅ 110	34A1133
2	3025218	∅ 110	34A1391
3	3025162	∅ 140	34A1141
2	3025219	∅ 140	34A1401
4	3025220	---	36D2771
5	3025156	---	36D0070
6	3025257	---	35M2880



## BURNER ASSEMBLY FOR COOKING TOPS ANGELO PO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025262	∅ 80	3057610
2	3025263	∅ 80	3057600
3	3025304	---	6020732
4	5069317	∅ 80	3057620
5	3025676	---	3311911
6	3025273	22	31V0241
---	3186657	OR 02187	3152040

## BURNER ASSEMBLY FOR COOKING TOPS ANGELO PO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025746	∅ 110	34A2040
2	3025747	∅ 110	34A2032
3	3025745	∅ 110	34A2010
1	3025748	∅ 130	34A2060
2	3025749	∅ 130	34A2052
3	3025744	∅ 130	34A2000
4	3025676	---	34A2071
5	3025690	---	34A2020
---	3025273	22	31V0241
6	3186657	OR 02187	3152040



## Burners, flame spreaders and accessories



### BURNER ASSEMBLY FOR COOKING TOPS ANGELO PO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025260	∅ 110	3019390
2	3025261	∅ 110	3019380
3	3025259	---	6013762
4	3025744	∅ 110	34A2000
5	3025676	---	3311911
6	3025690	---	34A2020
---	3025273	22	31V0241
---	3186657	OR 02187	3152040

### BURNER ASSEMBLY FOR COOKING TOPS ANGELO PO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025271	∅ 130	3019370
2	3025272	∅ 130	3019360
3	3025258	---	6014832
4	3025690	---	34A2020
5	3025273	22	31V0241
6	3186657	OR 02187	3152040

### BURNER ASSEMBLY FOR COOKING TOPS BARON



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025374	∅ 105	BN822410081
3	3025378	---	BN822160022
4	3025379	34	BN822160031



## BURNER ASSEMBLY FOR COOKING TOPS BARTSCHER



1

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025292	∅ 75	16087

## BURNER ASSEMBLY FOR COOKING TOPS BARTSCHER



1



2



3



4

Photo	LF Code	Dimensions (mm)	Suitable for
2	3025282	---	21641
1	3025284	∅ 105	18847
2	3025288	---	2510340
3	3025289	---	2519002
4	3025290	---	21647

## BURNER ASSEMBLY FOR COOKING TOPS BATINOX



1



2



3

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025593	∅ 80	---
2	3025755	---	---
2	3025697	---	---



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS BERTO'S



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025169	∅ 75	22293700
2	3025168	∅ 75	22280300
3	3025170	---	22993300
1	3025172	∅ 95	22293900
2	3025171	∅ 95	22280400
3	3025173	---	22993400
4	3020093	---	22913400
5	3025199	---	32327600
6	3025189	---	22913400

## BURNER ASSEMBLY FOR COOKING TOPS BERTO'S



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025361	∅ 90	31281000
2	3025574	∅ 90	31280300
3	3025399	∅ 90	31280200
4	3025360	∅ 90	---
1	3025363	∅ 120	31280700
2	3025575	∅ 120	31280600
3	3025406	∅ 120	31280500
5	3025362	∅ 120	---
6	3025364	---	31280100





## BURNER ASSEMBLY FOR COOKING TOPS BERTO'S



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025398	∅ 60	35281300
2	3025397	∅ 130	35281400
3	3025405	∅ 130	35280500

## BURNER ASSEMBLY FOR COOKING TOPS BERTO'S



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025176	∅ 80	22294100
2	3025179	∅ 90	22285300

## BURNER ASSEMBLY FOR COOKING TOPS BONNET



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025658	∅ 110	130625
2	3025802	∅ 130	322390



## Burners, flame spreaders and accessories



### BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025596	∅ 80	---
2	3025595	∅ 83	G204006
3	3025797	110	---
3	3025756	165	---
3	3025799	240	---

### BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025624	∅ 80	G204060
2	3025595	∅ 83	G204006
3	3025768	245	---
4	3025680	---	---

### BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025627	∅ 100	G204012
2	3025598	∅ 106	G204011
3	3025769	185	---
3	3025770	245	---
4	3025680	---	---



## BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025615	∅ 80	G204030
2	3025590	∅ 73	G204032
3	3025774	175	---

## BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025611	∅ 120	G204055
2	3025750	215	G201025
2	3025687	245	---
2	3025764	275	---
3	3025680	---	---

## BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025606	∅ 120	G204035
2	3025605	∅ 115	G204037
3	3025772	120	---
3	3025762	175	---
3	3025767	275	---
4	3025679	---	---



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025587	∅ 81	---
2	3025588	∅ 90	---
3	3025752	125	G201018
3	3025753	180	---
4	3025679	---	---

## BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025698	∅ 120 - 225	---
1	3025699	∅ 140 - 235	---
1	3025709	∅ 140 - 295	---
2	3025707	∅ 200 - 265	G201032
2	3025713	∅ 200 - 325	---

## BURNER ASSEMBLY FOR COOKING TOPS CAPIC

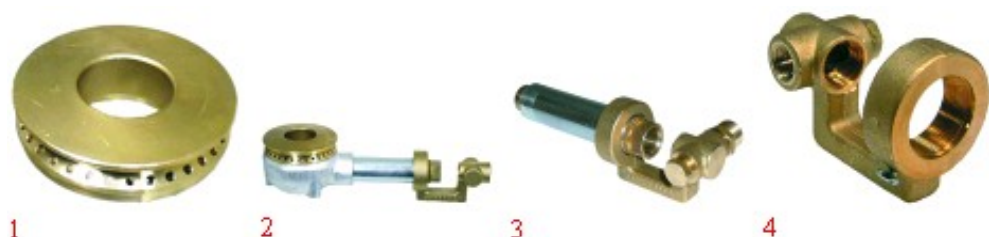 


Photo	LF Code	Dimensions (mm)	Suitable for
1	3025653	∅ 80	---
2	3025714	120	---
2	3025715	175	---
3	3025688	---	G205514
4	3025679	---	---



## BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025591	∅ 80	G204040
2	3025590	∅ 73	G204032
3	3025754	175	---

## BURNER ASSEMBLY FOR COOKING TOPS CAPIC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025624	∅ 80	G204060
3	3025629	∅ 119	---
1	3025627	∅ 100	G204012
2	3025633	∅ 135	---
4	3025599	∅ 100	---
3	3025634	∅ 143	---

## BURNER ASSEMBLY FOR COOKING TOPS CASTA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025248	∅ 180	700020
2	3025249	---	700019
3	3025250	---	700017
4	3025252	---	700015



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS CHARVET



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025593	∅ 80	00134A
2	3025771	120	00102A
2	3025697	175	134A
3	3025688	---	---
4	3025679	---	---
5	3025606	∅ 120	135A
6	3025605	∅ 115	---

## BURNER ASSEMBLY FOR COOKING TOPS COCINAS SALA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025576	∅ 100	R2046
2	3025577	∅ 100	R2037
3	3025578	∅ 120	R2045
4	3025582	---	R2008

## BURNER ASSEMBLY FOR COOKING TOPS COMETTO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025596	∅ 80	40502
2	3025595	∅ 83	---
3	3025797	110	---
3	3025756	165	---
3	3025799	240	---
4	3025599	∅ 100	40507
5	3025598	∅ 106	---



Photo	LF Code	Dimensions (mm)	Suitable for
6	3025758	110	---
6	3025759	165	---
6	3025760	240	---

## BURNER ASSEMBLY FOR COOKING TOPS COMETTO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025624	∅ 80	---
2	3025595	∅ 83	---
3	3025768	245	---
4	3025680	---	---

## BURNER ASSEMBLY FOR COOKING TOPS COMETTO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025599	∅ 100	40507
2	3025598	∅ 106	---
3	3025716	185	---
3	3025717	245	---
4	3025680	---	---

## BURNER ASSEMBLY FOR COOKING TOPS COMETTO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025596	∅ 80	40502
2	3025673	∅ 80	40501
3	3025628	∅ 111	---
4	3025629	∅ 119	---
1	3025599	∅ 100	40507
2	3025674	∅ 100	40506



## Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
4	3025634	∅ 143	---

### BURNER ASSEMBLY FOR COOKING TOPS DELRUE



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025593	∅ 80	---
2	3025755	120	---
2	3025722	140	GG1129
2	3025697	175	---
3	3025606	∅ 120	00134A

### BURNER ASSEMBLY FOR COOKING TOPS EBERHARDT



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025169	∅ 75	213630
2	3025168	∅ 75	213610
3	3025170	---	---
1	3025172	∅ 95	213629
2	3025171	∅ 95	233287
3	3025173	---	---
4	3025312	---	213039
5	3020093	---	---

### BURNER ASSEMBLY FOR COOKING TOPS EBERHARDT



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025300	∅ 120	213631
2	3025299	∅ 120	---
3	3025301	---	---
4	3025314	---	213336





Photo	LF Code	Dimensions (mm)	Suitable for
5	3025315	---	13337
6	3020093	---	---

## BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025361	∅ 90	004973
2	3025574	∅ 90	---
3	3025399	∅ 90	---
4	3025360	∅ 90	004972
1	3025363	∅ 120	004975
2	3025575	∅ 120	---
3	3025406	∅ 120	---
5	3025362	∅ 120	004974
6	3025364	---	004977

## BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025002	∅ 83	058185
2	3025235	∅ 84	002461
3	3025237	---	002458
4	3025001	∅ 83	058182
1	3025004	∅ 102	058186
2	3025238	∅ 103	002462
3	3025240	---	002459
4	3025003	∅ 102	058183
5	3025055	---	052116
6	3025803	---	002187



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025006	∅ 122	058187
2	3025241	∅ 123	002463
3	3025243	---	002460
4	3025005	∅ 122	058184
5	3025244	---	002197
6	3025803	---	002187

## BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025232	∅ 70	002442
2	3025008	∅ 70	056747
3	3025231	∅ 70	054091
4	3186026	---	054093
5	3025056	---	053448
6	3025245	---	058331

## BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025012	∅ 100	002443
2	3025011	∅ 100	056748
3	3025233	∅ 100	054092
4	3186027	---	054094
5	3025056	---	053448
6	3025245	---	058331



## BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025163	∅ 60	0C0129
2	3025148	∅ 60	0C0127
3	3025136	---	0C0125
4	3025134	∅ 100	0C0128
5	3025133	∅ 100	0C0126
3	3025132	---	0C0133
6	3025135	---	0C0124

## BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025026	∅ 180	052377
2	3025024	∅ 180	052376
3	4059374	∅ 180	059374
4	3025025	---	052374
5	3025234	---	052500

## BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025303	∅ 120	054193
2	3025295	∅ 120	004280
3	3025302	∅ 120	004279
4	3025055	---	052116
5	3025278	---	054536



## Burners, flame spreaders and accessories



### BURNER ASSEMBLY FOR COOKING TOPS ELECTROLUX/ZANUSSI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025028	∅ 200	026643
2	3025027	∅ 200	0HB190
3	3025176	∅ 80	055108
4	3025560	∅ 71 x 45 x 1	0KI340

### BURNER ASSEMBLY FOR COOKING TOPS EMMEPI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025109	∅ 70	808272
2	3025108	∅ 70	806098
3	3025110	---	806177
4	3025103	external ∅ 17	807731
5	3025112	∅ 100	806123
6	3025111	∅ 100	806099
3	3025113	---	806178
4	3025107	external ∅ 20	807729
5	3025183	∅ 125	806124
6	3025182	∅ 125	806100
3	3025184	---	806179
4	3025185	external ∅ 24	---



## BURNER ASSEMBLY FOR COOKING TOPS EMMEPI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025398	∅ 60	C10198
2	3025397	∅ 130	C10197
3	3025328	∅ 130	C10048
4	3025321	∅ 90	C10045
5	3025338	---	C10046

## BURNER ASSEMBLY FOR COOKING TOPS EMMEPI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025331	∅ 70	C10284
2	3025332	∅ 70	C89438
3	3025334	∅ 100	C10285

## BURNER ASSEMBLY FOR COOKING TOPS EMMEPI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025341	∅ 70	C00456
2	3025342	∅ 70	C99636
3	3025343	---	C00814
1	3025344	∅ 100	C00457
2	3025345	∅ 100	C99637
4	3025346	---	C00815
5	3025347	∅ 120	C00458
4	3025349	---	C00816



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS EURAST



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025563	∅ 120	14070530
2	3025564	∅ 120	14071064
3	3025568	∅ 150	14070520
4	3025565	---	14031193Z

## BURNER ASSEMBLY FOR COOKING TOPS FAGOR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025451	∅ 100	U445731000
2	3025452	∅ 100	U445730000
3	3025209	---	U125720000
4	3025454	∅ 120	U565701000
5	3025229	---	U565700000
6	3025461	---	U265702000

## BURNER ASSEMBLY FOR COOKING TOPS FAGOR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025455	∅ 130	U235701500
2	3025456	∅ 130	U025703000
3	3025208	---	U235702000
4	3025462	---	U025706000



## BURNER ASSEMBLY FOR COOKING TOPS FAGOR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025459	∅ 120	12091667
2	3025458	∅ 120	U195702000
3	3025460	---	U615700500

## BURNER ASSEMBLY FOR COOKING TOPS FB FABA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025363	∅ 120	PR3G029
2	3025575	∅ 120	PR3G030
3	3025406	∅ 120	PR3G031
4	3025362	∅ 120	PR3G030/PR3G031
5	3025364	---	PR3G032

## BURNER ASSEMBLY FOR COOKING TOPS FIMAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025363	∅ 120	CO2264
2	3025575	∅ 120	CO2265
3	3025406	∅ 120	CO2266
4	3025362	∅ 120	CO2265/CO2266
5	3025364	---	CO2267



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS FOEMM



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025094	∅ 70	305000012630
2	3025096	∅ 100	305000012530

## BURNER ASSEMBLY FOR COOKING TOPS GICO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025077	∅ 60	290200450
2	3025078	∅ 55	270204230
3	3025076	∅ 60 ( old series)	790300789
3	3025395	∅ 60	764305190
4	3025381	∅ 60	770339300
5	3025062	---	760311640
5	3025072	---	770324790
6	3025069	---	241202412

## BURNER ASSEMBLY FOR COOKING TOPS GICO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025080	∅ 85	290200480
2	3025081	∅ 80	270204240
3	3025079	∅ 85	790300799
4	3025382	∅ 85	770336750
5	3025072	---	770324790
6	3025069	---	241202412





## BURNER ASSEMBLY FOR COOKING TOPS GICO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025066	∅ 60	770319550
2	3025395	∅ 60	764305190
3	3025062	---	760311640
1	3025071	∅ 100	770319560
4	3025079	∅ 85	790300799
3	3025072	---	770324790
5	3025069	---	241202412
6	3025068	---	741312350

## BURNER ASSEMBLY FOR COOKING TOPS GICO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025370	∅ 90	270203550
2	3025410	∅ 90	A00420
1	3025340	∅ 110	270203540
3	3025383	∅ 110	A00419
4	3025384	∅ 110	A00418
5	3025072	---	770324790
6	3025069	---	241202412

## BURNER ASSEMBLY FOR COOKING TOPS GICO



Photo	LF Code	Dimensions (mm)	Suitable for
1	5086034	∅ 110	290204930
2	5086033	∅ 110	A00504
3	5086032	---	790341600
4	3025069	---	241202412
5	3025068	---	741312350
6	5010810	∅ 180	A00176



# Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
---	5010811	---	A00024

## BURNER ASSEMBLY FOR COOKING TOPS GIGA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025169	∅ 75	X21600
2	3025911	∅ 75	0900X21000
3	3025170	---	0900X21300
4	3025297	∅ 75	721-030-00
5	3025312	---	B83900

## BURNER ASSEMBLY FOR COOKING TOPS GIGA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025172	∅ 95	X21700
2	3025912	∅ 95	0900X21100
3	3025173	---	0900X21400
4	3025298	∅ 95	721-028-00
5	3025312	---	B83900

## BURNER ASSEMBLY FOR COOKING TOPS GIGA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025300	∅ 120	X21800
2	3025299	∅ 120	721-026-00
3	3025301	---	721-025-00
4	3020093	---	0000X16100
5	3025314	---	---
6	3025315	---	---



## BURNER ASSEMBLY FOR COOKING TOPS GIGA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025443	∅ 90	V00300
2	3025444	∅ 90	V00100
3	3025445	---	V01800
4	3025446	∅ 120	V00400
5	3025447	∅ 120	V00200
6	3025448	---	V01900

## BURNER ASSEMBLY FOR COOKING TOPS GIGA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025176	∅ 80	M00300
2	3025179	∅ 90	M01100
3	3025189	---	0000X16100

## BURNER ASSEMBLY FOR COOKING TOPS JEMI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025543	∅ 125	990405
1	3025547	∅ 155	590406
2	3025544	∅ 125	70414
3	3025545	external ∅ 19	999035
4	5089963	∅ 150	998247



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS KÜPPERSBUSCH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025466	∅ 68	161348
2	3025467	∅ 68	161523
4	3786010	---	60944
1	3025468	∅ 82	152808
3	3025472	∅ 82	152900-782373005
4	3786011	---	60950
5	3025469	---	161560
6	3786009	---	60436
---	3067198	OR 04162 EPDM	060308
---	3786743	88 x 74	060610

## BURNER ASSEMBLY FOR COOKING TOPS KÜPPERSBUSCH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025470	∅ 102	152800
2	3025471	∅ 102	152901-782374005
3	3025474	∅ 130	152801
4	3025473	∅ 130	152902
5	3025831	∅ 100	146006-731587-731587511
---	3067198	OR 04162	060308
6	3786743	88 x 74	060610



## BURNER ASSEMBLY FOR COOKING TOPS LOTUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025426	∅ 100	532003400
2	3025428	---	532002900
3	3025429	∅ 130	532003600
4	3025433	---	532003000
5	3025432	∅ 48	532003200

## BURNER ASSEMBLY FOR COOKING TOPS LOTUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025417	∅ 60	532003700
2	3025418	∅ 60	531035200
3	3025419	---	531034900
1	3025423	∅ 80	532003800
2	3025424	∅ 80	531035300
3	3025425	---	531035000
1	3025420	∅ 100	532003900
2	3025421	∅ 100	531035400
3	3025422	---	531035100

## BURNER ASSEMBLY FOR COOKING TOPS LOTUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025804	∅ 80	532006400/532006600
2	3025413	---	532001300
3	3025805	∅ 100	532006500/532006700
4	3025416	---	532001400



## Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
5	3352006	---	533053000

### BURNER ASSEMBLY FOR COOKING TOPS LOTUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025176	∅ 80	532001100
2	3025179	∅ 90	532000900

### BURNER ASSEMBLY FOR COOKING TOPS MACFRIN



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025562	---	3109
2	3025563	∅ 120	---
3	3025564	∅ 120	---
4	3025568	∅ 150	---

### BURNER ASSEMBLY FOR COOKING TOPS MARENO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025351	∅ 85	CR0937560
2	3025350	∅ 85	CR0795730
3	3025352	---	MA1032101200
4	3025353	47 x 53	MA1036607800
5	3025355	∅ 95	CR0937570
5	3025359	∅ 95	MA1032501522
6	3025358	∅ 95	MA1032101600
3	3025356	---	MA1032101300
4	3025357	55 x 62	MA1036607900



## BURNER ASSEMBLY FOR COOKING TOPS MARENO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025031	∅ 80	MA1315612
2	3025029	∅ 80	MA1315422
3	3025030	---	MA1315212
1	3025034	∅ 110	MA1315712
2	3025032	∅ 110	MA1315522
3	3025033	---	MA1315300
4	3025305	---	MA1892500
5	3025037	∅ 120	MA1316012
6	3025035	∅ 120	MA1315922
4	3025305	---	MA1892500

## BURNER ASSEMBLY FOR COOKING TOPS MARENO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025386	∅ 80	MACM027600
2	3025387	∅ 80	MACM006001
3	3025388	---	MACM042900
1	3025389	∅ 110	MACM027100
2	3025390	∅ 110	MACM005901
3	3025391	---	MACM043000
4	3025392	∅ 125	MACM027200
5	3025393	∅ 120	MACM006502
6	3025394	---	MACM043100



## Burners, flame spreaders and accessories



### BURNER ASSEMBLY FOR COOKING TOPS MARENO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025042	∅ 175	MA1316400
2	3025308	∅ 175	MACM005004
3	3025189	---	---

### BURNER ASSEMBLY FOR COOKING TOPS MARENO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025176	∅ 80	1032000700
2	3025179	∅ 90	MA1032009600

### BURNER ASSEMBLY FOR COOKING TOPS MBM



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025109	∅ 70	GRCU800001
2	3025108	∅ 70	GRCU700018
3	3025110	---	RTC700006
4	3025103	external ∅ 17	PACU700029
5	3025112	∅ 100	GRCU700002
6	3025111	∅ 100	GRCU700022
3	3025113	---	RTC700007
4	3025107	external ∅ 20	RTC700160
5	3025183	∅ 125	GRCU700003
6	3025182	∅ 125	GRCU700023
3	3025184	---	RTC700008
4	3025185	external ∅ 24	RTC700199





## BURNER ASSEMBLY FOR COOKING TOPS MBM



Photo	LF Code	Dimensions (mm)	Suitable for
2	D025254	∅ 60/130	RTCU600040+RTCU600041
3	3025328	∅ 130	RTCU600042
1	3025330	∅ 100	RTCU600044
4	3025321	∅ 90	RTCU600043
5	3025338	---	RTCU600017

## BURNER ASSEMBLY FOR COOKING TOPS MBM



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025401	∅ 75	RTCU700375
2	3025337	∅ 75	RTCU700748
3	3025402	∅ 75	RTCU700380
4	3025310	---	173323
5	3025316	---	173324
4	3025320	---	164555
6	3186740	---	RTCU700399

## BURNER ASSEMBLY FOR COOKING TOPS MBM



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025403	∅ 115	RTCU700376
2	3025329	∅ 115	RTCU700749
3	3025404	∅ 115	RTCU700382
4	3025319	---	173321
5	3025309	---	173322
4	3025311	---	164556
5	3025317	---	164557
6	3186698	---	RTCU700400



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS MBM



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025323	∅ 50	160295
2	3025322	∅ 140	160294
3	3025325	∅ 140	163254
4	3025324	∅ 140	160296
5	3025318	---	164558
6	3186699	---	160329

## BURNER ASSEMBLY FOR COOKING TOPS MKN



Photo	LF Code	Dimensions (mm)	Suitable for
1	5022685	∅ 78	201618
2	3025813	∅ 78	201855
2	5061350	∅ 78	201102
3	3025814	---	211020
3	3186265	---	211018
4	3025815	---	201842
5	3025816	---	204457
6	3025817	---	201845

## BURNER ASSEMBLY FOR COOKING TOPS MKN



Photo	LF Code	Dimensions (mm)	Suitable for
1	5019547	∅ 94	201619
2	3025820	---	211021
2	3186265	---	211018
3	3025815	---	201842
4	3025816	---	204457
5	3025817	---	201845
6	3025821	---	201864



## BURNER ASSEMBLY FOR COOKING TOPS MKN



Photo	LF Code	Dimensions (mm)	Suitable for
1	5008767	∅ 87	201661
2	5026562	∅ 87	201104
3	3025814	---	211020
3	3186265	---	211018
4	3025815	---	201842
5	3025817	---	201845
6	3025821	---	201864

## BURNER ASSEMBLY FOR COOKING TOPS MKN



Photo	LF Code	Dimensions (mm)	Suitable for
1	5051870	∅ 114	201769
2	3025822	∅ 114	201768
3	3025814	---	211020
4	3025815	---	201842
5	3025823	---	201766
6	3025825	---	201767

## BURNER ASSEMBLY FOR COOKING TOPS MODULAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025529	∅ 84	672.078.00
2	3025530	∅ 84	672.076.00
3	3025533	---	672.010.00
4	3025534	---	673.020.00
5	3025535	---	672.016.00



## Burners, flame spreaders and accessories



### BURNER ASSEMBLY FOR COOKING TOPS MODULAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025531	∅ 110	672.079.00
2	3025532	∅ 110	672.077.00
1	3025540	∅ 110	672.093.00
2	3025536	∅ 110	672.101.00
3	3025533	---	672.010.00
4	3025534	---	673.020.00
5	3025535	---	672.016.00

### BURNER ASSEMBLY FOR COOKING TOPS MORICE



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025704	∅ 54.5	BR0101-1
2	3025617	∅ 54.5	BR0103
1	3025705	∅ 88	BR0095
2	3025618	∅ 88	BR0097
3	3025706	∅ 110.5	BR0107
4	3025619	∅ 110.5	BR0109
5	3025721	∅ 145	BR0079
6	3025672	∅ 145	DM1249



## BURNER ASSEMBLY FOR COOKING TOPS MORICE



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025751	∅ 80 - 120	---
1	3025696	∅ 80 - 175	---
2	3025585	∅ 80	---
3	3025584	∅ 73	---
4	3025761	∅ 80 - 175	---
5	3025603	∅ 80	---
3	3025584	∅ 73	---

## BURNER ASSEMBLY FOR COOKING TOPS OFFCAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025435	∅ 90	828125
2	3025436	∅ 90	827345
3	3020292	---	4550501
1	3025438	∅ 115	828131
4	3025439	∅ 115	827351
5	3020293	---	4550505
6	3025437	---	827661

## BURNER ASSEMBLY FOR COOKING TOPS OFFCAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	5055685	∅ 105	827151
2	3025440	∅ 135	828137/1
3	3025441	∅ 135	827357/1
4	3020291	---	4550511



## Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
5	3025442	---	827665

### BURNER ASSEMBLY FOR COOKING TOPS OLIS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025292	∅ 75	BN2510601
2	3025196	---	2510140

### BURNER ASSEMBLY FOR COOKING TOPS OLIS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025137	∅ 85	BN2510189
1	3025140	∅ 115	BN2510192

### BURNER ASSEMBLY FOR COOKING TOPS OLIS



Photo	LF Code	Dimensions (mm)	Suitable for
2	3025282	---	BN2510350
1	3025284	∅ 105	BN2510355
2	3025288	---	BN2510340
3	3025289	---	BN2519002
4	3025290	---	BN6A014708



## BURNER ASSEMBLY FOR COOKING TOPS OLIS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025176	∅ 80	6A042100
2	3025179	∅ 90	6A042000

## BURNER ASSEMBLY FOR COOKING TOPS OM GAS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025505	∅ 110	04/99900089

## BURNER ASSEMBLY FOR COOKING TOPS REPAGAS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025483	∅ 95	50140086_RC
2	3025484	∅ 95	50140085
3	3025486	∅ 120	50141088
4	3025487	∅ 120	50141087_RC
3	3025488	∅ 140	50142090
4	3025489	∅ 140	50142089
3	3025491	∅ 165	56730057
5	3025492	∅ 165	56730056
8	3025485	---	06700018_RC



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS REPAGAS



1



2



3

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025500	∅ 95	2100029
2	3025522	---	121077
3	5062184	---	100154

## BURNER ASSEMBLY FOR COOKING TOPS REPAGAS



1



2



3

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025525	∅ 140	100109
2	3025522	---	121077
3	3025485	---	06700018_RC

## BURNER ASSEMBLY FOR COOKING TOPS REPAGAS



1



2



3

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025494	∅ 95	50131062
2	3025497	∅ 140	50133066
3	3025485	---	06700018_RC





## BURNER ASSEMBLY FOR COOKING TOPS ROSINOX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025169	∅ 75	RX94800182
2	3025168	∅ 75	RX94800125
3	3025170	---	RX94806841
1	3025172	∅ 95	RX94800174
2	3025171	∅ 95	RX94800166
3	3025173	---	RX94806437
4	3025312	---	RX94806049

## BURNER ASSEMBLY FOR COOKING TOPS ROSINOX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025811	∅ 100	RX94044421
2	3025807	---	RX94044423
3	3025809	∅ 120	RX94044420
1	3025810	∅ 120	RX94044422
4	3025808	---	RX94044469
5	3025713	∅ 200	RX94008463
6	3025679	---	RX94007267

## BURNER ASSEMBLY FOR COOKING TOPS ROSINOX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025176	∅ 80	RX94805553
2	3025179	∅ 90	RX94805595



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS SILKO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025169	∅ 75	SIR0100252
2	3025168	∅ 75	SIR0100298
3	5017734	∅ 75	SI0100225
5	3025170	---	SIR0100301
1	3025172	∅ 95	SIR0100251
2	3025171	∅ 95	SIR0100299
4	5035019	∅ 95	SI0100223
5	3025173	---	SIR0100302
---	3020093	---	0100767+...
6	3025312	---	LB839-00

## BURNER ASSEMBLY FOR COOKING TOPS SILKO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025300	∅ 120	SIR0100253
2	3025306	∅ 120	SIR0100300
3	5017735	∅ 120	SI0100224
4	3025307	---	SIR0100303
---	3020093	---	0100767+...
5	3025314	---	SIR9300544
6	3025315	---	SIR9300545

## BURNER ASSEMBLY FOR COOKING TOPS SILKO



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025200	∅ 90	SIR0100232
2	3025203	---	SIR0100256
3	3025205	---	SIR0100257
4	3025176	∅ 80	100250
5	3025179	∅ 90	100247
6	3025189	---	0100767+...

## BURNER ASSEMBLY FOR COOKING TOPS SOFINOR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025593	∅ 80	---
2	3025755	120	---
2	3025697	175	---
3	3025596	∅ 80	---
4	3025595	∅ 83	---
5	3025797	110	---
5	3025756	165	---
5	3025799	240	---
6	3025624	∅ 80	---
4	3025595	∅ 83	---
5	3025768	245	---



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS SOFINOR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025613	∅ 120	---
2	3025765	225	---
2	3025775	285	---
3	3025707	265	---
3	3025713	325	---

## BURNER ASSEMBLY FOR COOKING TOPS SOLYMAC

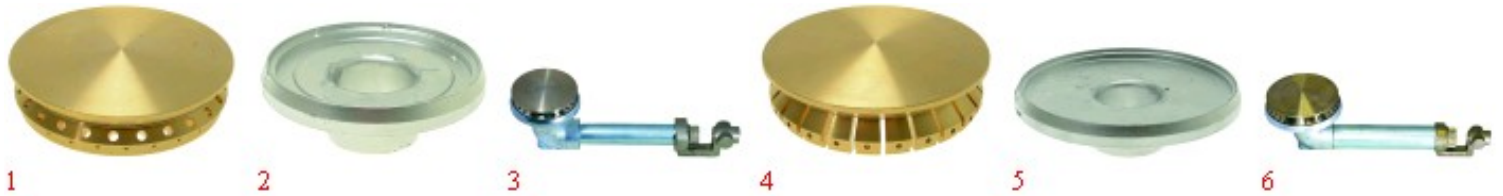 


Photo	LF Code	Dimensions (mm)	Suitable for
1	3025596	∅ 80	---
2	3025595	∅ 83	---
3	3025797	110	---
3	3025756	165	---
3	3025799	240	---
4	3025624	∅ 80	P1A
2	3025595	∅ 83	---
3	3025768	245	---
4	3025627	∅ 100	P2A
5	3025598	∅ 106	---
6	3025769	185	---
6	3025770	245	---



## BURNER ASSEMBLY FOR COOKING TOPS SOLYMAC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025624	∅ 80	P1A
3	3025629	∅ 119	---
1	3025627	∅ 100	P2A
2	3025633	∅ 135	---
3	3025634	∅ 143	---
4	3025693	∅ 135	P1171D
4	3025695	∅ 170	P1172D
5	3025613	∅ 120	P5A
6	3025707	∅ 200 - 265	P760
6	3025711	∅ 250 - 430	---

## BURNER ASSEMBLY FOR COOKING TOPS TECNOINOX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025361	∅ 90	RC00373000
2	3025574	∅ 90	---
3	3025399	∅ 90	---
4	3025360	∅ 90	RC00372000
1	3025363	∅ 120	RC00375000
2	3025575	∅ 120	RC01832000
3	3025406	∅ 120	RC02186000
5	3025362	∅ 120	RC00374000
6	3025364	---	RC00377000



## Burners, flame spreaders and accessories



### BURNER ASSEMBLY FOR COOKING TOPS TECNOINOX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025837	∅ 73	RC01151000
2	3025838	∅ 73	RC01148000
3	3025865	∅ 73	01138+01141
4	3025840	∅ 104	RC01150000
5	3025841	∅ 104	RC01147000
5	3025867	∅ 104	---
6	3025856	∅ 104	01139+01142

### BURNER ASSEMBLY FOR COOKING TOPS THIRODE



1

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025802	∅ 130	322390

### BURNER ASSEMBLY FOR COOKING TOPS THIRODE



1

2

3

4

5

Photo	LF Code	Dimensions (mm)	Suitable for
1	3025596	∅ 80	303001
2	3025595	∅ 83	---
3	3025797	110	---
3	3025756	165	---
4	3025635	∅ 76	311038
4	3025656	∅ 100	311039
5	3025658	∅ 110	141952



## BURNER ASSEMBLY FOR COOKING TOPS VARIOUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025868	∅ 128	---
2	3025869	∅ 128	---
3	3025859	∅ 128	---
4	3025872	∅ 128	---
5	3025879	---	---
6	3025861	---	---

## BURNER ASSEMBLY FOR COOKING TOPS VARIOUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025875	∅ 117	---
2	3025876	∅ 128	---
3	3025866	∅ 104	---
4	3025841	∅ 104	---
5	3025871	---	---
6	3025870	---	---

## BURNER ASSEMBLY FOR COOKING TOPS WHIRLPOOL



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025443	∅ 90	483286009268
2	3025444	∅ 90	483286009269
3	3025445	---	483286009279
4	3025446	∅ 120	483286000191
5	3025447	∅ 120	483286000186
6	3025448	---	483286009551



# Burners, flame spreaders and accessories



## BURNER ASSEMBLY FOR COOKING TOPS WHIRLPOOL



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025002	∅ 83	771985003501
2	3025235	∅ 84	771985000095
3	3025001	---	771985003498
1	3025004	∅ 102	771985003502
2	3025238	∅ 103	771985000096
3	3025003	---	771985003499
4	3025055	---	771985002468
5	3025803	---	771985000047

## BURNER ASSEMBLY FOR COOKING TOPS WHIRLPOOL



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025006	∅ 122	771985003503
2	3025241	∅ 123	771985000097
3	3025243	---	771985000094
4	3025005	---	771985003500
5	3025055	---	771985002468
6	3025244	---	771985000049

## BURNER ASSEMBLY FOR COOKING TOPS WHIRLPOOL



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025232	∅ 70	771985000084
2	3025008	∅ 70	771985003369
3	3025231	---	771985002833
4	3186026	---	771985002835





Photo	LF Code	Dimensions (mm)	Suitable for
5	3025056	---	771985002668
6	3025245	---	771985003527

## BURNER ASSEMBLY FOR COOKING TOPS WHIRLPOOL



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025012	∅ 100	771985000085
2	3025011	∅ 100	771985003370
3	3025233	---	771985002834
4	3186027	---	771985002836
5	3025056	---	771985002668
6	3025245	---	771985003527

## BURNER ASSEMBLY FOR COOKING TOPS WHIRLPOOL



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025026	∅ 180	771985002537
2	3025024	∅ 180	771985002536
3	4059374	∅ 180	159374
4	3025025	---	771985002534
5	3025234	---	771985002550

## BURNER ASSEMBLY FOR COOKING TOPS WHIRLPOOL



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025295	∅ 120	771985012836
2	3025302	∅ 120	771985012837
3	3025055	---	771985002468
4	3025278	---	771985002971



## Burners, flame spreaders and accessories



### BURNER ASSEMBLY FOR COOKING TOPS WHIRLPOOL

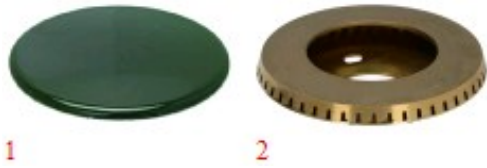 


Photo	LF Code	Dimensions (mm)	Suitable for
1	3025176	∅ 80	483286000448
2	3025179	∅ 90	483286000428

### PILOT BURNER ASSEMBLY FOR COOKING HOBS ASCOBLOC



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025551	∅ 84	9146383
2	3025552	∅ 84	9146387
3	3025553	∅ 84	10/1349
---	3025560	∅ 71 x 45 x 1	9146393
4	3025556	∅ 94	---
5	3025557	∅ 94	9146388
6	3025558	∅ 94	10/1350

### PILOT BURNER ASSEMBLY FOR COOKING HOBS BERTO'S



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025881	∅ 91	31283300
2	3025882	∅ 91	31283200
2	3025891	∅ 94	---
3	3025890	---	32328000
3	3025894	---	---
4	3025885	∅ 91	---



## PILOT BURNER ASSEMBLY FOR COOKING HOBS BERTO'S



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025886	∅ 120	31283600
2	3025883	∅ 120	31283500
2	3025892	∅ 122	---
3	3025890	---	32328000
4	3025887	∅ 120	31284200
5	3025888	∅ 120	31284100
5	3025893	∅ 120	---
6	3025889	---	22994300

## PILOT BURNER ASSEMBLY FOR COOKING HOBS CASTA



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025864	∅ 73	---
2	3025863	∅ 73	---
3	3025865	∅ 73	---
1	3025854	∅ 104	---
2	3025855	∅ 104	---
3	3025856	∅ 104	---
4	3025857	∅ 128	---
5	3025858	∅ 128	---
6	3025859	∅ 128	---



## Burners, flame spreaders and accessories



### PILOT BURNER ASSEMBLY FOR COOKING HOBS CHARVET



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025695	∅ 170	A08494A
2	3025694	∅ 147	A08022A
3	3025671	∅ 120	3658A

### PILOT BURNER ASSEMBLY FOR COOKING HOBS EGD



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025763	120	136
2	3025708	320	141
3	3025710	320	142

### PILOT BURNER ASSEMBLY FOR COOKING HOBS EURAST



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025840	∅ 104	C5815119
2	3025841	∅ 104	C5815109
2	3025867	∅ 104	---
3	3025843	∅ 128	C5815049
4	3025844	∅ 128	C5815039
4	3025873	∅ 128	---



## PILOT BURNER ASSEMBLY FOR COOKING HOBS EURAST



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025556	∅ 94	---
2	3025557	∅ 94	---
3	3025558	∅ 94-114	---
4	3025850	---	---
5	3025571	∅ 114	---
2	3025572	∅ 114	---
6	3025851	---	---

## PILOT BURNER ASSEMBLY FOR COOKING HOBS FAGOR



Photo	LF Code	Dimensions (mm)	Suitable for
1	5047898	∅ 120	12009326-U025702000
2	3025229	---	12008429-U565700000
3	3025461	---	12008071-U265702000

## PILOT BURNER ASSEMBLY FOR COOKING HOBS FALCON



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025900	∅ 114	537060080
2	3025903	∅ 105	535290006
3	3025898	∅ 105	535290000
4	3025899	∅ 105	535290001
5	3025902	---	535290003



## Burners, flame spreaders and accessories



### PILOT BURNER ASSEMBLY FOR COOKING HOBS FALCON



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025895	∅ 118	535480006
2	3025896	∅ 118	535400060
3	3025901	118	537101096
4	3025897	118	535400070

### PILOT BURNER ASSEMBLY FOR COOKING HOBS GIORIK



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025914	∅ 65	7090212
2	5083514	∅ 65	7090216
3	3025918	---	7090214
4	3025920	---	2016144
1	5083516	∅ 95	7090213
2	3025913	∅ 95	7090217
3	3025917	---	7090215

### PILOT BURNER ASSEMBLY FOR COOKING HOBS GIORIK



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025881	∅ 91	7090231
2	3025882	∅ 91	7090233
2	3025891	∅ 94	---
3	3025885	∅ 91	7090232
4	3025890	---	---
4	3025894	---	---



## PILOT BURNER ASSEMBLY FOR COOKING HOBS GIORIK



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025886	∅ 120	7090227
2	3025883	∅ 120	7090229
2	3025892	∅ 122	---
3	3025890	---	---
4	3025884	∅ 120	7090228

## PILOT BURNER ASSEMBLY FOR COOKING HOBS HORIS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025776	240	1226542
2	3025664	∅ 140	1226367
3	3025663	∅ 134	1226366
4	3025680	∅ 34	1257082
5	3025708	320	1257115
6	3025678	---	1257080

## PILOT BURNER ASSEMBLY FOR COOKING HOBS HORIS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025763	120	1257101
2	3025609	∅ 120	1283665
3	3025608	∅ 115	1283664
4	3025679	∅ 27	1257081-1302759
5	3025693	∅ 135	1226490
6	3025692	---	1226489
---	3025741	---	1232685



# Burners, flame spreaders and accessories



## PILOT BURNER ASSEMBLY FOR COOKING HOBS HORIS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025777	300	1259724
2	3025664	∅ 140	1226367
3	3025663	∅ 134	1226366
4	3025680	∅ 34	1257082
5	3025712	390	1257117
6	3025678	---	1257080

## PILOT BURNER ASSEMBLY FOR COOKING HOBS JEMI



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025828	∅ 120	998217
2	3025830	∅ 120	998219
3	3025829	∅ 120	998209
4	3025827	∅ 150	998216
5	5063985	∅ 150	998218
3	5063984	∅ 150	998208
6	3025545	---	990909-999035

## PILOT BURNER ASSEMBLY FOR COOKING HOBS KÜPPERSBUSCH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025551	∅ 84	152753-152762
2	3025552	∅ 84	152907
3	3025553	∅ 84	152754-152755
4	3025554	---	---
5	3025849	---	---





Photo	LF Code	Dimensions (mm)	Suitable for
6	3025560	∅ 71 x 45 x 1	060329

## PILOT BURNER ASSEMBLY FOR COOKING HOBS KÜPPERSBUSCH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025571	∅ 114	---
2	3025572	∅ 114	---
3	3025558	114	125761-152761
4	3025851	---	---
5	3025849	---	---
6	3025560	∅ 71 x 45 x 1	060329

## PILOT BURNER ASSEMBLY FOR COOKING HOBS KÜPPERSBUSCH



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025556	∅ 94	152760-152812
2	3025557	∅ 94	152763
3	3025558	∅ 94	125761-152761
4	3025850	---	---
5	3025849	---	---
6	3025560	∅ 71 x 45 x 1	060329

## PILOT BURNER ASSEMBLY FOR COOKING HOBS LINCAR INOX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025837	∅ 73	38020220
2	3025838	∅ 73	38020210
3	3025839	73	32020000
4	3025865	∅ 73	32310010
1	3025840	∅ 104	38020221



## Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
2	3025841	∅ 104	38020211
2	3025867	∅ 104	---
3	3025842	104	32020001
4	3025856	∅ 104	32310020
5	3025844	∅ 128	38020212
6	3025858	∅ 128	32310060
3	3025845	128	M32020002

### PILOT BURNER ASSEMBLY FOR COOKING HOBS LINCAR INOX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025864	∅ 73	32310070
2	3025863	∅ 73	32310040
3	3025865	∅ 73	32310010
4	3025854	∅ 104	32310080
5	3025855	∅ 104	32310050
6	3025856	∅ 104	32310020

### PILOT BURNER ASSEMBLY FOR COOKING HOBS LOTUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025881	∅ 91	532007700
2	3025882	∅ 91	532007900
2	3025891	∅ 94	---
3	3025890	---	532008100
4	3025885	∅ 91	533137700
1	3025886	∅ 120	532007800
2	3025883	∅ 120	532008000
5	3025884	∅ 120	533137800



## PILOT BURNER ASSEMBLY FOR COOKING HOBS LOTUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025864	∅ 73	532004500
2	3025863	∅ 73	532004200
3	3025885	---	533137700
1	3025854	∅ 104	532004600
2	3025855	∅ 104	532004300
4	3025856	∅ 104	533101100

## PILOT BURNER ASSEMBLY FOR COOKING HOBS LOTUS



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025857	∅ 128	532004700
2	3025858	∅ 128	532004400
1	3025877	∅ 128	522004700
2	3025878	∅ 128	532004400
2	3025876	∅ 128	---
3	3025874	∅ 128	533101200

## PILOT BURNER ASSEMBLY FOR COOKING HOBS MARENO



Photo	LF Code	Dimensions (mm)	Suitable for
1	5038823	∅ 65	CR0580010
2	5038822	∅ 65	CR0580030
3	5038824	65	CR0586441
4	5055500	65-100	CR0581700
5	5059106	77 x 69 x 2	---
1	5038533	∅ 100	CR0580020



## Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
6	5049247	∅ 100	CR0580040
3	5053306	100	CR0586451

### PILOT BURNER ASSEMBLY FOR COOKING HOBS MODULAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	5054043	∅ 110	972.024.00
2	7150484	∅ 110	972.019.00
3	3025847	110	982.018.00
4	3025848	110	982.020.00
1	5054044	∅ 130	972.024.00
2	5049416	∅ 130	972.020.00

### PILOT BURNER ASSEMBLY FOR COOKING HOBS MODULAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025537	∅ 61	672.044.00
2	3025538	∅ 56	672.098.00
3	3025539	∅ 61	672.050.00
4	3025533	61	672.010.00
5	3025534	61	673.020.00
6	3025535	---	672.016.00

### PILOT BURNER ASSEMBLY FOR COOKING HOBS MODULAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025256	∅ 85	972.022.00
2	7150485	∅ 85	972.018.00
3	3025846	85	982.017.00
4	3025848	85	982.020.00

## PILOT BURNER ASSEMBLY FOR COOKING HOBS MODULAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025881	∅ 91	682.007.00
2	3025882	∅ 91	672.162.00
3	3025890	---	672.157.00
4	3025885	∅ 91	672.163.00
1	3025886	∅ 120	682.006.00
2	3025883	∅ 120	672.155.00
5	3025884	∅ 120	672.156.00

## PILOT BURNER ASSEMBLY FOR COOKING HOBS OZTIRYAKILER



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025910	∅ 66	5SB2.57300.40
2	3025906	∅ 130	5SB2.57300.35
3	3025907	∅ 132	5SB2.68301.66
4	3025908	∅ 62	626700002048
5	3025905	∅ 85	6267.00001.17
4	3025909	∅ 100	626700002046
6	3025904	∅ 240	6267.00001.03

## PILOT BURNER ASSEMBLY FOR COOKING HOBS PALUX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025551	∅ 84	370312
2	3025552	∅ 84	370320-838365
3	3025553	∅ 84	869864
4	2111289	∅ 1/8" F - M12x1	380148



## Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
4	3025849	ø 1/8"F - M14x1	---
5	3025554	---	---
6	3025560	ø 71 x 45 x 1	371076

### PILOT BURNER ASSEMBLY FOR COOKING HOBS PALUX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025556	ø 94	697397
2	3025557	ø 94	370614
3	3025558	ø 94	728748
4	2111289	ø 1/8"F - M12x1	380148
4	3025849	ø 1/8"F - M14x1	---
5	3025850	---	---
6	3025560	ø 71 x 45 x 1	371076

### PILOT BURNER ASSEMBLY FOR COOKING HOBS PALUX



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025571	ø 114	697400
2	3025572	ø 114	728721
3	3025558	ø 114	728748
4	2111289	ø 1/8"F - M12x1	380148
4	3025849	ø 1/8"F - M14x1	---
5	3025851	---	---
6	3025560	ø 71 x 45 x 1	371076



## PILOT BURNER ASSEMBLY FOR COOKING HOBS SILKO



Photo	LF Code	Dimensions (mm)	Suitable for
1	5038823	∅ 65	CR0580010
2	5038822	∅ 65	CR0580030
3	5038824	65	CR0586441
4	5055500	65-100	CR0581700
5	5059106	77 x 69 x 2	SI8204760
1	5038533	∅ 100	CR0580020
6	5049247	∅ 100	CR0580040
3	5053306	100	CR0586451

## PILOT BURNER ASSEMBLY FOR COOKING HOBS STAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025773	175	---
2	3025593	∅ 80	---
3	3025702	225	---
4	3025613	∅ 120	---
5	3025700	240	---

## PILOT BURNER ASSEMBLY FOR COOKING HOBS STAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025718	240	---
2	3025655	∅ 140	---
3	3025663	∅ 134	---
4	3025703	285	---
5	3025613	∅ 120	---



## Burners, flame spreaders and accessories



Photo	LF Code	Dimensions (mm)	Suitable for
6	3025701	300	---

### PILOT BURNER ASSEMBLY FOR COOKING HOBS STAR



Photo	LF Code	Dimensions (mm)	Suitable for
1	3025719	300	---
2	3025720	350	---
3	3025655	∅ 140	---
4	3025663	∅ 134	---



The data herewith contained may change without notice and LF SpA cannot be held responsible for possible errors stated or resulting by the use of this document. All rights reserved. No part of this publication may be reproduced without written permission by LF SpA.



## Distributing Components, Spare Parts & Accessories in original quality worldwide

---

- LF SpA HEADQUARTERS**  
via Voltri, 80 - 47522 Cesena (FC) ITALY  
Tel. +39 0547 34 11 11 - Fax +39 0547 34 11 10  
[www.lfricambi724.it](http://www.lfricambi724.it) - [info@lfricambi.it](mailto:info@lfricambi.it)  
Export Dept. Tel. +39 0547 34 11 50 - Fax +39 0547 34 11 55  
[www.lfspareparts724.com](http://www.lfspareparts724.com) - [export@lfspareparts.com](mailto:export@lfspareparts.com)
- LF SpA HOUSEHOLD COMPONENTS DIVISION**  
Via Padriciano, 99 - AREA Science Park - 34149 Trieste (TS) ITALY  
Tel. +39 0547 34 12 42 - Fax +39 0547 34 12 48  
[www.lfspareparts724.com](http://www.lfspareparts724.com) - [info@lfspareparts.com](mailto:info@lfspareparts.com)
- EPGC Sas FRANCE**  
13, Rue des Forts - 59960 Neuville en Ferrain  
Tel. +33 (0)3 20 25 06 21 - Fax +33 (0)3 20 25 34 12  
[www.epgc.com](http://www.epgc.com) - [epgc@epgc.com](mailto:epgc@epgc.com)
- LF GmbH GERMANY**  
Junkersstrasse, 3 - D-82178 Puchheim - München  
Tel. +49 89 89 45 78 66 - Fax +49 89 89 45 78 88  
[www.lfersatzteile724.de](http://www.lfersatzteile724.de) - [info@lfersatzteile.de](mailto:info@lfersatzteile.de)
- LF China REPUBLIC OF CHINA**  
Room 403, No.2, Huadu Mansion, Lane 422, Huanghua Rd.  
Minhang Dist. - 201103 Shanghai  
Tel. +86 (0)21 33 53 66 31 - Fax +86 (0)21 33 53 66 32  
[www.lfspareparts724.com](http://www.lfspareparts724.com) - [china@lfspareparts.com](mailto:china@lfspareparts.com)
- OOO LF RUSSIAN FEDERATION**  
Ul. Anatoliya Zhivova, 8 - office 1 - 123100 Moscow  
Tel./Fax +7 495 725 26 53  
[www.lfspareparts724.ru](http://www.lfspareparts724.ru) - [info@lfspareparts.ru](mailto:info@lfspareparts.ru)
- LF Repuestos Horeca S.L.U. SPAIN**  
Poligono Industrial Carpetania - C/Miguel Faraday, 8 - 28906 Getafe  
Tel. +34 91 477 91 00 - Fax +34 91 477 90 81  
[www.lfrepuestos-horeca724.es](http://www.lfrepuestos-horeca724.es) - [info@lfrepuestos.es](mailto:info@lfrepuestos.es)
- LF Scandinavia Aps - LF Spareparts S.p.A. DENMARK**  
Nupark, 51 - 7500 Holstebro  
Tel. +45 70 70 77 33  
[www.lfspareparts724.dk](http://www.lfspareparts724.dk) - [denmark@lfspareparts.dk](mailto:denmark@lfspareparts.dk)
- LF SpA Cesena (IT) Swiss Branch Steinhausen SWITZERLAND**  
Sennweidstrasse, 45 - CH-6312 Steinhausen  
Tel. +41 (0)41 760 15 80/1 - Fax +41 (0)41 760 15 85  
[www.lfersatzteile724.ch](http://www.lfersatzteile724.ch) - [info@lfersatzteile.ch](mailto:info@lfersatzteile.ch)
- LF Spare Parts Ltd. UNITED KINGDOM**  
A10a Lakeside Business Park, Broadway Lane  
South Cerney, Gloucestershire GL7 5XL  
Tel. +44 (0)1285 86 16 25 - Fax +44 (0)1285 86 39 49  
[www.lfspareparts724.co.uk](http://www.lfspareparts724.co.uk) - [info@lfspareparts.co.uk](mailto:info@lfspareparts.co.uk)
- LF Central Est Europe S.r.o. CZECH REPUBLIC**  
Antala Staska 1859/34  
14000 Praha 4 - KRC  
Tel. +420 730 156 910  
[www.lfspareparts724.cz](http://www.lfspareparts724.cz) - [info@lfspareparts.cz](mailto:info@lfspareparts.cz)
- LF SPARE PARTS INC. USA**  
Legal address:  
155 Office Plaza Dr - Suite A - Tallahassee, FL 32301  
Business/Mailing address:  
1100 South Tower, 225 Peachtree St., N.E. - Atlanta, GA 30303, USA  
Tel. +1-404-525-2600 - Fax +1-404-586-3528  
[www.lfspareparts724.us](http://www.lfspareparts724.us) - [info@lfspareparts.us](mailto:info@lfspareparts.us)  
Tel. West Coast and Midwest: 206-349-1525 Sauro  
Tel. East Coast and the Caribbean: 786-817-1764 Luis
- AUSTRALIA AND NEW ZEALAND**  
[www.lfspareparts724.com](http://www.lfspareparts724.com)  
[andrea.calvio@lfspareparts.com](mailto:andrea.calvio@lfspareparts.com)
- AUSTRIA**  
[www.lfersatzteile724.at](http://www.lfersatzteile724.at)  
[info@lfersatzteile.at](mailto:info@lfersatzteile.at)
- BALKAN COUNTRIES**  
[www.lfspareparts724.com](http://www.lfspareparts724.com)  
[matija.ramov@lfspareparts.com](mailto:matija.ramov@lfspareparts.com)
- BALTIC COUNTRIES**  
[www.lfspareparts724.com](http://www.lfspareparts724.com)  
[inara.silina@lfspareparts.com](mailto:inara.silina@lfspareparts.com)
- LATIN AMERICA AND THE CARRIBEANS**  
[www.lfrepuestos-horeca724.es](http://www.lfrepuestos-horeca724.es)  
[export@lfrepuestos.es](mailto:export@lfrepuestos.es)
- POLAND**  
[www.lfspareparts724.pl](http://www.lfspareparts724.pl)  
[info@lfspareparts.pl](mailto:info@lfspareparts.pl)
- SOUTH KOREA**  
[www.lfspareparts724.com](http://www.lfspareparts724.com)  
[fabio.doni@lfspareparts.com](mailto:fabio.doni@lfspareparts.com)
- TURKEY**  
[www.lfyedekparca724.com](http://www.lfyedekparca724.com)  
[export@lfspareparts.com](mailto:export@lfspareparts.com)